

COMFORT
ZONE®

Model #CZHVP18EX



High Velocity Pedestal Fan

Features:

- Wide Area Oscillation
- ON/OFF Switch with 3 Speed Settings
- High Performance 18” Blade
- Adjustable Height
- Large Stable Base
- Long 5.6” Grounded Cordset
- 120V A.C. / 60Hz.



INTENDED USE:

This product is intended for indoor residential and office use only, not for industrial or other commercial applications. Use only with electrical wiring that is in good working order and that meets applicable codes and ordinances. If you have any questions whether your wiring is adequate, consult a qualified electrician.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

While using your fan, you should follow the IMPORTANT INSTRUCTIONS listed below. As part of those instructions, we have used the word **WARNING** to indicate the level of hazard: **WARNING** indicates a hazard which, if not avoided, could result in injury or death.

IMPORTANT INSTRUCTIONS

As with all electrical appliances, basic safety precautions should always be followed to reduce the risk of electric shock, fire, or injury to persons, including the following precautions:

- Read all the instructions before using this fan.
- Use this fan only as described in this manual. Any other use not recommended by the manufacturer may cause electrical shock, fire or injury to persons.
- Do not operate the fan with a damaged power cord or after the fan malfunctions or has been dropped in any manner.
- Use of extreme caution is necessary when any fan is used by or near children, disabled persons or pets and whenever the fan is left operating unattended.
- Do not place the fan on a small, unlevel, uneven or any surface which might allow fan to tip or fall.
- For proper operation, fan should be placed on a smooth, non-combustible surface.
- Always unplug fan when not in use.
- Do not operate the fan with blade guards or any safety device removed.
- Avoid the use of extension cords due to risk of fire. If an extension cord must be used, the cord must be minimum 14 AWG and rated not less than 1875 watts.
- Do not run power cord under carpeting. Do not cover cord with throw rugs, runners or the like. Arrange cord away from traffic area where it will not be tripped over.
- Do not insert or allow any object to enter any openings on the fan. Doing so may cause electric shock and/or fire hazard.

Please Save These Instructions

WARNING: SHOCK HAZARD

Use your fan only in dry environments. This fan is not intended for use in a bathroom, laundry area, or similar locations, near sinks, washing machines, swimming pools

or other sources of water. Never locate fan where it may fall into a bathtub or other water receptacle. Do not use in damp environments such as flooded basements.

WARNING: HOT SURFACES

Do not touch fan motor when in use. This motor is hot when in use, to avoid burns, do not let bare skin touch hot surfaces.

WARNING: FIRE HAZARD

Fans have arcing or sparking parts inside. Do not use near combustible materials or flammable gases or sources of heat. DO NOT USE in areas where gasoline, paint or flammable materials are used or stored. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock, fire, or damage the fan.

WARNING: ELECTRICAL SHOCK HAZARD

Do not use with damaged cord or plug. Use with adequate electrical system that is up to code.

CAUTION-TO PREVENT ELECTRIC SHOCK, this appliance has a three prong grounded plug that must be inserted into a matching properly grounded outlet to reduce the risk of electrical shock. Do not defeat this safety feature.

DO NOT operate any fan with a damaged cord or plug or after fan malfunctions, has been dropped or damaged in any manner. Do not operate fan with a broken blade, safety cage or any visual imperfections. For repairs covered under warranty, see warranty statement. For all other repairs contact Comfort Zone's Customer Service by telephone or mail for information and assistance.

DO NOT run power cord under carpeting. DO NOT cover cord with throw rugs, runners or the like. Arrange cord away from traffic area where it will not be tripped over. Avoid the use of extension cords due to risk of fire. If an extension cord must be used, the cord must be minimum 14 AWG and rated not less than 1875 watts. Do not use an extension cord unless the plug can be completely inserted into its receptacle. Unplug the fan when not in use. Do not operate fan with its ventilation obstructed.

Black border shows
page size and should
not print

Black border shows
page size and should
not print

USAGE:

FAN OPERATION: Always operate the fan in the upright position following all instructions and recommendations listed in this manual **FAN LOCATION:** Place the fan in the area of the room that will provide proper fan cooling. **FAN CONNECTION:** Plug fan directly into 120 volt A.C., 60 Hz wall outlet. Be sure plug fits tightly in outlet. A loose connection may cause overheating and damage to the plug or fan. **NOTE:** To prevent overloading a circuit, do not plug the fan into a circuit that is servicing other electrical needs.

TURNING FAN ON/OFF: Place fan on stable level surface. Plug fan into proper grounded outlet. To start the fan, rotate Control Dial from "0" (off) to desired fan speed (1, 2 or 3). Rotate top Control Dial again to "0" (off) position to discontinue use. Unplug fan when not in use.

OSCILLATION: To start fan oscillation, press Oscillation Control Knob (located above motor housing) down. To stop oscillation function pull Oscillation Control Knob up while the fan is in any oscillation position.

 
FAN ASSEMBLY: Simple assembly is required to use this fan.

Step #1



Assemble Extension Pole onto Base by inserting 4ea. 2-1/2" bolts through openings.

Step #2

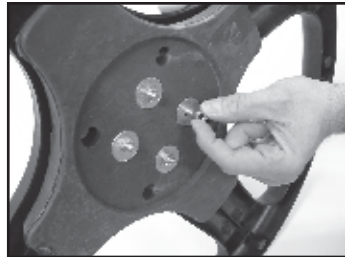

Using washers and nuts supplied, tighten Extension Pole to Base as shown.

Step #3



 
Place decorative Chrome Flange over Extension Pole to cover the base screws.

Step #4




Thread Extension Pole Nut onto threads of Extension Pole.

Step #5

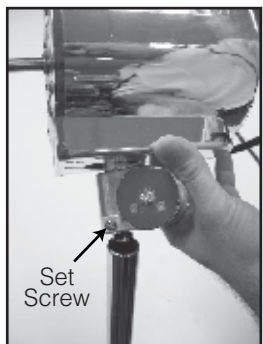


Take Fan Motor Housing and insert it into Extension Pole and tighten set screw securely.

 Step #7

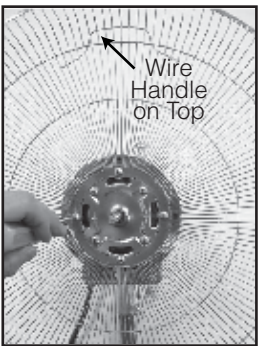


Assemble Rear Grill onto Motor Housing using screws removed in Step #6. Tighten the 4 screws securely.

 Step #6

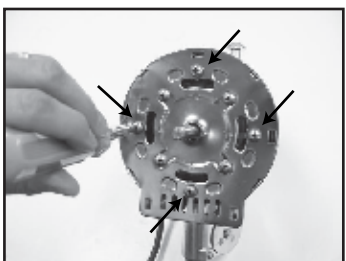


Remove four mounting screws from Motor Housing where indicated to use for Rear Grill in Step #7

 Step #8

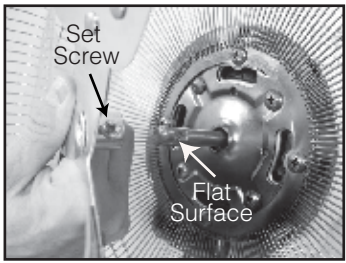

Place Fan Blade onto Motor Shaft. Notice the flat surface on Motor Shaft. Tighten set screw securely onto flat surface on Motor Shaft.

 Step #9

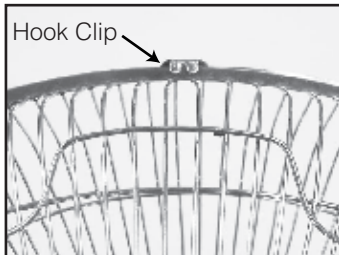

Attach Front Grill to Rear Grill with Hook Clip centered on the top above Wire Handle

Step #10



Press remaining Grill Clips onto Rear Grill to securely attach Front Grill. Do not operate fan without Grille in place.

CARE AND MAINTENANCE

CLEANING: CAUTION-Before cleaning the fan be sure to disconnect power cord from the plug. Clean the grill surface with a clean damp cloth. Do not use harsh chemical or abrasive cleaners. DO NOT IMMERSE THE FAN OR ANY WIRES IN WATER. Replace front grill before fan use. Allow fan to dry completely before use. Periodic grill cleaning with a vacuum will prevent dust build up. The motor is sealed and does not require any interior maintenance, cleaning or lubrication.

MAINTENANCE: The internal motor bearings are permanently lubricated at the factory and do not require any additional lubrication.

REPAIR: DO NOT OPERATE THE FAN WITHOUT THE GRILL IN PLACE. DO NOT USE THE FAN IF IT HAS MALFUNCTIONED OR BECOME DAMAGED IN ANY WAY.

STORAGE: Keep original carton for storage of the fan. Coil and tie the power cord to avoid damage during storage.

LIMITED WARRANTY

Products manufactured by Comfort Zone® are warranted to the original consumer to be free of defects in material and workmanship for twelve (12) months from the original date of purchase. The warranty does not cover products modified outside our factory, damage or failure caused by acts of God, abuse, misuse, abnormal usage, faulty installation, failure to follow suggested maintenance procedures enclosed with this product (as defined by Magnuson-Moss Warranty-Federal Trade Commission Improvement Act) This unit is guaranteed to the original retail purchaser against defects in quality or workmanship for a period of one year from the date of original purchase. If this unit fails because of a manufacturing defect within 30 days of purchase, return the unit, with your receipt, to the retailer. After 30 days, but within the warranty period, if the unit was purchased within the continental United States, return it, freight prepaid, to Comfort Zone® for repair or replacement. If the unit was purchased outside the continental United States, return the unit to the place of purchase. This warranty does not cover damage due to accidents, operation on other than 120 volts, 60 hertz, AC, current, or any other abuse. All implied warranties, including the warranties of merchantability and of fitness of purpose, if applicable, are hereby limited in duration to the period of one year from the date of original retail purchase. Some States do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you. Incidental or consequential damages arising from a breach of either express or implied warranties are hereby disclaimed and excluded. Some states do not allow the exclusion of limitation of incidental or consequential damages, so this limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. No informal dispute settlement mechanisms are available. This limited warranty is given in lieu of all other warranties.

Manufactured by:
Comfort Zone®
324A Half Acre Rd., Cranbury, NJ 08512 USA
800-221-6895 www.comfortzonefans.net

FUSE REPLACEMENT:

1. Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.

2. Open fuse cover by sliding open fuse access cover on top of attachment plug towards blades. See Fig. #2.

3. Remove fuse carefully. Use a small tool to pry the end of the fuse from holder cavity. Be careful not to break glass window.

4. Replace fuse. WARNING: Risk of fire. Replace fuse only with identical 5.0 Amp, 125 Volt fuse (3.6mm x 10mm). Be sure fuse is properly seated within its cavity.

5. Close fuse cover by sliding it back to its original closed position.

Fig. #1



Fig. #2



Fig. #3

