



SKU#1010808932
Model#25PA04179

USE AND CARE GUIDE

5 ft Grave & Bones Animated LED Hearse



Questions, problems, missing parts?

Before returning to the store, call Home Accents Holiday Customer Service

8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-855-434-6543

info@pan-asian.com.hk

THANK YOU

We appreciate the trust and confidence you have placed in The Home Depot through the purchase of this 5 ft Grave & Bones Animated LED Hearse. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing The Home Depot!

Safety Information



WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Responsible party for FCC: Pan Asian Creations Limited.

Address: PO Box 165, New Hartford, NY 13413

For FCC email: info@pan-asian.com.hk

Actual item may vary slightly from photo.



SAFETY INSTRUCTIONS:

1. All cautions in these operating instructions should be followed completely.
2. Do not use near water; such as a bathtub, laundry tub, kitchen sink, wet basement or swimming pool, etc.
3. Do not display the product near any heat source such as radiators, stoves, fireplaces, etc.
4. Display should be serviced by a qualified service person only. Do not attempt to service this unit beyond what is described in the operating instructions.
5. Take extra care when displaying any figure that may contain small parts around small children.
6. Use of this decoration should always be supervised by an adult.



BATTERY USAGE:

ADULT SUPERVISION IS RECOMMENDED WHEN CHANGING BATTERIES.

1. Do not mix old and new batteries.
2. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
3. Alkaline batteries are suggested for longer life.
4. Exhausted batteries are to be removed from the product.
5. Dispose of exhausted batteries with care.
6. Do not dispose of batteries in fire, batteries may explode or leak.

CAUTION: Please remove batteries if their power is consumed or if the product is to be left unused for a long period of time.

WARNING: Please install new battery before use.

RECYCLE YOUR BATTERIES: To help protect our environment, we recommend that all batteries be recycled. You can find a local recycling center by going to: <http://earth911.com/hazardous/single-use-batteries/> Or, in the United States call 1-800-CLEANUP for a recycling location near you.



This is not a toy and is for decorative purposes only. For indoor and outdoor use. This item is not intended for use by children under the age of 14. Do not place product near an open fire or heat source such as a radiator, stove, etc.

Care and storage instructions

For best performance operate your item indoor or outdoor. When not in use, store this product in its original packing. Keep away from heat and moisture.

DISTRIBUTED BY:
HOME DEPOT
2455 PACES FERRY ROAD
ATLANTA, GA 30339

Pre-Installation / Pre-Operation / Pre-Assembly

PLANNING INSTALLATION

Estimated installation time: 30 minutes

Number of people recommended: One


NOTE: For outdoor yard display it is recommended that you start the assembly process by first determining the intended display location, making sure that the surface is flat and/or level for the placement of the base.

PREPARATION: Before beginning assembly the product, make sure that all parts are present. Compare parts with package contents list and diagram below. If any part is missing or damaged, do not attempt to assemble, install or operate the product. Contact customer service for replacement parts.

PACKAGE CONTENTS



Pre-Installation / Pre-Operation / Pre-Assembly

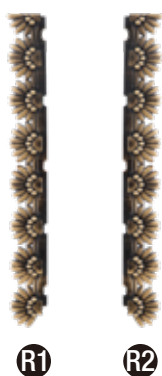



Part	Description	Quantity
A	Floor Support - Left	1
B	Floor Support - Right	1
C	Vertical Stands / Axels	2
D	Floor - Back	1
E	Floor - Front	1
F	Side Wall Panels - Left	2
G	Side Wall Panels - Right	2
H	Front End Wall Panel/Controller	1
I	Back End Wall Panel	1
J	Carriage Lamps	4
K	Front Seat / Foot Rest / Skeleton Driver Lock-in	1
L	Seat Backrest	1
M1	Seat Backrest Side - Left	1
M2	Seat Backrest Side - Right	1

Part	Description	Quantity
N	Plastic Screwdriver	1
O	Base Screws	4
P	Front Roof Panel	1
Q	Back Roof Panel	1
R1	Floral Roof Molding - Left	2
R2	Floral Roof Molding - Right	2
S	Carriage Wheels	4
T	Gargoyle Accents	6
U	Lamp Nut Lock	4
V	Wheel Nut / Hub Cap	4
W	Reclining Skeleton	1
X	Skeleton Driver with Hat and Cape - Try Me button	1
Y	Bridle	1
Z	Ground Stakes	2


Installation

1 Attach Floor Supports into Floor-Back section

- Align and “Click Lock” the Left (A) and Right (B) Floor Supports into the corresponding tubes on Floor-Back (D), as shown.

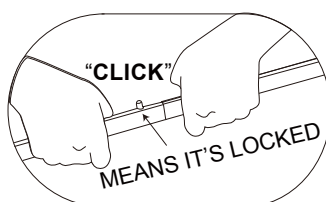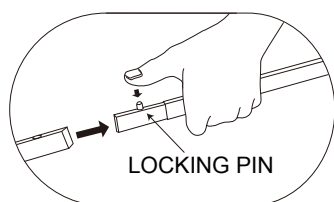


NOTE: Follow this ‘Click Lock’ procedure for support frame assembly.

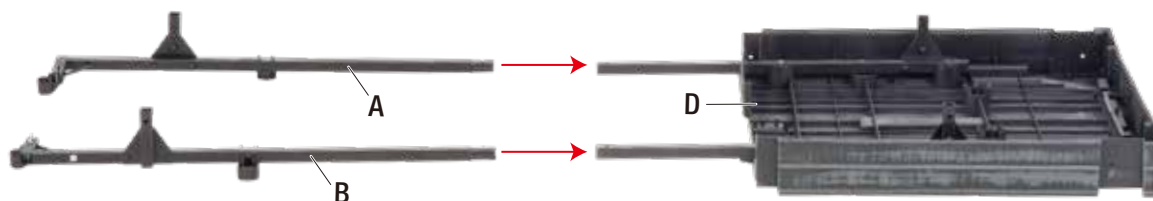


2 Install the Vertical Stands to the Floor Base

- Align and “Click Lock” the Left (A) and Right (B) Floor Supports into the corresponding tubes on Floor-Back (D). NOTE: when the Vertical Stands are secured in place, turn the Floor Base structure 180 degrees to continue with assembly.

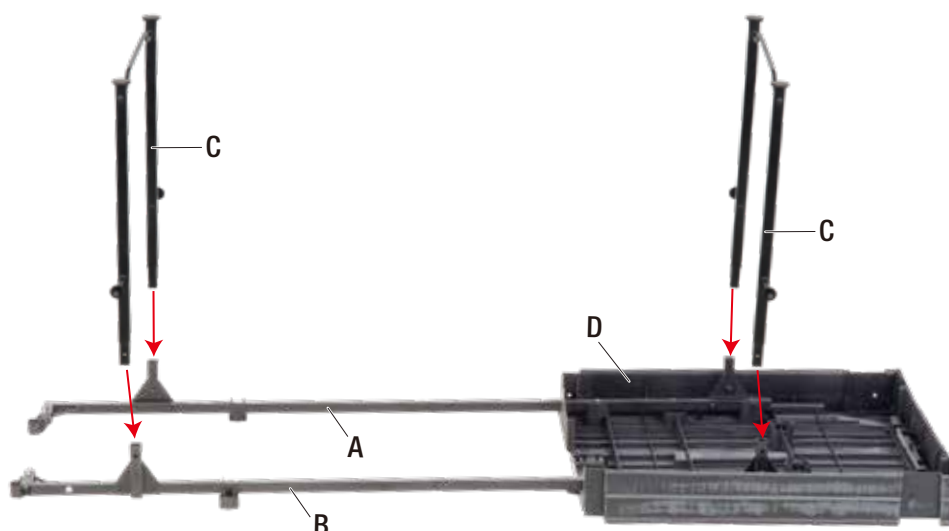


Stands joined to floor structure.
Turn over 180 degrees
when properly connected.

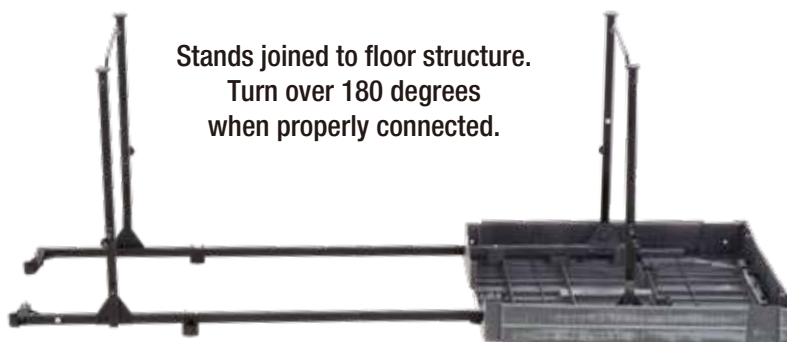

Installation


3 Join the Floor-Front to Floor-Back with Both Stands

- Place the Floor-Front (E) onto the Floor Supports (A) & (B), then slide towards the Floor-Back (D) section until tightly locked in place. Fasten the "Locking Clip" to secure the two halves together. Use the Adjustable Leveling Feet to ensure this section is stable prior to further assembly.

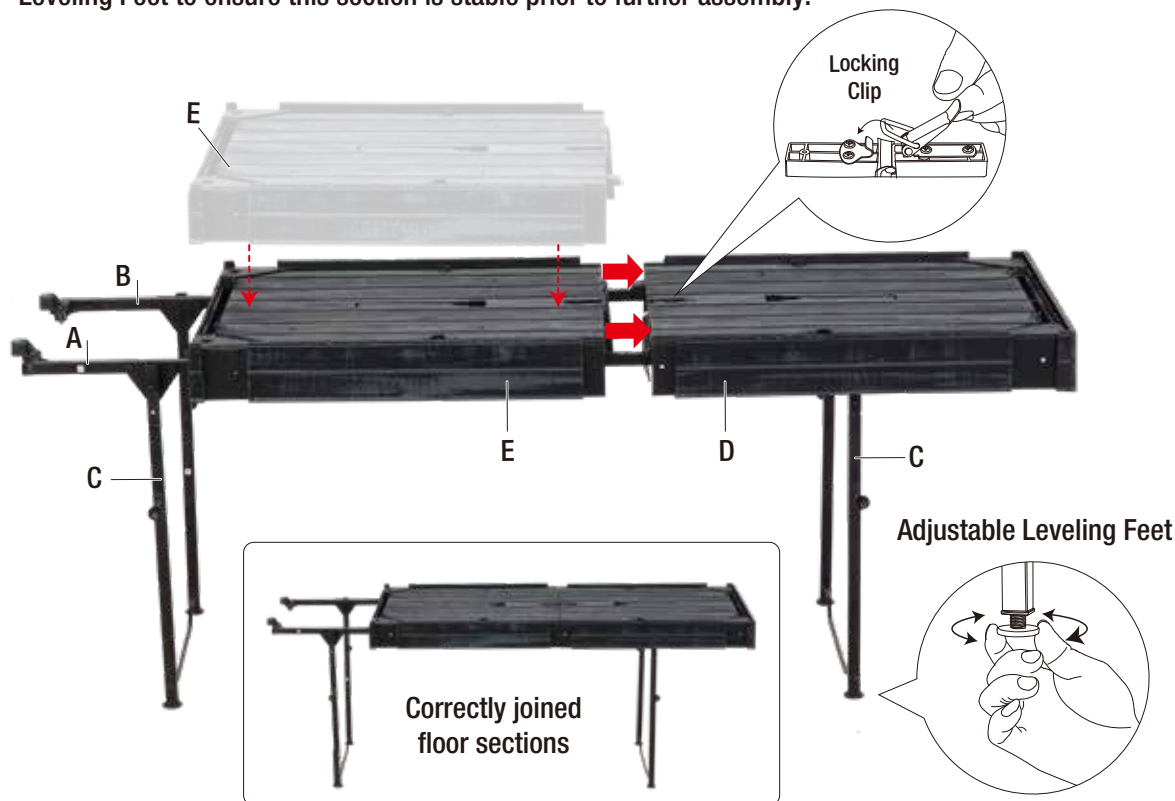

4 Join Left & Right Side Wall Panels 2X

- Line up and connect tabs with slots on top and bottom of both the Left (F) & Right (G) Side Wall Panels. Fasten the top and bottom "Locking Clips" to secure the two halves together. Repeat to form 2 complete Side Wall Panels.

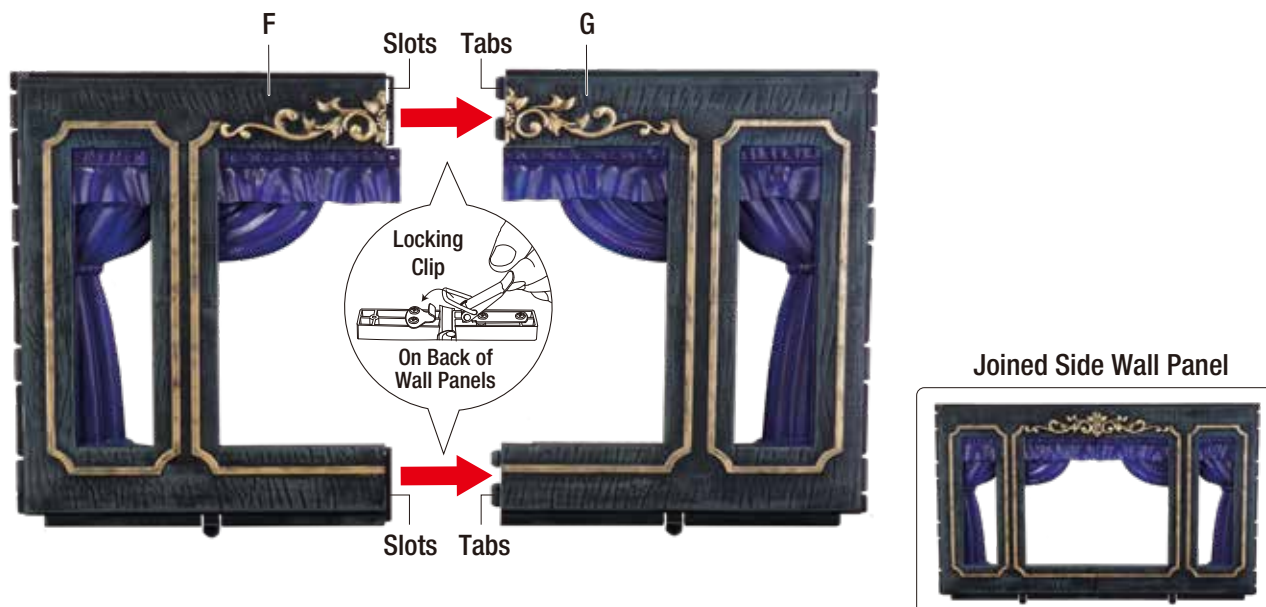

5 Adding Side Wall Panels to Floor Structure 2X

- Line up and connect tabs on bottom of Left (F) & Right (G) Side Wall Panels with the channels and slots on top of the Front (E) & Back (D) Floor sections. Press together until locked securely into place. Repeat on the other side for two installed Side Walls Panels on Floor Base.




Joined Side Wall Panel on Floor Base





6 Install Front End Wall Panel & Back End Wall Panel together with Left & Right Side Wall Panels and Floor Structure

- Line up and connect tabs on bottom of Front End Wall Panel (H) with the channel and slots on top of the Floor Base (E). Join tabs of Left (F) & Right (G) Side Wall Panels together with slots on both sides of Front End Wall Panel (H). Press together until locked securely into place. Repeat process with Back End Wall Panel (I).
- Fasten the 3X "Locking Clip" on each side of the Side Wall Panel to secure the three sections together. (6 Locking Clips per End). Repeat process with Back End Wall Panel (I). See diagram below for clip placement.

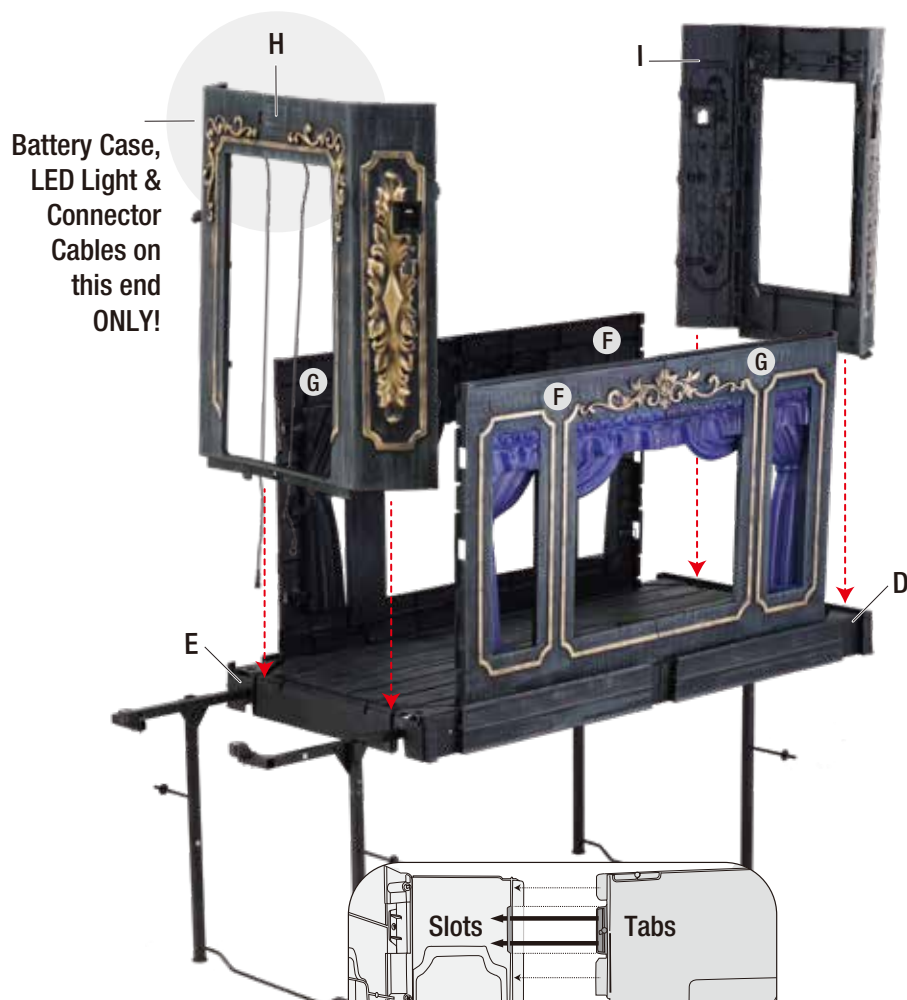


Joined both Side Wall Panels with Front & Back Ends

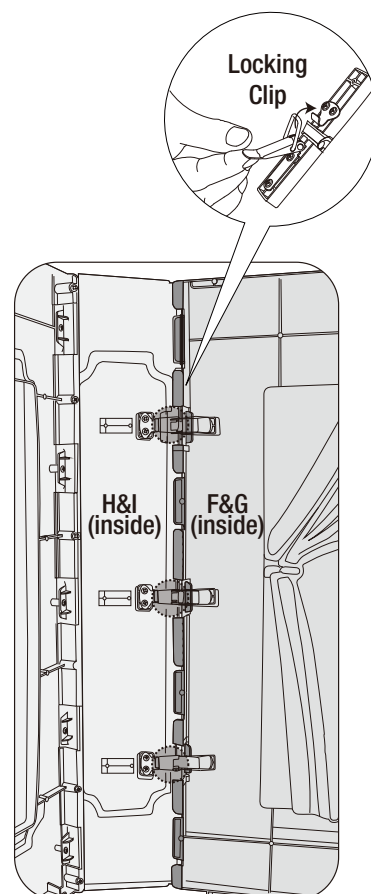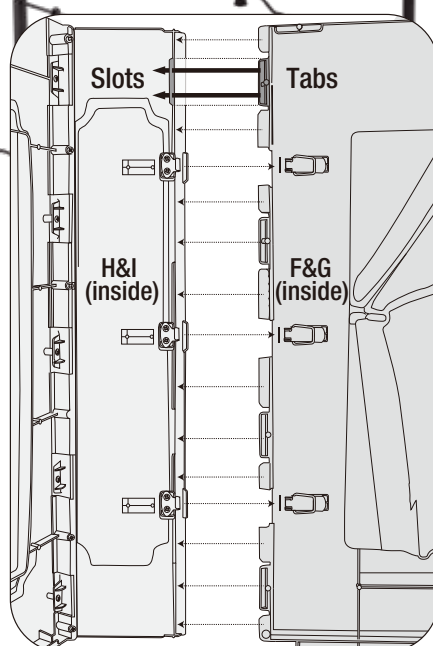


7 Lock both Side Walls and End Walls onto the Floor Base

- Line up and turn each of the eight (8) Locking Taps to secure the joined wall panels onto the inside Floor Base sections.

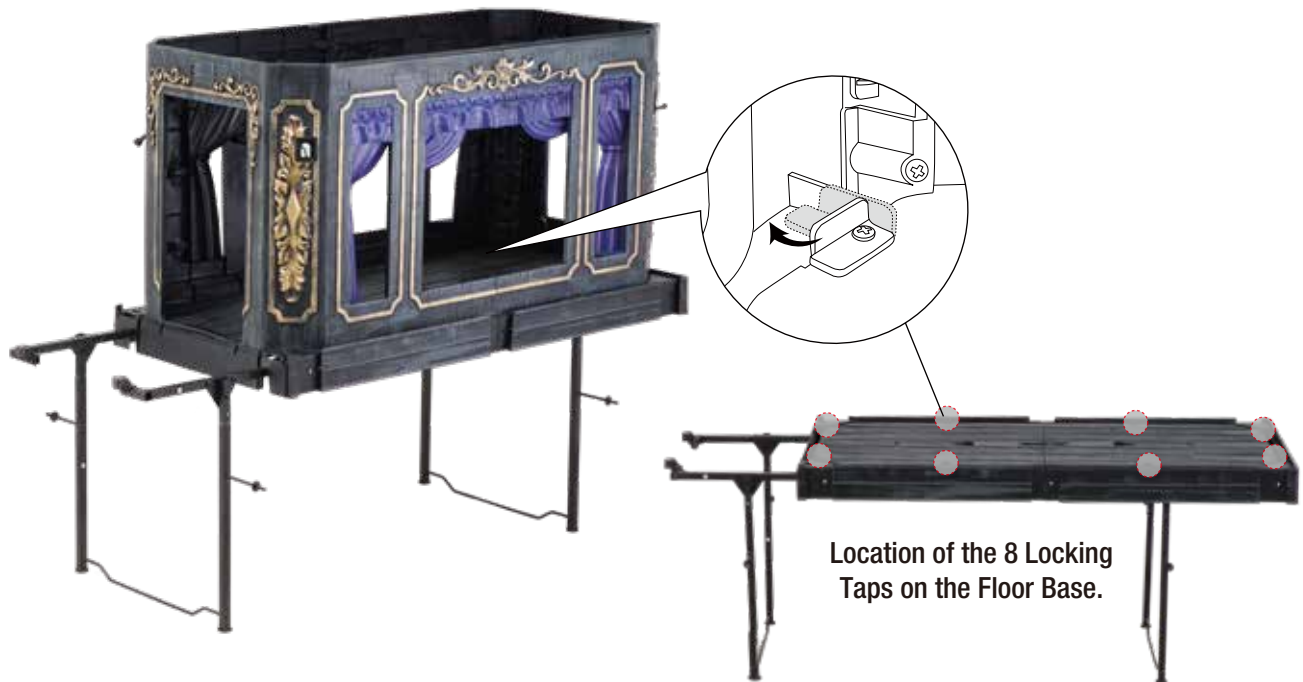


8 Install the Carriage Lamps 4X on the Outside Wall Panels

- Thread the Carriage Lamp (J) lead wire through the opening located on the beveled part of the wall panel. Secure Lamps to the wall by tightening the Lamp Nut Lock (U) onto the threads on lamp base from inside wall of the hearse. Repeat process with the remaining Carriage Lamps.
- Screw each Carriage Lamp lead wire ends into connectors from the Battery Case inside of Front End Wall Panel (H). Hang the 4 Carriage Lamp wires from Battery Case using the wire hooks attached to inside walls.

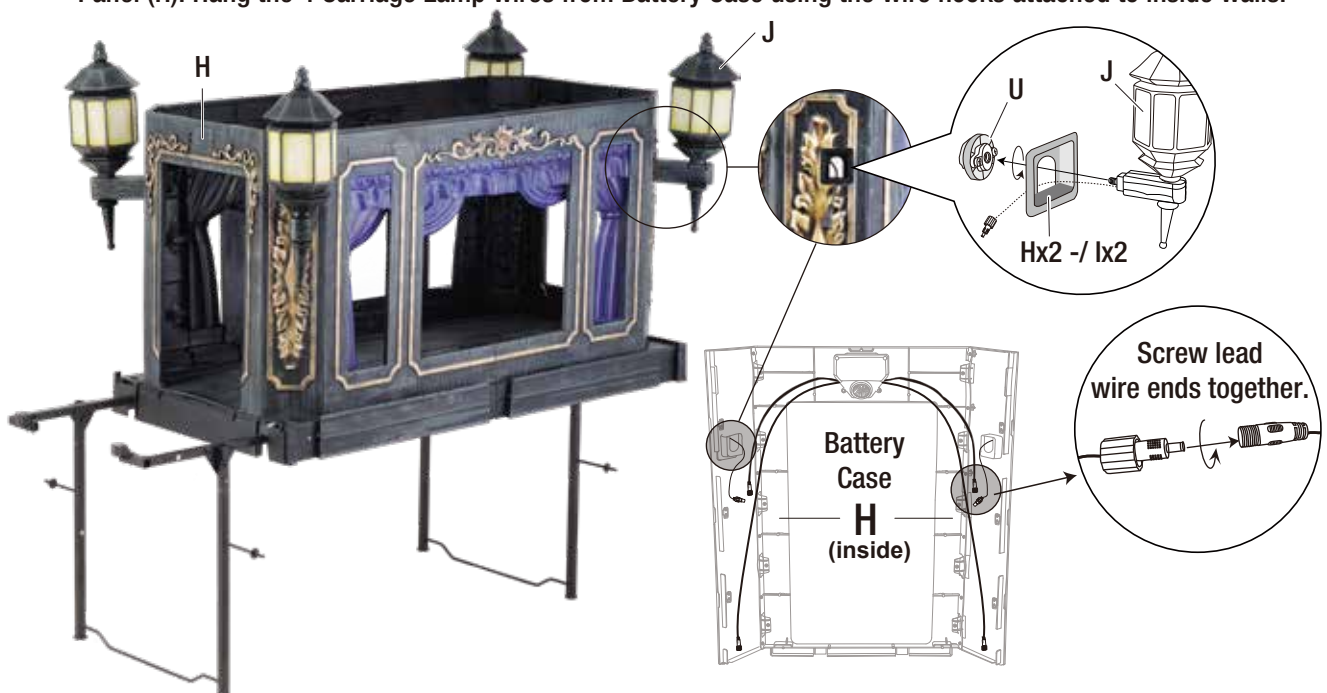

9 Join Front Roof Panel and Back Roof Panel together

- Line up and connect tabs with slots on both Front (P) and Back (Q) Roof Panels. Press together until locked securely into place. Fasten the 3X "Locking Clip" to secure the two halves together.

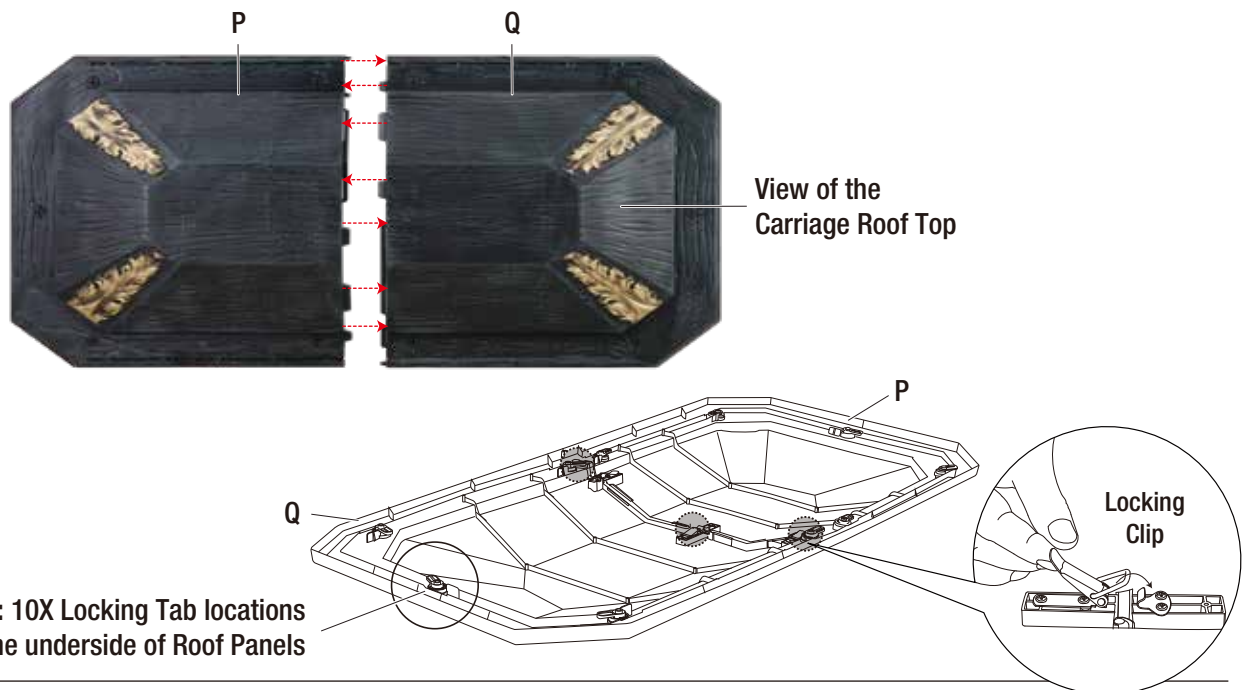

10 Attach Joined Roof Panels onto the Wall Panels

- Position and lower the Roof Panels onto the Wall Panels. Once channeled in place, use the Plastic Screwdriver (N) to turn each of the ten (10) Locking Tabs to the "Locked" position to secure the roof onto the wall panels. See below for placement.



11 Attaching the Floral Roof Molding to Roof Panels

- Slot the bottoms of the Floral Roof Moldings (R1 & R2) into the channel on top of the Roof Panels (P & Q) on both sides of Roof. Press down firmly into place, as shown below.




Floral Roof Molding slotted in place.




12 Installing the Front Seat / Foot Rest to Floor Base

- Place the Front Seat / Foot Rest (K) onto the Floor Supports (A & B) and slide towards the Front End Panel (H) until in contact. Screw the Front Seat to the frame by using the included Plastic Screwdriver (N) to screw in the 4X Base Screws (O) into the designated threaded holes on the metal frame. See below for placement.

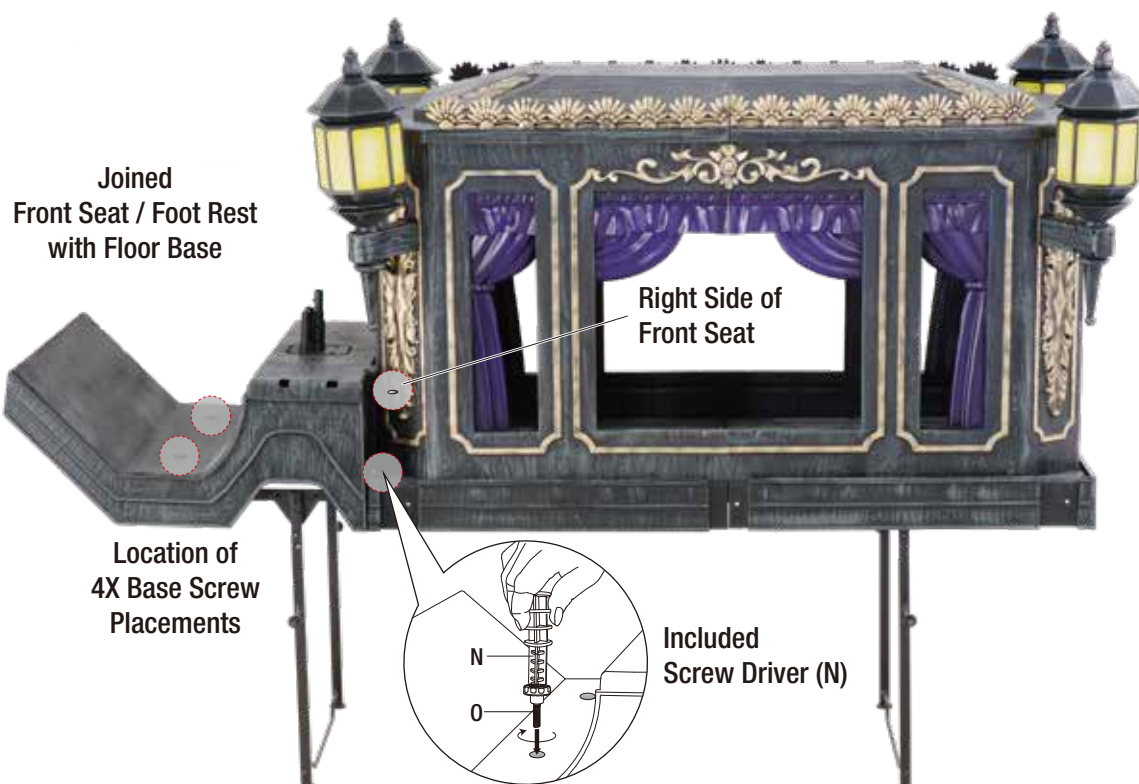


13 Join Seat Sides to Seat Backrest & Attach to Front Seat

- Line up the tabs to slots of the Left (M1) & Right (M2) Seat Backrest Sides with the Seat Backrest (L). Fasten the 4X "Locking Clips" to secure the parts together.
- Line up the tabs on assembled Backrest (L) and Sides (M1 & M2) with slots on the Front Seat (K), press down to lock in place.

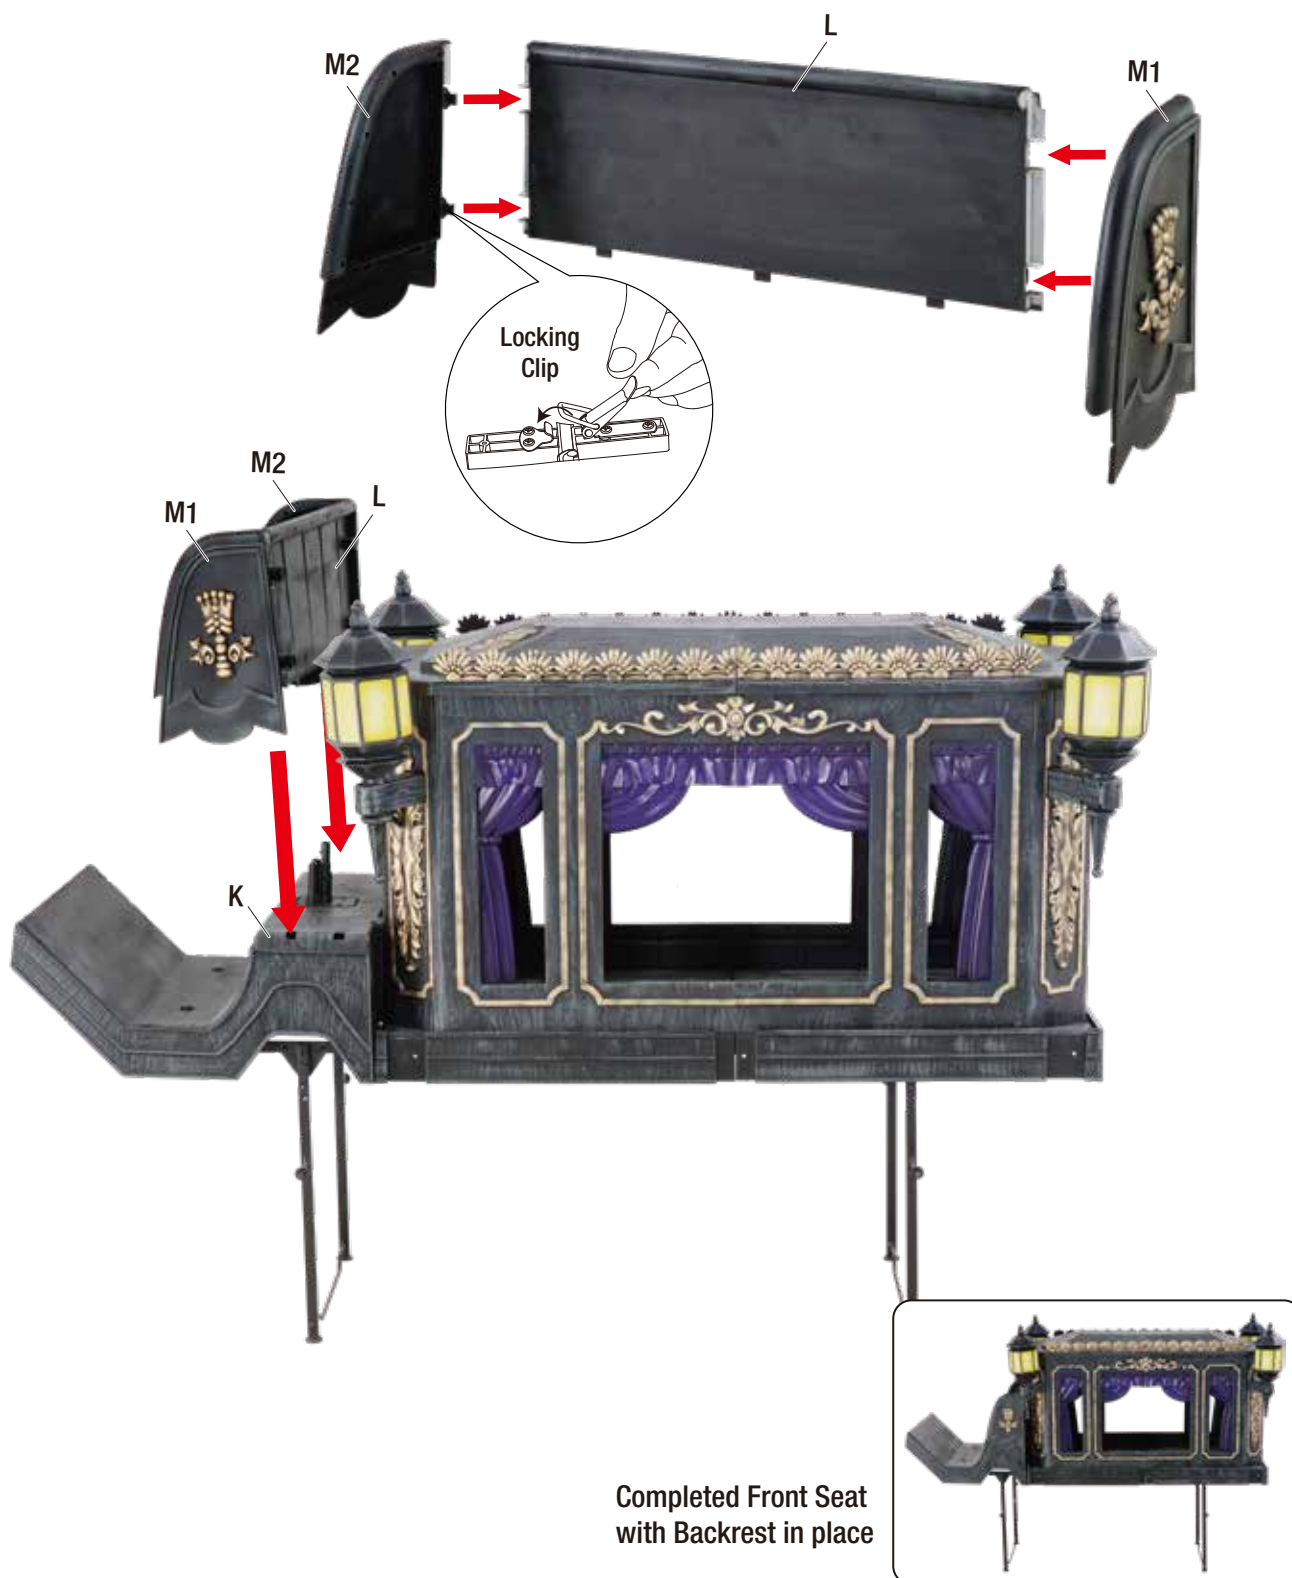

14 Attach 6X Gargoyle Accents (T) - Install 4X Wheels & Hubs

- Align and slide in the six (6) Gargoyle Accents (T) into 3X slots arranged on each side of the Hearse side walls. See below.
- Line up 4X Wheels (S) with axels on Vertical Stands (C) and screw to secure each wheel in place using the Wheel Nut / Hubs Cap (V).

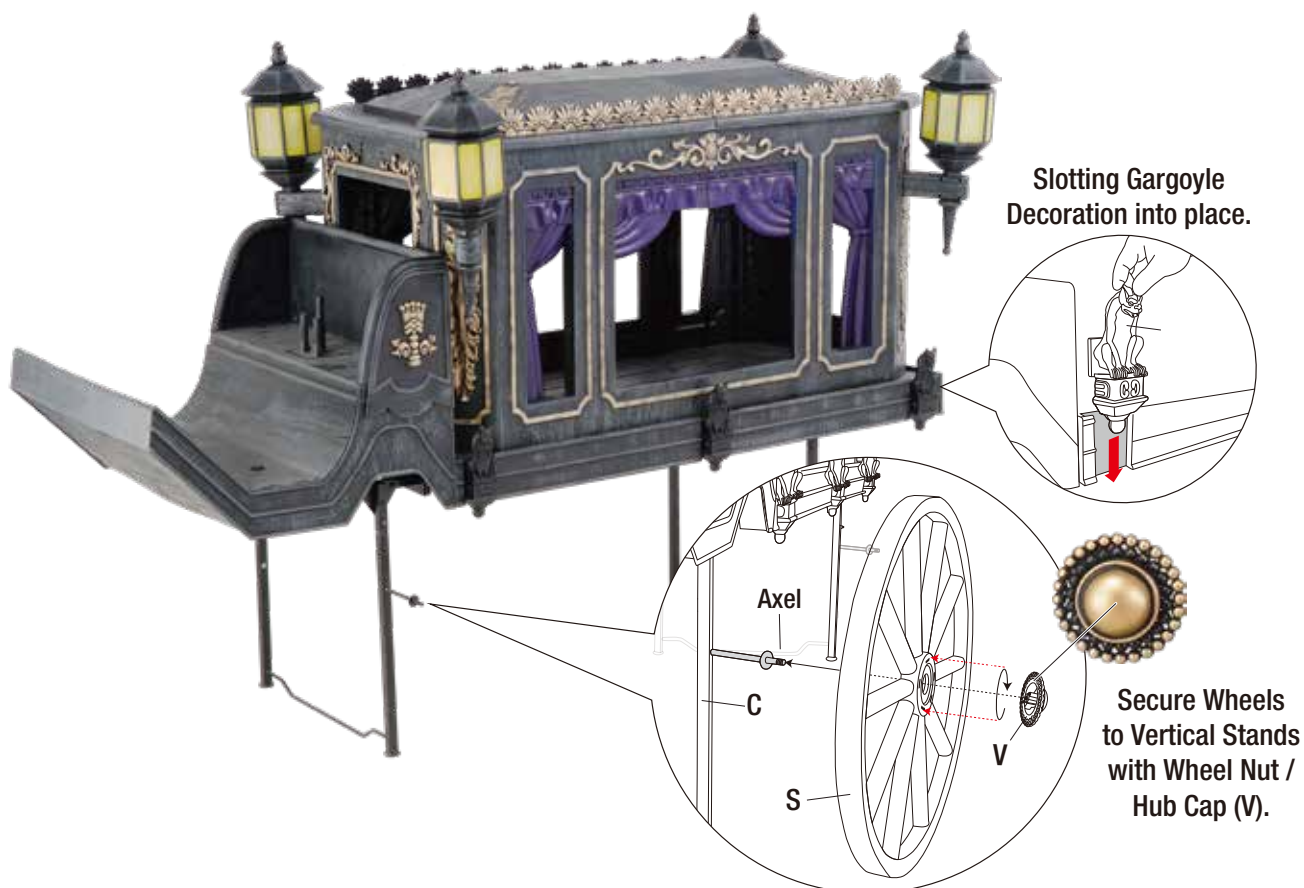


View of Wheels & Decorations in place.



15 Pose the Reclining Skeleton


- Pose the skeleton (W) as shown.

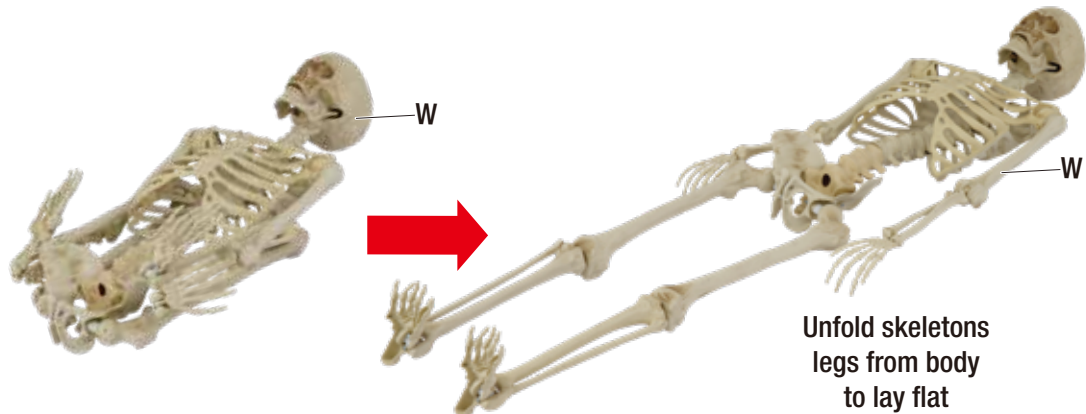

16 Place the Reclining Skeleton inside the Hearse


- Place the reclining Skeleton (W) inside the Hearse through the back window. Position the Skeleton's feet towards the front of the Hearse and place inside Front Seat (K). Elevate the Skeleton's head by raising the support arm located on floor, see illustration below for detail.

NOTE: the ON/OFF - Try Me function switch is located on Front End Panel (H).

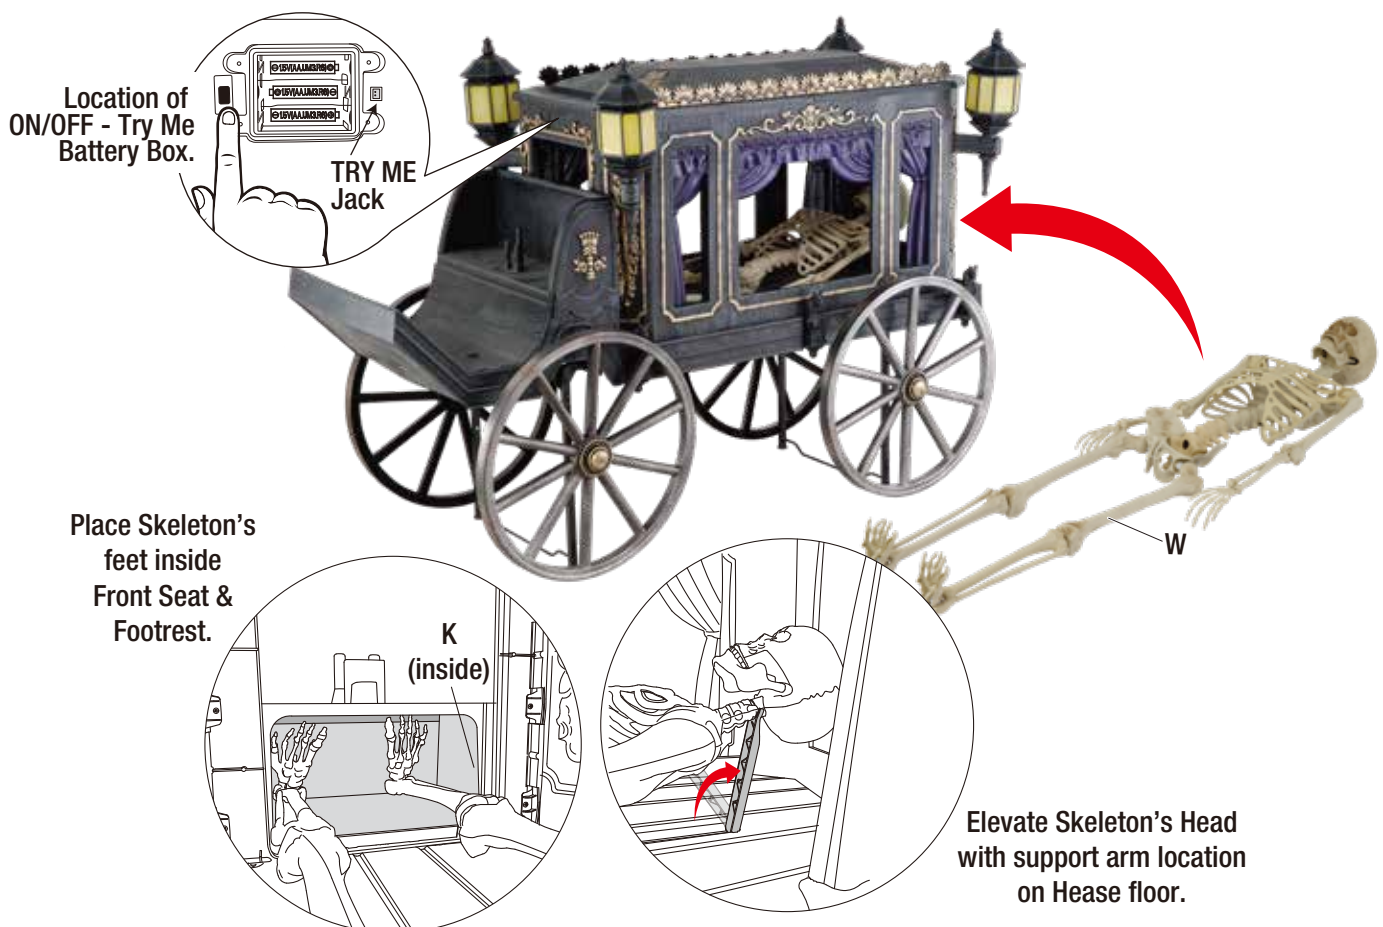


17 Pose the Skeleton Driver

- Pose the Skeleton Driver (X) to the sitting position as shown.

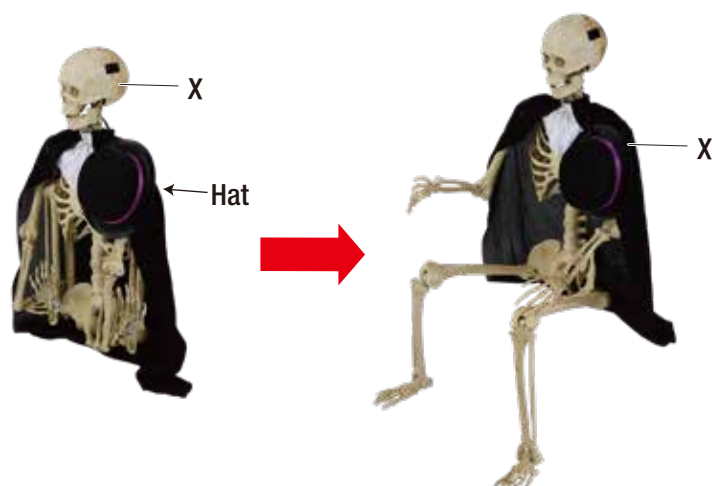


18 Install the Skeleton Driver onto the Hearse Seat

- Mount the Skeleton Driver (X) to the Front Seat (K) by aligning holes on underside of Skeleton with the three protruding tubes located on the Front Seat. Line up, 'Click Lock' pins and push down to lock in place, as shown below.

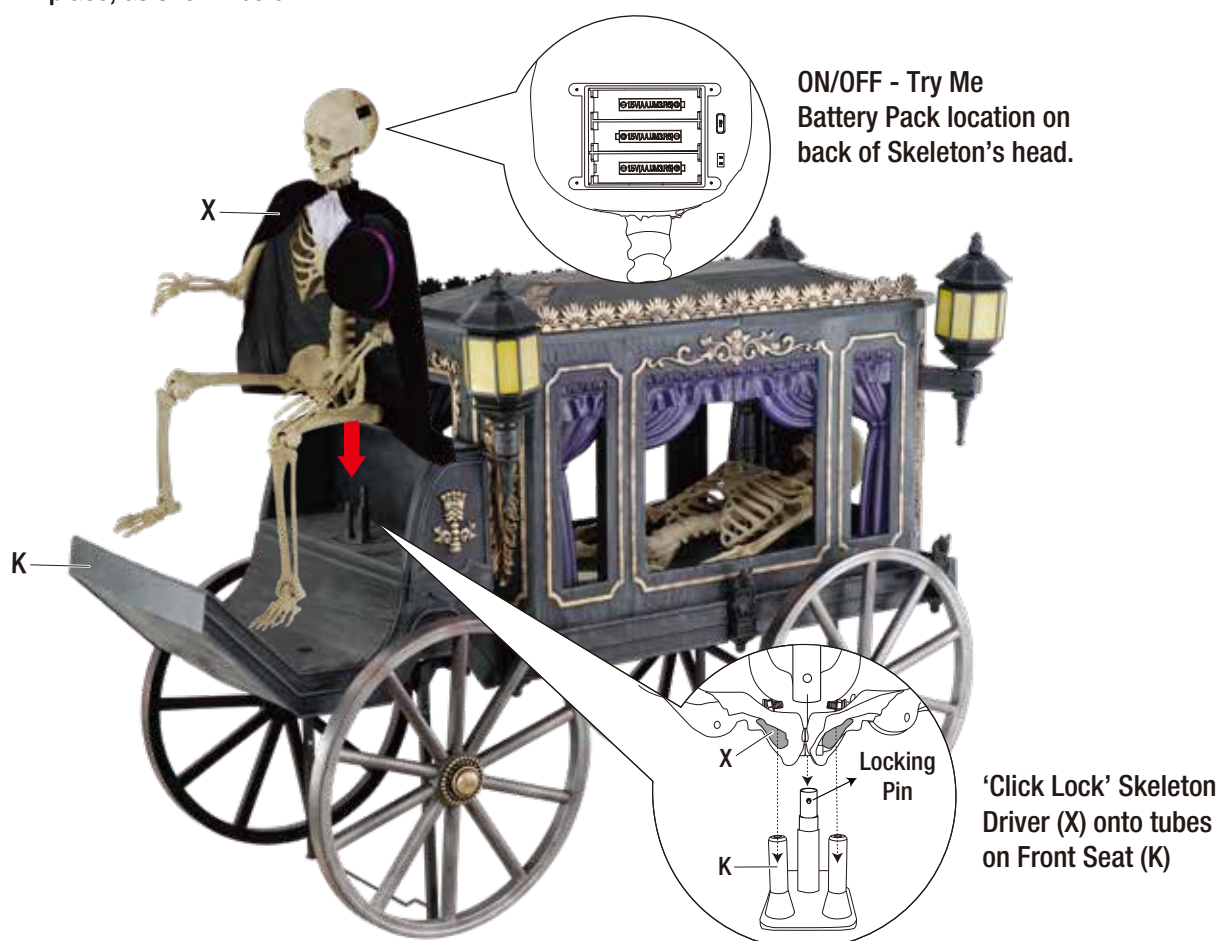

19 Attach Hat and Cape to Skeleton Driver. Secure Floor Base to Ground with Ground Stakes.


- Place hat on the Skeleton Driver's head (X) and secure in place with Hook & Loop Strip closure, as shown. Place cape around neck, position and secure as desired.
- Attach the 2x Ground Stakes (Z) and push or gently hammer (not included) to secure into the ground.

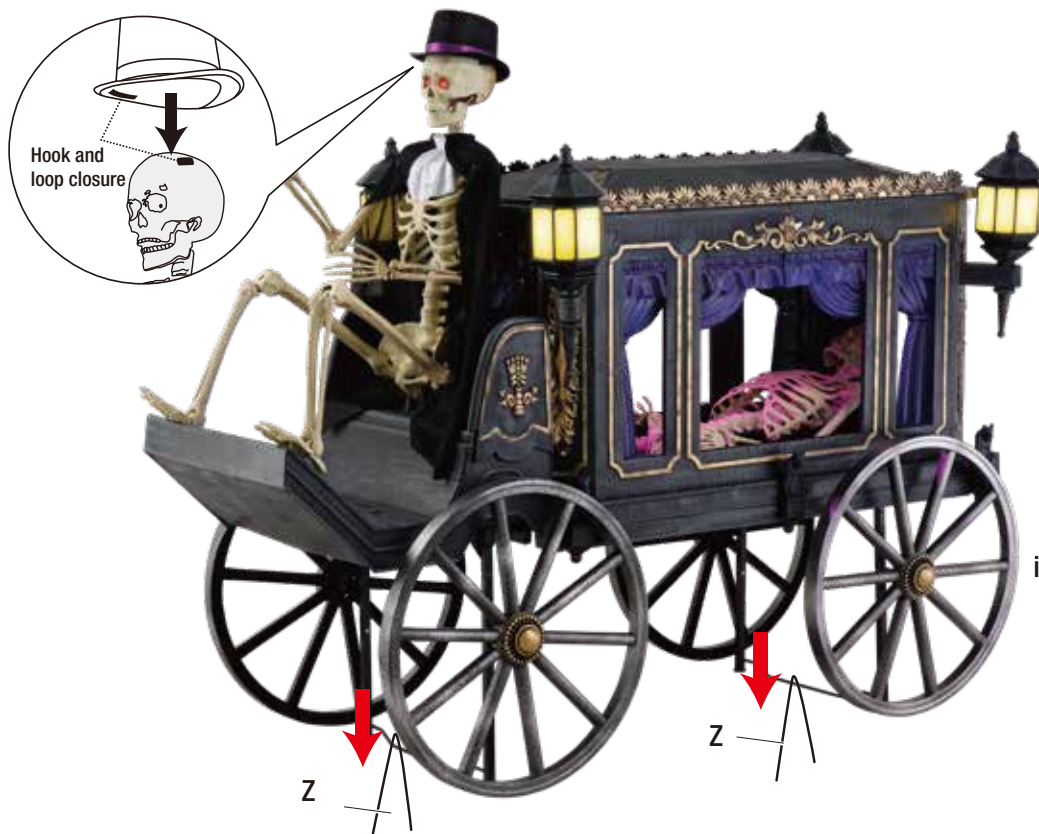

The colored light shines on reclining skeleton from inside the Front End Panel (H) attached to the battery box.


20 Unpack and prepare the Bridle

- Adjust the Bridle (Y) to the correct position as shown.

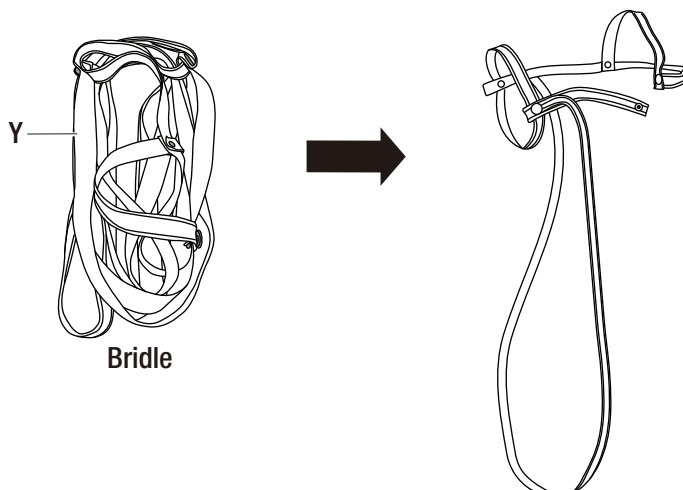


21 Attach the Bridle onto Skeleton Pony (NOT INCLUDED)

HOW TO ATTACH THE BRIDLE ON THE SKELETON PONY (SKELETON PONY NOT INCLUDED)

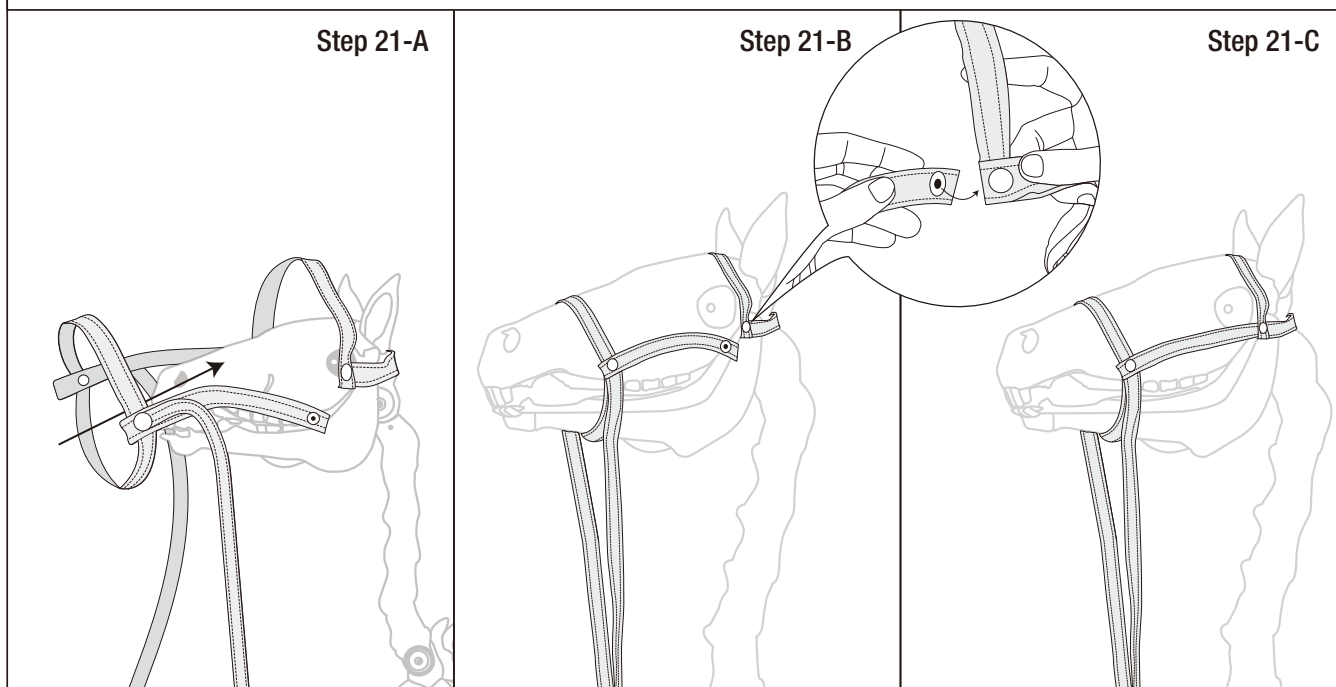

22 Attach the Reins of the Bridle to Skeleton Driver

- Attach the Reins of the Bridle (Y) into the Skeleton Driver's (X) hands as shown in illustration below. (Skeleton Pony not included)

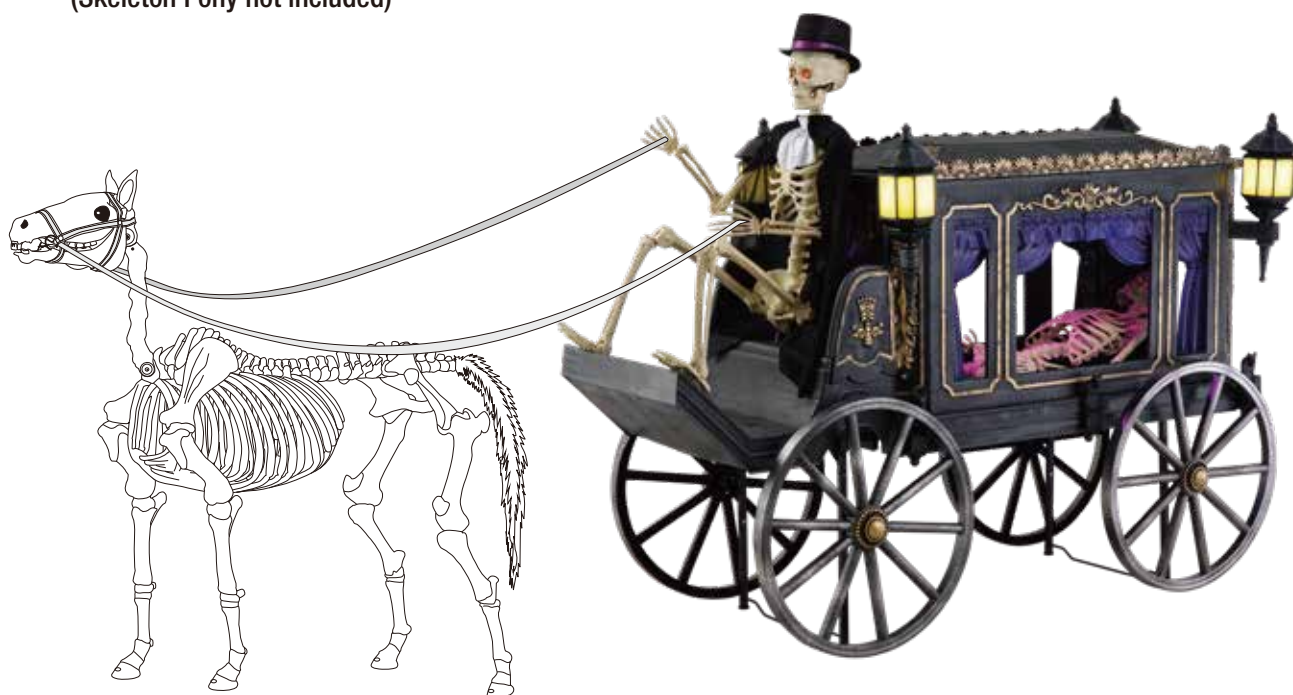

Operation Instructions

BATTERY REPLACEMENT & ITEM FUNCTION FOR HEARSE:

Battery-powered. Requires 3 "AA" batteries for lighting Carriage Lamps on Hearse (included).

1. The battery case is located on the Front End Panel (H), behind Skeleton Driver.
2. With small screwdriver, remove safety screws on battery case and remove cover.
3. Clean the battery contacts and also those of the device prior to inserting (3) AA batteries in correct polarity.
4. Replace cover and safety screw.
5. The ON/OFF switch is located by the battery case. Place the switch into the "ON" position to activate the LED lights and the Timer feature. When the Timer feature is activated, the Carriage Lamps on Hearse will automatically turn lights ON for 6 hours and will shut OFF for 18 hours. Switch to the OFF position to activate the TRY-ME feature and then press the TRY-ME button for a demonstration.
6. Replace batteries if the light begins to dim.

BATTERY REPLACEMENT & ITEM FUNCTION FOR SKELETON DRIVER:

Battery-powered. Requires 3 "AA" batteries for Skeleton Driver (included).

1. The battery case is located on the back of the Skeleton's head.
2. With small screwdriver, remove safety screw on battery case and remove cover.
3. Clean the battery contacts and also those of the device prior to inserting (3) AA batteries in correct polarity.
4. Replace cover and safety screw.
5. The ON/OFF switch is located on the battery compartment. Move switch to ON position for sound activated mode. Clap your hands or make a loud noise to activate LED lights and motion and play a full version of sounds. Switch to the OFF position to activate the TRY-ME feature. Press the TRY-ME button for a short version demonstration.
6. Replace batteries if movement slows, light becomes dim or sound becomes distorted or faint.

Troubleshooting

Problem	Solution
The Hearse's LED Lantern lights do not work	❑ 1. Check if the positive and negative terminals of the battery are installed correctly. ❑ 2. Check whether the battery is drained. Replace with new batteries and try again. ❑ 3. Check the ON/OFF switch is located in the "ON" position. ❑ 4. Check all wire connections. ❑ 5. Ensure it is within the 6 hours ON Timer schedule.
The Skeleton Driver's sound sensor does not work	❑ 1. Check if the positive and negative terminals of the battery are installed correctly. ❑ 2. Check whether the battery is drained. Replace with new batteries and try again. ❑ 3. Check the ON/OFF switch is located in the "ON" position. ❑ 4. Check if the triggered sound is too far from the product, please keep the distance between the sound and the pony at 39.5 in (100cm). ❑ 5. Check if the triggered sound is too small, please activate the product with a trigger sound of more than 90 decibel.

03302025_2008482

Printed in China