 
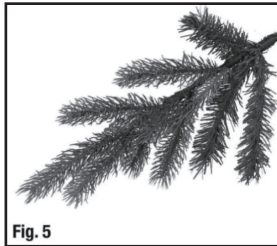 
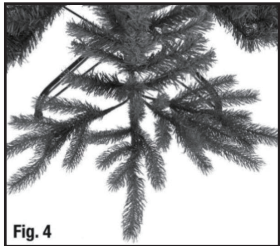 
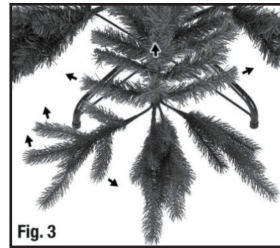 
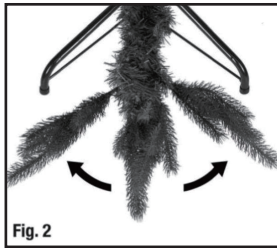 


## **BRANCH SHAPING INSTRUCTIONS:**

Branch shaping is best performed during assembly procedure but can be done, if preferred, when tree assembly is completed.

**PRE-LIT TREE NOTE:** If your tree is pre-lit, and not a PowerConnect tree, it is recommended that the light plugs between sections be connected prior to or at the same time as shaping is performed.

1. Trees are shipped from the factory with the tips of each branch compressed to the center (Figure 1). Branches should be shaped one row at a time. Make sure that all of the branches of the row to be shaped have been moved to their lowered position.
2. Starting with the bottom row of the tree bottom section, pull the two branch wing tips out away from center to about a 45° angle (Figure 2).
3. The smaller individual tips should then be spread out separately (Figure 3). Figure 4 shows a fully shaped branch without wing tips.
4. Follow this same sequence as you work around the bottom row of branches. When completed, move up to the next branch row and repeat.
5. As you work your way up branch rows, the wing tip style branches will diminish, but branches will otherwise shape similarly. Figure 5 shows a fully shaped branch without wing tips.
6. The top section of the tree will have wrapped branches in place of hinged branches. Gently lower the branches and shape in a similar manner as the branches in previous sections (Figure 6).
7. Upon completion of the assembly and shaping procedures, walk around the tree and perform additional shaping to fill any obvious holes or openings.

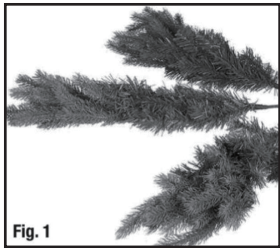

## **USE AND CARE INSTRUCTIONS:**

Before using or reusing, inspect product carefully. Discard any products that have cut, damaged, or frayed wire insulation or cords, cracks in the lampholders, loose connections, or exposed copper wire.

Before storing the product, carefully remove the product from wherever it is placed to avoid any undue strain or stress on the product conductors, connections, and wires.

When not in use, store neatly in a cool, dry location protected from sunlight.

# **ABBLE® 5ft. Green Lighted Flocked Spruce Artificial Christmas Tree**

**SKU#300568**

- Thank you for purchasing ABBLE® product.
- You are welcomed to visit [www.abbblestore.com](http://www.abbblestore.com) for more ABBLE® products.
- We are committed to providing customers with quality products and a good purchasing experience.
- Need any help regarding purchase or customer service, please email us by [cs@abbbleinc.com](mailto:cs@abbbleinc.com) (will be responded within 24 working hours)



**[www.abbblestore.com](http://www.abbblestore.com)**

## **IMPORTANT SAFETY INSTRUCTIONS: FOR INDOOR USE ONLY** **READ AND FOLLOW ALL SAFETY INSTRUCTIONS**

**When using electrical products, basic precautions should always be followed including the following:**

- 1) To reduce the risk of fire, do not deliberately reposition either bulb or lampholder contact.
- 2) To reduce the risk of overheating, replace burned out lamps promptly. This is an electrical product - not a toy! To avoid the risk of fire, burns, personal injury, and electric shock it should not be played with or placed where small children can reach it.
- 3) Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
- 4) This seasonal use product is not intended for permanent installation or use.
- 5) Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
- 6) Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- 7) Do not let lamps rest on the supply cord or on any wire.
- 8) Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- 9) Do not use this product for other than its intended use.
- 10) Do not hang ornaments or other objects from cord, wire, or light string.
- 11) Do not close doors or windows on the product or extension cord as this may damage the wire insulation.
- 12) Do not cover the product with a cloth, paper or any material not part of the product when in use.
- 13) The product employs overload protection (fuse). A blown fuse indicates an overload or short circuit situation. If the fuse blows, unplug the product from the outlet. Also unplug any additional strings or products that may be attached to the product. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short circuit may be present and the product should be discarded.

**Read and follow all instructions that are on the product or provided with the product.**

**SAVE THESE INSTRUCTIONS**

## **PRE-LIT TREE ASSEMBLY INSTRUCTIONS:**

1. Follow the stand assembly instructions to set up the tree stand.
  - a. Pull apart the legs of the stand so that they are X-shaped.
  - b. Screw the eye bolts through the hole of metal tabs. Turn screws so they touch tree trunk. Stand tree up and straighten by adjusting screws in or out then tighten screws.
2. Set section B to stand. Take all the hinged branches to unfold into place. (See Fig. 1)
3. Shape the branches on the bottom section of your tree. Note that some tree models have "side branches" attached to the main branch stem that require additional shaping.
4. Insert tree top A into the hole (pole cap) on the top of the trunk of section B. (See Fig. 2) Take all the branches to be shaped. Connect the plug (A1) on the light set on the tree top section into the end-plug (B1) of the strings of section B. Shape the branches on the tree top section.
5. After shaping the whole tree following the previous steps, step back and take an overall look at the tree. Shift branches as necessary to fill any gaps.
6. Now you can plug the B2 to a standard power outlet to perform the tree for decoration.
7. After the installation is complete, use a vacuum cleaner to clean up the snow powder on the floor.

## **TROUBLE SHOOTING:**

If your tree does not light up, please check the following.

1. Check that all plugs are properly connected.
2. Check wall outlet for power.

## **STORAGE:**

Unplug the product from the wall outlet and remove all ornaments and decorations. (Except for decorations attached at manufacturer.)

Unplug each section of extension cord, keep each stack of lights connected together. Gently lift off the top and middle sections, and remove the bottom section from the tree stand. Carefully replace the tree in its box and tape it shut.

**DO NOT STORE TREE IN A DAMP AREA OR IN AN AREA WHERE THE TEMPERATURE EXCEEDS 100 F.**

