

Ruff Weather™

Premium All-Weather Pet Door

INSTALLATION INSTRUCTIONS

Tools Required for Installation

Hammer and Awl (or Nail) • Drill and 3/8" (1cm) Drill Bit • Sabre Saw • Phillips Screwdriver

1. Determine template placement - The die-cut template is located in the center of pet door. Remove screws holding the frame together; lift out template. Center template (width) in middle of door; tape in place. Position the top of the template 2" (5.1cm) taller than your pet's shoulder.

Important: Under no circumstances should the bottom edge of the rough opening be less than 3" (7.6cm) from the bottom edge of the wood door.

2. Outline pet door opening - With template taped in place, use a pencil to draw around the inside edge of template onto door. Use a nail or awl to mark outer screw holes.

3. Drilling holes - **Next:** Drill the four (4) 3/8" (1cm) diameter outer screw holes.

4. Cutting the opening - Mark the inside (4) corners of template and drill four (4) 3/8" (1cm) diameter saw-out starter holes. Beginning with one of the inside 3/8" (1cm) saw-out starter holes, use a sabre saw to cut along inside edge pencil line.

5. Assembly and Adjustments

(see diagram) - Insert outer frame **(A)** into opening from exterior side (frame must be flush with door surface). Place inner frame **(B)** into opening from inside door and hold in place. Install screws **(C)** and tighten until snug. **Do not over-tighten.**

6. Locking your pet door - Slide cover into guide channels located on both sides of pet door opening. Lock inside slide **(D)** with the red tab located on door's upper left side.

The "RUFF WEATHER™" Wall Installation Kit

The RUFF WEATHER™ Pet Door can also be installed in walls 4 3/4" - 7 1/4" (12.1cm - 18.4cm) using the optional Wall Installation Kit available from your retailer.

