


Item # 1004489683 Model # SK19345Br2-V-1 Item # 1004489684 Model # SK19345Br2-V-2

## **USE AND CARE GUIDE**

### **BOOKCASE WITH GLASS DOORS**

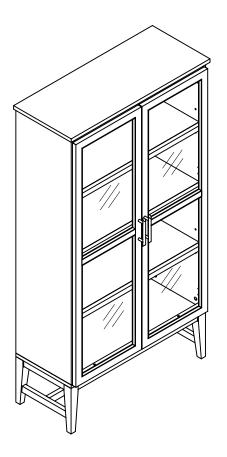

Questions, problems, missing parts? Before returning to the store, call Home Decorators Collection Customer Service. 8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

### 1-800-998-7021

### HOMEDEPOT.COM/HOMEDECORATORS

### THANK YOU

We appreciate the trust and confidence you have placed in Home Decorators Collection through the purchase of this bookcase with glass doors. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Home Decorators Collection!

### **Table of Contents**

Table of Contents	2
Safety Information	2
Warranty	2
3 Year Warranty	
What is Covered	2
What is Not Covered	2
Pre-assembly	3
Planning Assembly	3
Tools Required	3

### **Safety Information**

### 

- □ Keep small parts away from children during assembly.
- □ Read and follow instructions carefully.

## 

- □ Read these instructions carefully and keep in a safe place.
- □ TO GUARANTEE THE SAFE USE OF THIS PRODUCT, FOLLOW THE WARNINGS, GUIDELINES AND RECOMMENDATIONS IN THIS MANUAL.
- □ Adult assembly required.
- □ Small parts may present choking hazard prior to assembly.
- $\hfill\square$  Do not place heavy objects on the glass top.
- □ Some assembly may involve attaching glass or mirrors.
- Be very careful handling the glass or mirrors, as severe injury may result if the glass or mirror breaks.
- □ Never handle large pieces of glass or mirrors by yourself.

### Warranty

### **3 YEAR WARRANTY**

### WHAT IS COVERED

We guarantee this product to be free of manufacturing defects to the original purchaser for three years.

### WHAT IS NOT COVERED

This warranty does not cover commercial use, acts of nature, and abusive use.

Hardware Included	3
Pre-assembly (continued)	4
Package Contents	4
Assembly	5

### 

 
- Do not use power tools to assemble your furniture. Power tools may strip or damage parts/product.
- Do not overtighten connectors (screws, bolts, etc.).
  Overtightening can lead to product damage.
- Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment. If parts are missing, contact THE HOME DEPOT to obtain any missing parts.
- DO NOT USE SUBSTITUTE PARTS.
- □ This product should only be used on a flat, level surface.

### **Pre-assembly**


### **PLANNING ASSEMBLY**

Keep children and pets away from build area. Make sure your area is large enough to unpack, sort and assemble the unit.

### **TOOLS REQUIRED**




### **HARDWARE INCLUDED**

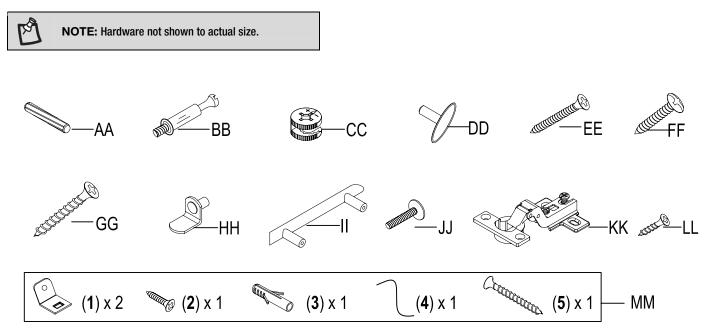



Part	Description	Quantity
AA	Wood dowel	30
BB	Cam lock bolt	12
CC	Cam lock	12
DD	Plastic cover	8
EE	1 in. Flat head screw	4
FF	5/8 in. Round head screw	32
GG	1-1/2 in. Flat head screw	16
HH	Shelf support 8	
I	Handle	2
JJ	Handle bolt	4
KK	Hinge 6	
LL	5/8 in. Flat head screw 24	
MM	Anti-tipping hardware package 1	

## **Pre-assembly (continued)**
  
### **PACKAGE CONTENTS**

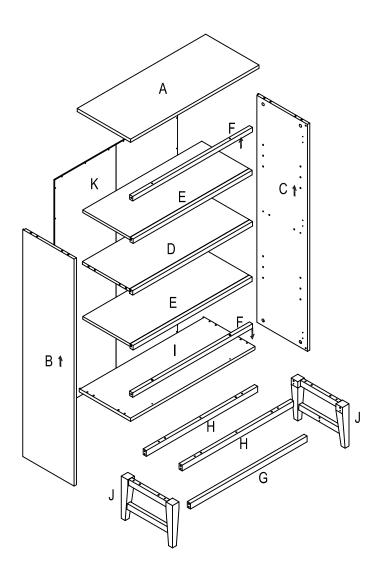






Part	Description	Quantity
Α	Top panel	1
В	Left side panel	1
C	Right side panel	1
D	Fixed panel	1
E	Adjustable shelf	2
F	Front crossbar	2
G	Base center crossbar	1

Part	Description	Quantity
Н	Base side crossbar	2
I	Bottom panel	1
J	Base side frame	2
К	Back panel	1
L	Left door	1
М	Right door	1

### Assembly


# **1** Attaching the fixed panel to the right side panel

a) Install dowel (AA) and bolt (BB) into panel (C).

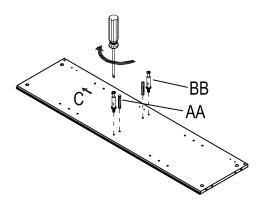


b) Insert lock (CC) into panel (D).

□ c) Join panel (D) to the panel (C).

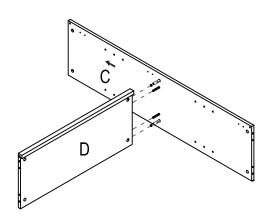


**d)** Tighten bolt (BB) with lock (CC) in the pre-drilled holes.

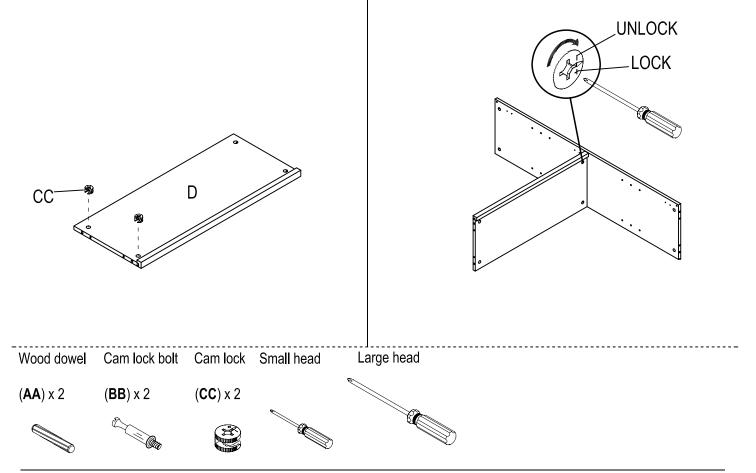


# $2^{\rm Attaching the left panel and the front crossbar}$

a) Install dowel (AA) and bolt (BB) into panel (B).

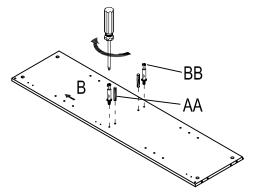


b) Insert lock (CC) into panel (D).

□ c) Join panel (B) and bar (F) to the assembled body with dowel (AA).

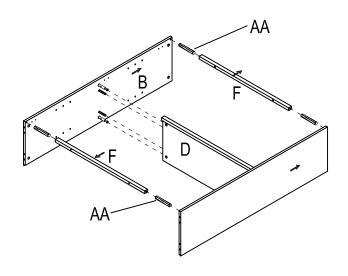


 $\hfill\square$  d) Tighten bolt (BB) with lock (CC) in the pre-drilled holes.

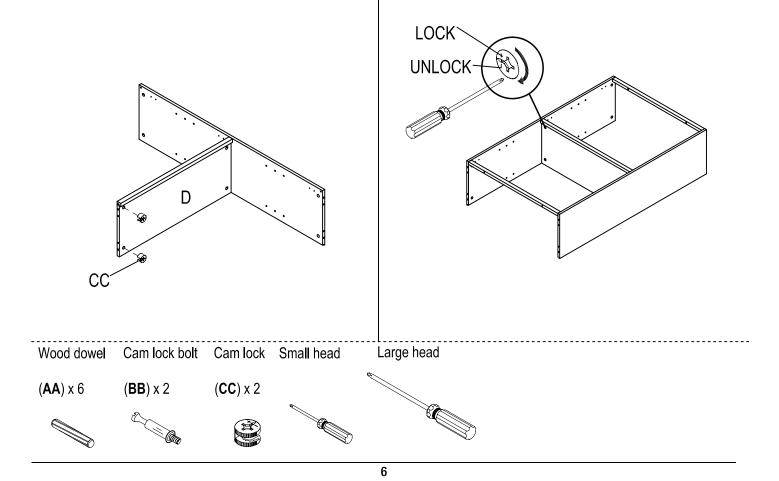


## ${f 3}$ Attaching the top panel

a) Install dowel (AA) and bolt (BB) into panel (A).

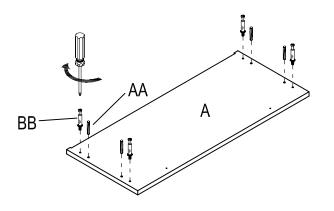


□ b) Insert lock (CC) into panels (B) and (C).

 $\hfill\square$  c) Join panel (A) to the assembled body with dowel (AA).

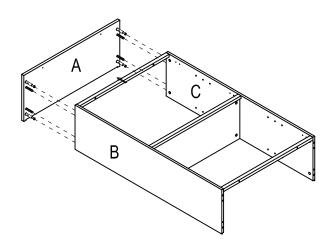


 d) Tighten bolt (BB) with lock (CC) in the pre-drilled holes. Tighten bar (F) with screw (EE).

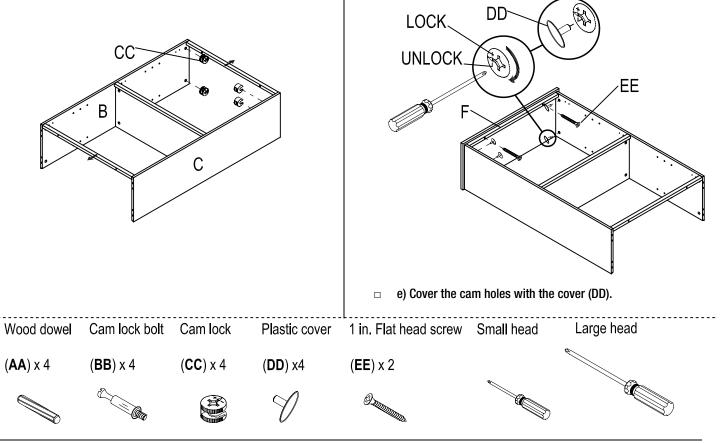


## **4** Attaching the bottom panel

□ a) Install dowel (AA) and bolt (BB) into panel (I).

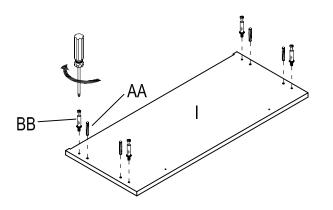


□ b) Insert lock (CC) into panels (B) and (C).

 $\hfill\square$  c) Join panel (I) to the assembled body with dowel (AA).

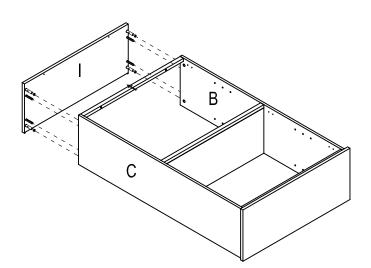


 d) Tighten bolt (BB) with lock (CC) in the pre-drilled holes. Tighten bar (F) with screw (EE).

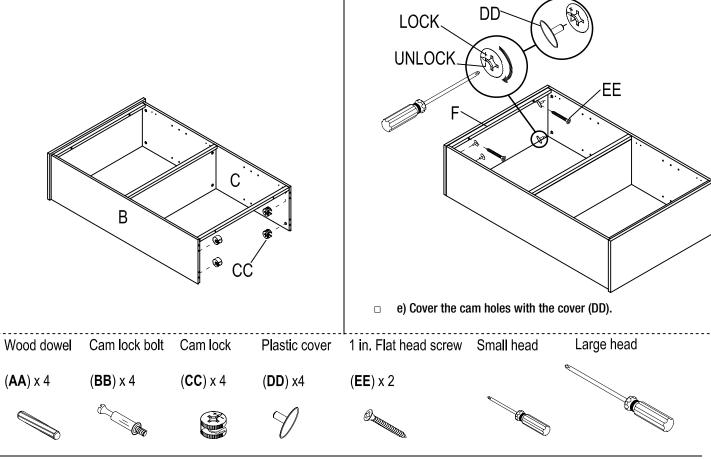


## ${f 5}$ Attaching the bar to frame

a) Join bars (H) and (G) to the frame (J) with dowel (AA).

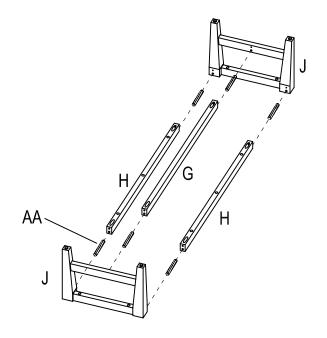


□ b) Tighten bars (H) and (G) with screw (GG).

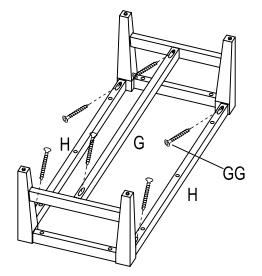


Wood dowel 1-1/2 in. Flat Small head head screw (**AA**) x 6 (**GG**) x 6 COULDE 

### **6** Attaching the bar and frame to the bottom panel

 $\hfill\square$  a) Join bar (H) and frame (J) to the assembled body with dowel (AA).

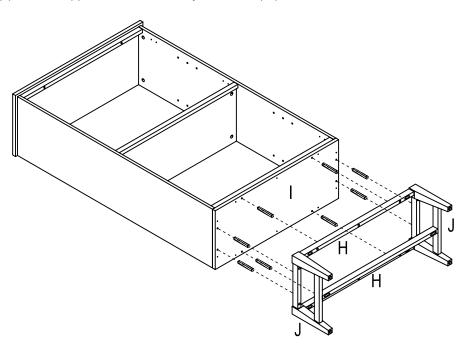


□ a) Tighten bar (H) and frame (J) with screw (GG).

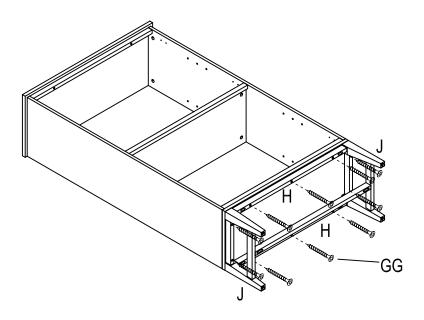

Wood dowel	1-1/2 in. Flat head screw	Small head
( <b>AA</b> ) x 8	( <b>GG</b> ) x 10	5
	LUUUUUU	

## $\mathbf{7}$ Attaching the back panel

□ Tighten panel (K) to the assembled body with screws (FF) as shown.

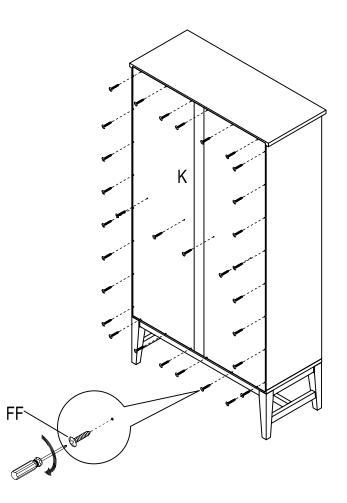


5/8 in. Round Small head head screw (FF) x 32

Anna



## ${f 8}$ Assembling the adjustable shelf

□ Insert shelf supports (HH) in desired positions and place shelf (E) on the supports.

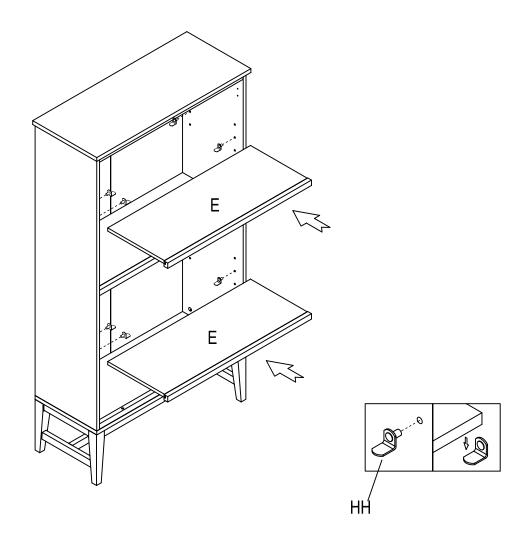


Shelf support

(**HH**) x 8





## ${f 9}$ Attaching the door

a) Attach hinge (KK) to left door (L) and right door (M) with screw (LL).

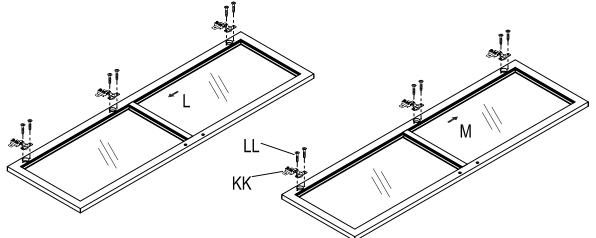

b) Attach left door (L) and right door (M) to the assembled body with screw (LL) as shown.
 Attach handle (II) to left door (L) and right door (M) with the handle bolt (JJ).

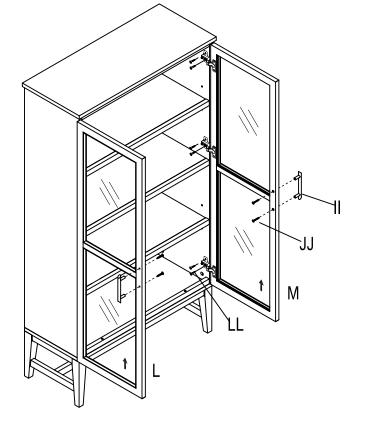


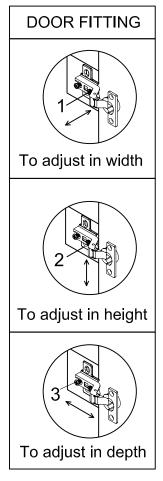

 5/8 in. Flat head screwHingeHandleHandle boltSmall head(LL) x 24(KK) x 6(II) x 2(JJ) x 4









HOMEDEPOT.COM/HOMEDECORATORS Please contact 1-800-998-7021 for further assistance.

# **10** Finalizing the assembly

□ Install the anti-tipping hardware as shown.

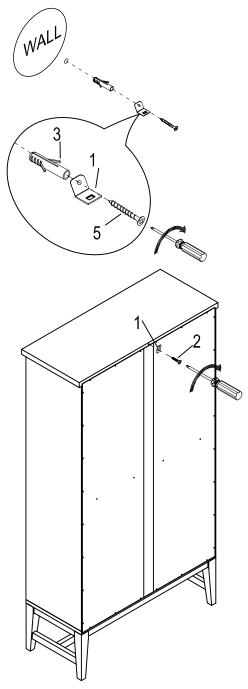

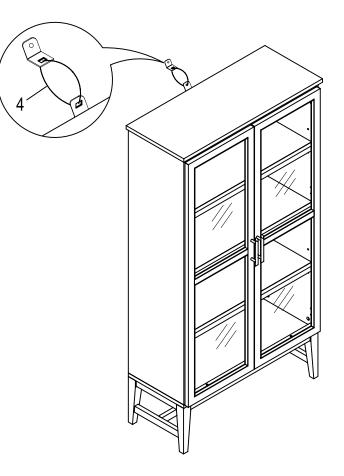

R	ectangle	1/2 in. Flat head screw	Plastic anchor	Plastic band	1-1/2 in. Flat head	Small head
m	etal plate				screw	
(1	) x 2	( <b>2</b> ) x 1	( <b>3</b> ) x 1	( <b>4</b> ) x 1	( <b>5</b> ) x 1	
(		ALLER CO.	and the second s			MM



Questions, problems, missing parts? Before returning to the store, call Home Decorators Collection Customer Service. 8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

#### 1-800-998-7021

### HOMEDEPOT.COM/HOMEDECORATORS

Retain this manual for future use.