
DXH165

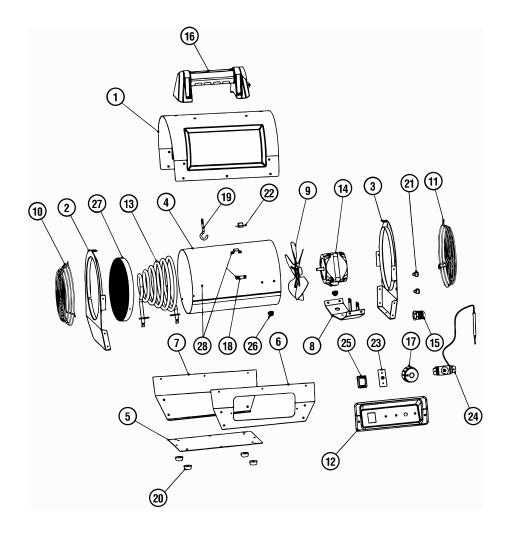

Parts List DXH165

REF. #ITEM# DESCRIPTION	REF. #ITEM#DESCRIPTION
141010COVER, TOP, SHELL, OUTER	1541025BUSHING, STRAIN, RELIEF
2PANEL, FRONT	1640801HANDLE, CARRY
3PANEL, REAR	1741027KNOB, THERMOSTAT, PLASTIC
441013SHIELD, RADIATION, TUBE	18N/ABRACKET, WIRE MOUNT
5BASE, PLATE	1941029SUPPORT, HEATING ELEMENT
6PANEL, SIDE, LEFT	2041030FOOT, RUBBER
7PANEL, SIDE, RIGHT	2141031CLIP, SENSOR, CAPILLARY TUBE
8BRACKET, MOUNT, MOTOR	2241032SWITCH, HIGH LIMIT, 77C
9BLADE, FAN	2341015BOARD, CIRCUIT, HIGH LIMIT, INDICATOR
1041020GUARD, GRILL, FRONT	2441034THERMOSTAT, TEMPERATURE, AMBIENT
1141021GUARD, GRILL, REAR	2541035SWITCH, LIGHTED, ON/OFF
1241022PANEL, CONTROL, PLASTIC	2641036BUSHING, PLASTIC, WIRE
1341023ELEMENT, HEATING	2741028FRONT SCREEN ASSEMBLY
14MOTOR, FAN	2841093RADIATION SHIELD TUBE W/BRACKETS
	*41097Power Cord
	*Not shown on drawing.

A WARNING:

Use only manufacturer's replacement parts. Use of any other parts could cause injury or death. Replacement parts are only available direct from the factory and must be installed by a qualified service agency.

For Service

Please call Toll-Free 855-805-5745 www.dewalt.com
Our office hours are 8:00 AM — 5:00 PM, EST, Monday through Friday.
Please include the model number, date of purchase, and description of problem in all communication.