



High Velocity Air Mover

Features:

- Powerful Airflow with Low Power Draw
- Quiet and Lightweight
- Carry Handle and Stackable for Easy Storage
- Easily Disassembled for Thorough Cleaning and Service
- Easy Cord Wrap on Handle
- 3 Speed Switch
- 3 Air Flow Positions (0°, 45°, 90°) (select models)
- Durable and Rugged Housing

READ & SAVE THESE INSTRUCTIONS

This product is intended for indoor residential and office use only, not for industrial or other commercial applications. Use only with electrical wiring that is in good working order and that meets applicable codes and ordinances. If you have any questions whether your wiring is adequate, consult a qualified electrician.

While using your air mover, you should follow the IMPORTANT INSTRUCTIONS listed below. As part of those instructions, we have used the word "**WARNING**" to indicate the level of hazard: **WARNING** indicates a hazard which, if not avoided, could result in injury or death.

IMPORTANT INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of electric shock, fire, or injury to persons, including the following precautions:

- Read all the instructions before using this air mover.
- Use this air mover only as described in this manual. Any other use not recommended by the manufacturer may cause electrical shock, fire or injury to persons.
- Do not operate the air mover with a damaged power cord or after the fan malfunctions or has been dropped in any manner.
- Use of extreme caution is necessary when any air mover is used by or near children, disabled persons or pets and whenever the air mover is left operating unattended.
- Do not place the air mover on a small, unlevel, uneven or any surface which might allow air mover to tip or fall.
- For proper operation, air mover should be placed on a smooth, non-combustible, level surface.
- To avoid risk of injury, do not direct air flow at face or body.
- Do not move or carry the air mover while unit is operating.
- Always unplug air mover when not in use, when moving from place to place, when assembling or disassembling parts, and before cleaning.
- The use of attachments, not recommended or sold by the manufacturer, may cause hazards.
- Do not use outdoors.
- Do not use air mover in window. Rain may cause electrical hazard (for non-window models).
- Do not operate the air mover with blade guards or any safety device removed.
- Avoid the use of extension cords due to risk of fire. If an extension cord must be used, the cord must be minimum 14 AWG and rated not less than 1875 watts.
- Do not run power cord under carpeting. Do not cover cord with throw rugs, runners or the like. Arrange cord away from traffic area where it will not be tripped over.
- Do not insert or allow any object to enter any openings on the air mover. Doing so may cause electric shock and/or fire hazard. Avoid contact with moving parts.
- Children should be supervised to ensure they do not play with the appliance.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

WARNING: SHOCK HAZARD

Use your air mover only in dry environments. This air mover is not intended for use in a bathroom, laundry area, or similar locations, or near sinks, washing machines, swimming pools or other sources of water. Never locate air mover where it may fall into a bathtub or other water receptacle. Do not use in damp environments such as flooded basements.

WARNING: HOT SURFACES

Do not touch fan motor when in use. This motor is hot when in use, to avoid burns, do not let bare skin touch hot surfaces.

WARNING: FIRE HAZARD

Air movers have arcing or sparking parts inside. Do not use near combustible materials or flammable gases or sources of heat. **DO NOT USE** in areas where gasoline, paint or flammable materials are used or stored. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock, fire, or damage the air mover.

WARNING: ELECTRICAL SHOCK HAZARD

Do not use with damaged cord or plug. Use with adequate electrical system that is up to code.

CAUTION: TO PREVENT ELECTRIC SHOCK,

this product has a three prong grounded plug that must be inserted into a matching properly grounded outlet to reduce the risk of electrical shock. Do not attempt to defeat this safety feature. Do not operate the unit in standing water. Never plug in or unplug the unit with wet hands or while standing in water.



WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK,

do not use this product with any solid-state speed control device. Use only with GFCI protected receptacles. Please contact a qualified electrician for verification and/or installation of a GFCI receptacle if necessary.

DO NOT operate any air mover with a damaged cord or plug or after air mover malfunctions, has been dropped or damaged in any manner. Do not operate air mover with a broken blade, safety cage or any visual imperfections. Disconnect power before servicing. For repairs covered under warranty, see warranty statement. For all other repairs contact Comfort Zone® Customer Service by telephone or mail for information and assistance.

DO NOT run power cord under carpeting. **DO NOT** cover cord with throw rugs, runners or the like. Arrange cord away from traffic area where it will not be tripped over. Avoid the use of extension cords due to risk of fire. If an extension cord must be used, the cord must be minimum 14 AWG and rated not less than 1875 watts. Do not use an extension cord unless the plug can be completely inserted into its receptacle. Unplug the air mover when not in use. Do not operate fan with its ventilation obstructed.

PRODUCT OVERVIEW:

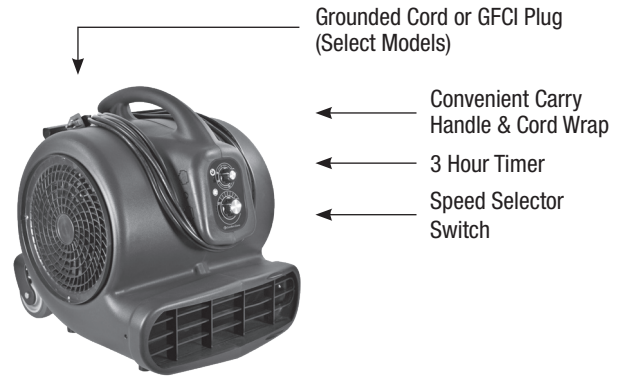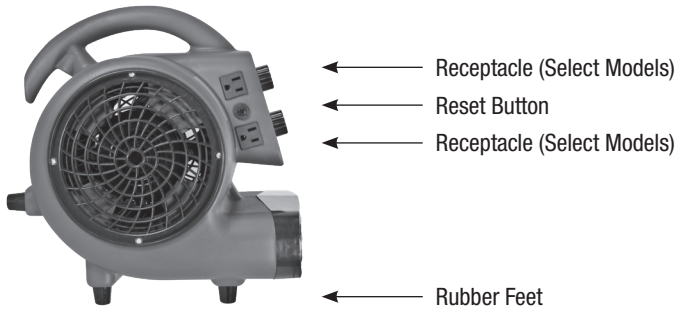

NOTE: Receptacles, Timers and GFCI Plugs only available on select models.

SPECIFICATIONS:

Please refer to the correct model for specifications:

MODEL	CZBC141	CZBC131G	CZBC121T	CZBC101T
Power	1/4 HP	1/3 HP	1/2 HP	1 HP
Amp	1.8	2.8	4.5	6.9
Speeds	3	3	3	3
Daisy Chain	Yes	No	No	No
Plug Type	Grounded	GFCI	Grounded	Grounded
Timer	No	No	Yes	Yes
Cord Length	14 AWG 10 ft.	18 AWG 20 ft.	18 AWG 20 ft.	18 AWG 25 ft.
Overheat Protection	Thermally Protected	Thermally Protected	Thermally Protected	Thermally Protected
Rated Airflow	800 CFM	1250 CFM	1500 CFM	1900 CFM
Tilt Angle	0°, 45°, 90°	0°, 45°, 90°	0°, 45°, 90°	0°
Weight	10.9 lbs.	25.6 lbs.	26.5 lbs.	34 lbs.

OPERATING INSTRUCTIONS:

The air mover is ready to use, out of the box – no assembly required. It is intended to move air and dry floors, walls, furniture, crawl spaces, basements, etc. The air mover is powerful, durable and easy-to-operate, making it suitable for a variety of applications.

1. Before plugging into an electrical outlet, make sure the air mover does not have visible damage. Place the air mover on a stable, flat, dry surface.
2. Position the air mover to the surface that needs to be dried. This air mover is able to be used at 3 different angles for optimal air flow.
3. Plug the power cord into the electrical outlet and turn the switch to select the desired speed.
4. Please make sure the air mover is supervised at all times while operating.

DAISY CHAINING:

- Some models come equipped with additional receptacles on the unit, providing the ability to connect a series of air movers (or other appliances) together using a single connection at the outlet. These air movers/appliances will work whether the air mover is on or off. Please note that the total amperage must be lower than the 12 amps on the circuit breaker.
- If the air mover is plugged in and stops working, press the RESET button to reset the circuit.

GFCI PLUG:


- Some models come equipped with a GFCI plug.
- A ground fault circuit interrupter (GFCI) plug will automatically shut off power directly at the power source when it detects an electrical fault.
- If the plug trips, push the reset button on the GFCI plug to get it working again.
- To test your GFCI plug press the button labeled 'test'. If the air mover stops working, your GFCI is working properly. To make it active again, simply press the 'reset' button.

TIMER FUNCTION:

- Some models have a timer function that will turn the air mover OFF after a specified time.
- Turn the TIMER knob to set the preferred time from 1 minute up to 180 minutes (3 hours), or anywhere in between. The TIMER function will count down the time and turn the air mover OFF once set time is reached.

ADJUSTABLE ANGLES:(SELECT MODELS)

This air mover has 3 operating angles that allow you to blow air at 0, 45 and 90 degree angles.

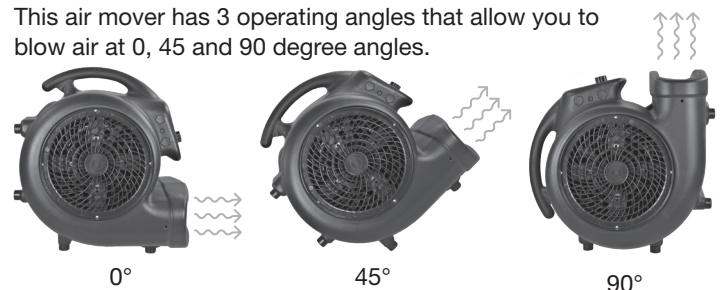

STORAGE:

If you have more than one air mover, store by stacking. Air movers can be stacked up to 4 high on their sides.

NOTE: Never operate air mover while stacked on top of each other or on its side. Stacking feature is not secure for transportation.

CLEANING AND MAINTENANCE:

ATTENTION! Careful and regular maintenance of your air mover will ensure it remains in good condition for years to come.

1. Always disconnect the air mover from its power source before performing any maintenance or cleaning.
2. To keep the air mover clean, use a damp cloth to wipe the surface of the housing.
3. Never clean the air mover with water.
4. When not in use, unplug and store the air mover in a dry indoor place out of reach of children.
5. Clean the filters, optional on select models, as often as necessary to avoid loss of airflow.

TROUBLESHOOTING GUIDE

If any trouble is found during normal operation, please refer to the chart below:

ISSUE/PROBLEM	POSSIBLE CAUSE	SOLUTION
Air mover not running properly.	No power input.	Plug in the air mover; check circuit breaker.
	Switch not turned on.	Turn on switch.
	Fan wheel is jammed.	Remove material jamming fan wheel.
	Intake or exhaust is blocked.	Turn unit off and allow to cool, then remove blockage.
Air mover vibrates excessively.	Accumulation of dirt on fan blades.	Clean fan blades.

LIMITED WARRANTY

This unit is guaranteed to the original retail purchaser against defects in quality or workmanship for a period of one year from the date of original purchase. If this unit fails because of a manufacturing defect within 30 days of purchase, return the unit, with your receipt, to the retailer. After 30 days, but within the warranty period, if the unit was purchased within the continental United States, return it, freight prepaid, to World and Main for repair or replacement. If the unit was purchased outside the continental United States, return the unit to the place of purchase. This warranty does not cover damage caused by misuse, abuse, overheating or alteration. Repairs made by anyone other than World and Main are not covered in this warranty. World and Main will not be held liable for any losses due to neglectful operation. All implied warranties, including the warranties of merchantability and of fitness of purpose, if applicable, are hereby limited in duration to the period of one year from the date of original retail purchase. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you. Incidental or consequential damages arising from a breach of either express or implied warranties are hereby disclaimed and excluded. Some states do not allow the exclusion of limitation of incidental or consequential damages, so this limitation or exclusion may not apply to you. Upon the expiration of this warranty all such liability will terminate. No other warranties are expressed or implied.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. No informal dispute settlement mechanisms are available. This limited warranty is given in lieu of all other warranties.

Manufactured for:
 World and Main (Cranbury), LLC
 324A Half Acre Rd.
 Cranbury, NJ 08512 USA
 800-221-6895
 www.comfortzoneproducts.com

Rev. 07/2021