



USE & CARE INSTRUCTIONS

INSTALLATION

A bad installation can derail any great product. During the installation process, please make note of safety warnings and follow installation instructions closely. Installation instructions include a specifications sheet which list every part used in the product and can make the requesting of replacement parts more seamless.

FREQUENCY

Equipment should be checked for wear, loose hardware or vandalism at least every 6 months. Depending on the location of the equipment (i.e., high-use areas) it may need to be inspected more frequently. Damage caused by wear or vandalism can be major factors in injury causing situations. If a part is broken or worn, it should be replaced immediately.

FINISHES & MATERIALS

All equipment should be free of rust and should be repaired whenever necessary to deter further rusting and damage. Wood and Recycled Wood products should be inspected for splitting, splinters or stain fading.

HARDWARE

Proper maintenance of equipment requires regular tightening of all bolts, nuts, and setscrews. All protruding bolts should be covered or cut off and finished smooth. Sharp edges on pipes should be capped or removed.

MODIFICATIONS

Adaptations or modifications to the product in the field could create a safety concern and can void the warranty. If the product is damaged, please contact Customer Service for assistance.

CLEANING

Products can be wiped down with a mild cleaner like Simple Green or just soap and water.

Regular maintenance is necessary in this and all park and recreational equipment to insure the safety of the user.