


USE AND CARE GUIDE

LOCK NUT WRENCH

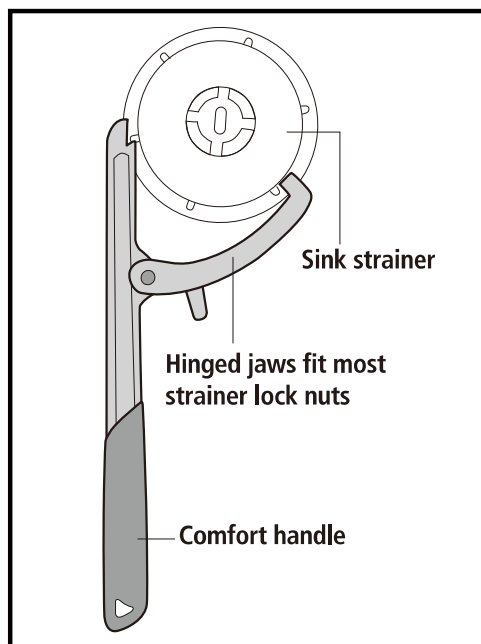

- Spring-loaded Jaw Automatically Adjusts to Fit Most Sink Strainer Lock Nut
- For Removing and Installing Sink Strainer
- Dual Material Cushion Grip

Read All Instructions Carefully Before Using:

1. Beneath the sink, loosen the drain pipe slip nuts
2. Remove drain pipe from sink strainer. Note: To adjust diameter of lock nut wrench, simply use your fingers to apply pressure to hinged jaw
3. Insert a basket strainer wrench into the base of the basket to prevent it from turning. Grip strainer lock nut with wrench and turn counter-clockwise until loose
4. Repair or replace strainer (if replacing sink strainer, follow the manufacturers' directions for installation), re-tighten strainer with the lock nut wrench until tight. Be careful not to over tighten
5. Reconnect the drain pipe and tighten slip nuts
6. Check for leaks

Tools Needed for Use: Basket Strainer Wrench

Warranty

If your Husky hand tool ever fails, bring it back and we will replace it Free. For details on this full warranty, visit your nearby store or call 1-888-HD-HUSKY.