


USE AND CARE GUIDE

6 FT WIDE WICKED WOODS ANIMATED LED CREEPING SPIDER

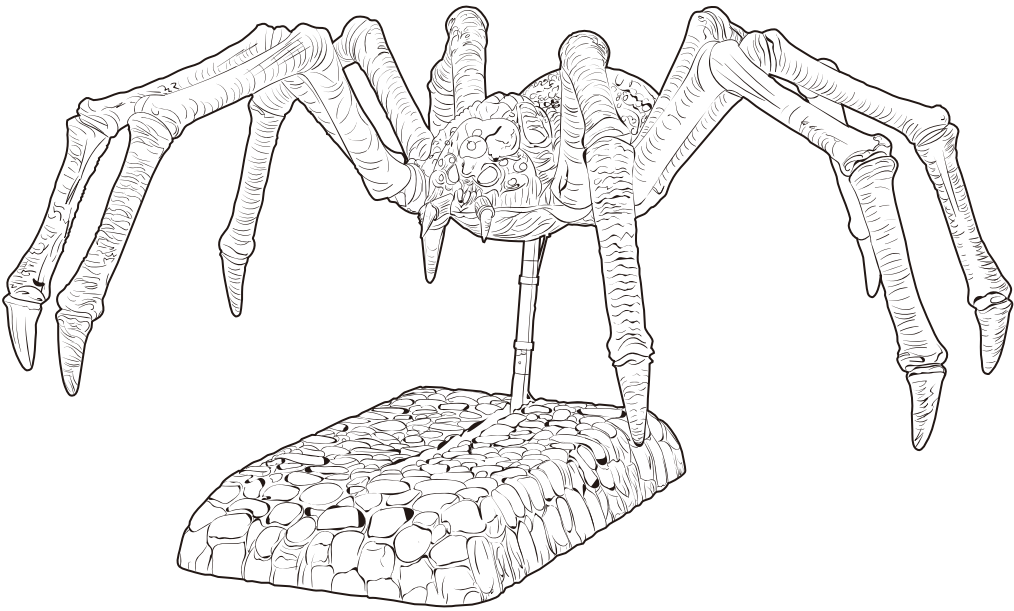


Questions or feedback? Our customer support team is ready to help! To learn more about our policies, get assembly assistance, shop parts, and connect to our community, visit svservice.com or email us at customerservice@svius.com or call Home Accents Holiday Customer Service 8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-855-HD-HOLIDAY (1-855-434-6543)
HOMEDEPOT.COM


PARTS LIST

- A. Base x 1
- B. Base Cover x 1
- C. Support Pole x 1
- D. Body x 1
- E. Left Legs x 4
- F. Right Legs x 4
- G. Stakes x 4
- H. Small Parts Bag x 1
- I. Adapter* Outdoor x 1

Power Adapter * Spec
Input: 100-120V~50/60Hz
Output: 5.9V --- 4.0A
Wattage: 23.6W

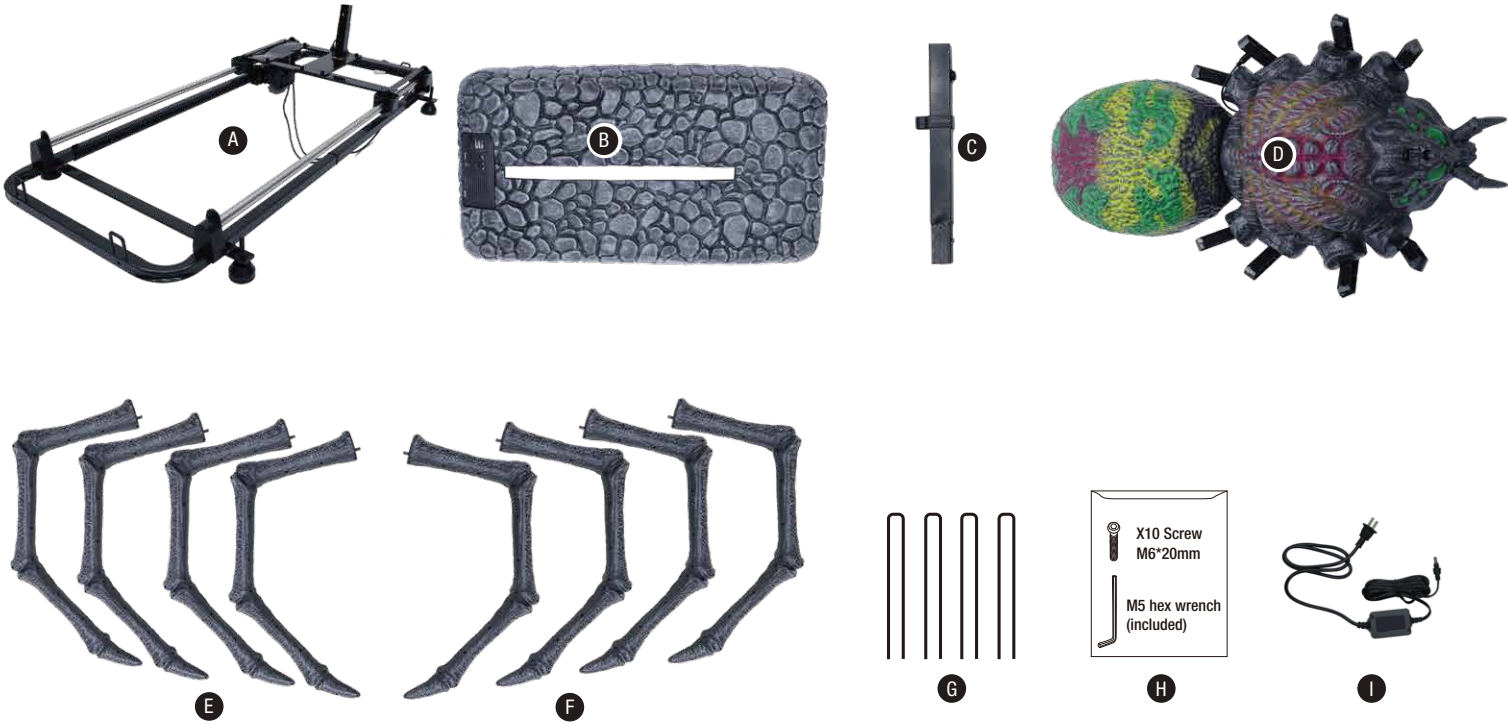

NOTE: Throughout the instructions, Right and Left are from the character's point of view.

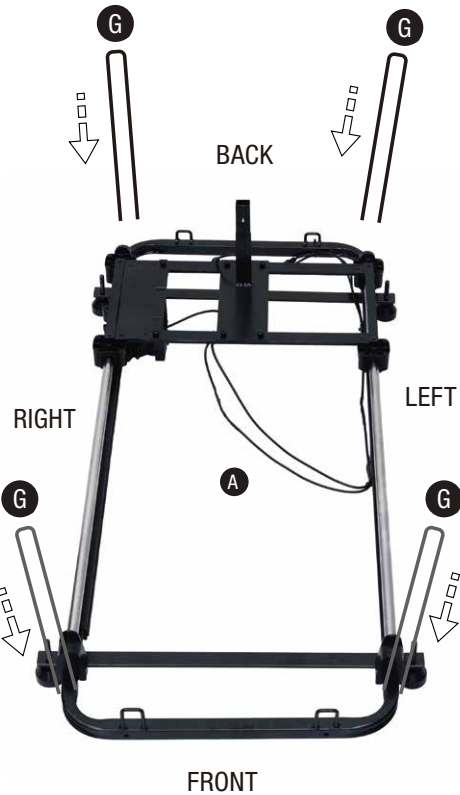


1.1

NOTE: When connecting cables, ensure that the arrow indicators on each cable end are lined up with and pointing at each other. There is also a groove and a rod like protrusion by these arrows that fit into each other. Then firmly press the cables together. Rotate the cable cap clockwise onto the threading of the corresponding cable until firmly in place.



1.2

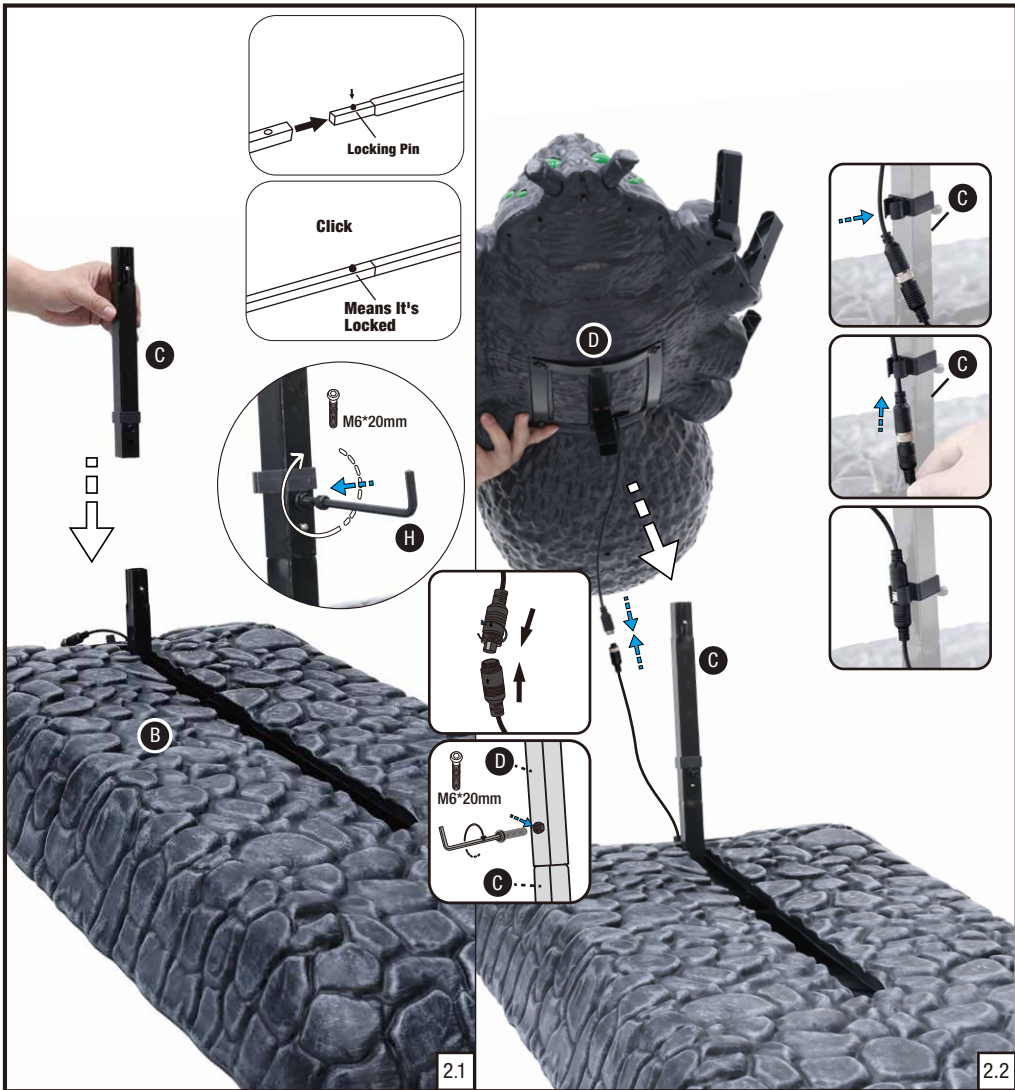

2.1

2.2



**6 FT WIDE WICKED WOODS
ANIMATED LED CREEPING SPIDER
IS NOW FULLY ASSEMBLED. PLUG
IN AND TURN ON TO LET THE FUN
BEGIN!**



I
ADAPTER

