## Parts List DXH1000

REF. #ITEM#DESCRIPTION	REF. #ITEM#DESCRIPTION
141054COVER, TOP, SHELL, OUTER	1841031CLIP, SENSOR, CAPILLARY TUBE
2N/APANEL, FRONT	19 41052 ELEMENT, HEATING
3N/APANEL, REAR	2041066BUSHING, STRAIN, RELIEF
441057SHIELD, RADIATION, TUBE	2141067 MOTOR, FAN
541058 BASE, PLATE	2241068CONTACTOR, ELEMENT, HEATING
6N/APANEL, SIDE, LEFT	2341069BLOCK, TERMINAL, WIRING
7N/APANEL, SIDE, RIGHT	2441070CAPACITOR, MOTOR, STARTER
841061BRACKET, MOUNT, MOTOR	2541032SWITCH, HIGH LIMIT, 77C
9N/ABRACKET, WIRE MOUNT	2641053BOARD, CIRCUIT, HEAT ON, INDICATOR
10N/ABLOCK, TERMINAL, BRACKET	2740656HANDLE, CARRY
1141051 DOOR, ACCESS	2841035SWITCH, LIGHTED, 10KW/7KW
1241063 BLADE, FAN	2941027KNOB, THERMOSTAT, PLASTIC
1341064 GUARD, GRILL, FRONT	3041034THERMOSTAT, TEMPERATURE, AMBIENT
1441065GUARD, GRILL, REAR	3141035SWITCH, LIGHTED, ON/OFF
1541029SUPPORT, HEATING ELEMENT	3241036BUSHING, PLASTIC, WIRE
16N/APANEL, CONTROL, PLASTIC	3341062FRONT SCREEN ASSEMBLY
1741030FOOT, RUBBER	3441099RADIATION SHIELD TUBE W/BRACKETS

## **A** WARNING:

Use only manufacturer's replacement parts. Use of any other parts could cause injury or death. Replacement parts are only available direct from the factory and must be installed by a qualified service agency.

## For Service

Please call Toll-Free 855-805-5745 www.dewalt.com Our office hours are 8:00 AM – 5:00 PM, EST, Monday through Friday. Please include the model number, date of purchase, and description of problem in all communication.

## DXH1000TS

