



User Manual

8-Inch Professional Chef Knife with Sharpener

MODEL: CH7CR8INCKG10

1. READ these instructions carefully before installing and operating the appliance. Keep them for further reference.
2. Record in the space below the "SERIAL/MODEL NUMBER" found on the back or bottom of your appliance and retain this information for future reference.

SERIAL NUMBER:

MODEL NUMBER:

DATE OF PURCHASE:

Save and staple your sales receipt to your manual for warranty coverage.

SAFETY INFORMATION



DANGER

DANGER - Immediate hazards which **WILL** result in severe personal injury or death



WARNING

WARNING - Hazards or unsafe practices which **COULD** result in severe personal injury or death



CAUTION

CAUTION - Hazards or unsafe practices which **COULD** result in minor personal injury

IMPORTANT SAFETY INSTRUCTIONS



WARNING

When using Knife, basic safety precautions should be followed, including the following.

1. READ ALL INSTRUCTIONS BEFORE USE
2. Store knife safely and out of reach of children. Handle with care as the knife is sharp and dangerous.
3. Handle with care and attention. Point cutting edge away from self and away from others when using or cleaning.
4. Do not use the kitchen knife for purposes other than meal preparation.
5. In case of damage or deformation, do not use knife. Have knife repaired by professional servicemen or repair facility.
6. Do not put it over a fire, and do not place knife beside the fire or in water for a long period, which may lead to structural changes, blunting, rust and damage.
7. After each use, knife should be properly rinsed and wiped. When dry, knives should be kept in a ventilated place free from moisture.
8. Knife shall be used according to the intended uses in a proper and professional way, otherwise it will lead to blade dent, breakage, rupture or tip bending. .
9. Do not bend knife. Knife can break or deform under strong force.
10. Knife shall always be placed and stored in their packaging or safe location to prevent spotting or deformities.

SAVE THESE INSTRUCTIONS
HOUSEHOLD USE ONLY

SET UP & USE

PRODUCT MAINTENANCE

1. Although the blade is made of high-quality stainless steel, if the blade has been exposed to salts or acid stains for extended periods without cleaning, when stored in a humid environment, the blades are susceptible to rusting.
2. After using, please clean with a soft sponge and kitchen detergent, then wipe off water and place knife back in block when dry.
3. Hand wash only.
4. It is recommended to sharpen the knife 1-2 times per month to maintain its sharpness.
5. When knife show signs of rusting, please use a soft sponge with detergent to clean, and rinse thoroughly; wipe off water and put back in the knife block after it is dried.

SHARPENING METHOD

1. Sharpening with a rod knife sharpener (Included)

- A rod knife sharpener is a professional tool for blunt knives. For best cutting results, blunt knives should be sharpened in a timely manner. Sharpening angle is more important than sharpening speed.



- Please always keep the blade around 20° against rod knife sharpener.
- Hold the rod knife sharpener with one hand and the knife with the other hand. Set the knife against the sharpener, pull the knife upward from the tail part of the blade to the tip part.
- Set the knife on the other side of the sharpener and pull it in order to sharpen the other side of the blade. Repeat steps in the 2nd and 3rd bullets five to ten times.

SET UP & USE

2. Sharpening method with a pull-through sharpener


- Hold the sharpener with one hand to fix it on the table, hold the knife with the other hand; put the blade into the sharpener and pull it quickly in an inward direction several times.
- Use it while it is oil-free; wet the sharpening area of the sharpener before using, and rinse to clean it after using.
- This appliance can be used with all knives, except for serrated blades with teeth.

Rough; Precision; Fine




3. Sharpening method with a whetstone

- Please soak the whetstone in water before grinding until no bubbles come out of the whetstone.
- Grind the knife on the whetstone as shown in the figure below, reciprocating motion is used for both sides of the blade.

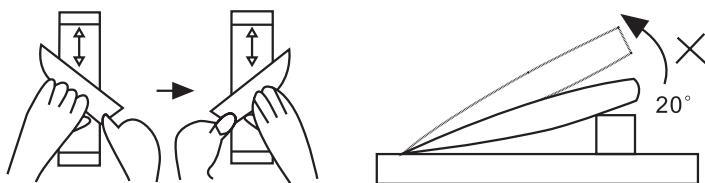

- After grinding several times, carefully touch the other side of the edge being ground with a finger; if rolled edge is found, stop grinding that edge immediately. Turn the blade over to grind the other side, continue grinding until rolled edge from other side of blade disappears.
- Please always keep the knife at an angle of 15°-20° with the whetstone; 20° angle for chopping, 20°-25° for bone knife.
- During sharpening, be careful not to touch the raised part of the whetstone surface. If the whetstone surface is not smooth, the knife will not get sharp. When the whetstone surface becomes uneven, please press the surface against a flat rock to grind till it becomes flat and smooth.

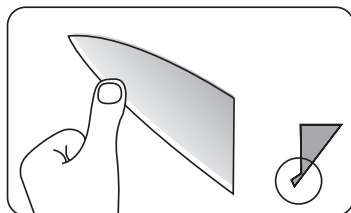

CUSTOMER SERVICE

CUSTOMER SERVICE

IMPORTANT

DO NOT RETURN THIS Appliance TO THE STORE

If you have a problem with this appliance, please contact the BH HOME GOODS LLC Customer Satisfaction Center at 1-908-349-1116.

DATED PROOF OF PURCHASE, MODEL # AND DATE CODE
REQUIRED FOR WARRANTY SERVICE

LIMITED WARRANTY

LIMITED WARRANTY

Commercial Chef brand is used under license. Any repair, replacement, or warranty service, and all questions about this appliance should be directed to BH HOME GOODS LLC at **1 (908) 349-1116** from the USA or Puerto Rico.

BH HOME GOODS LLC warrants to the original purchaser that the appliance will be free from defects in material, parts and workmanship for the period designated for this appliance. The warranty commences the day the appliance is purchased and covers up to a period of **1 year (12 months) for labor/1 year (12 months) for parts (manufacturing defects only)/carry in service.**

BH HOME GOODS LLC agrees that it will, at its option, replace the defective appliance with either a new or remanufactured appliance equivalent to your original purchase during the warranty period.

Exclusions: This warranty does not apply to the below:

1. If the appearance or exterior of the appliance has been damaged or defaced, altered or modified in design or construction.
2. If the appliance original serial number has been altered or removed or cannot be readily determined.
3. If there is damage due to power line surge, user damage to the AC power cord or connection to improper voltage source.
4. If damage is due to general misuse, accidents or acts of God.
5. If repair attempts are done by unauthorized service agents, use of parts other than genuine parts or parts obtained from persons other than authorized service companies.
6. On units that have been transferred from the original owner.
7. On appliances that have been purchased as refurbished, like new, second-hand, in a "As-Is" or "Final Sale" terms.
8. To appliances used in a commercial or rental setting.
9. To appliances used in settings other than ordinary household use or used other than in accordance with the provided instructions.
10. To damages for service calls for improper installations.
11. To glass parts and other accessory items that are included with the unit.
12. Transportation and shipping costs associated with the replacement of the unit.
13. Food loss for loss due to appliance failure or delay in service, repair or replacement.
14. Service calls to instruct you how to use your slow cooker.
15. Service calls to repair or replace the house fuse, reset the circuit breaker or correct the wiring in

the house.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER; BH HOME GOODS LLC. SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS Appliance, EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OF FITNESS FOR A PARTICULAR PURPOSE ON THIS Appliance IS LIMITED TO THE DURATION OF THE WARRANTY.

Some states do not allow the exclusion or limitations of incidental or consequential damages, or limitations on how long the warranty lasts. In these cases the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Obtaining Service: To obtain service, appliance literature, supplies or accessories please call **1 (908) 349-1116** to create a ticket for exchange/repair. Please make sure to provide the date of purchase, model number and a brief description of the problem. Our customer service representative will contact you or send detailed return instructions.

BH HOME GOODS LLC does not warrant that the appliance will work properly in all environmental conditions, and makes no warranty and representation, either implied or expressed, with respect to the quality, performance, merchantability, or fitness for a particular purpose other than the purpose identified within this user's manual. BH HOME GOODS LLC has made every effort to ensure that this user's manual is accurate and disclaims liability for any inaccuracies or omissions that may have occurred. Information in this user's manual is subject to change without notice and does not represent a commitment on the part of BH HOME GOODS LLC. BH HOME GOODS LLC. reserves the right to make improvements to this user's manual and/or to the appliances described in this user's manual at any time without notice. If you find information in this manual that is incorrect, misleading, or incomplete, please contact us at **1-908-349-1116**.

BH HOME GOODS LLC
27 Montgomery ST
STE 18
Hillside, NJ 07205



Under Licence by Commercial Chef
© 2022 BH HOME GOODS LLC