


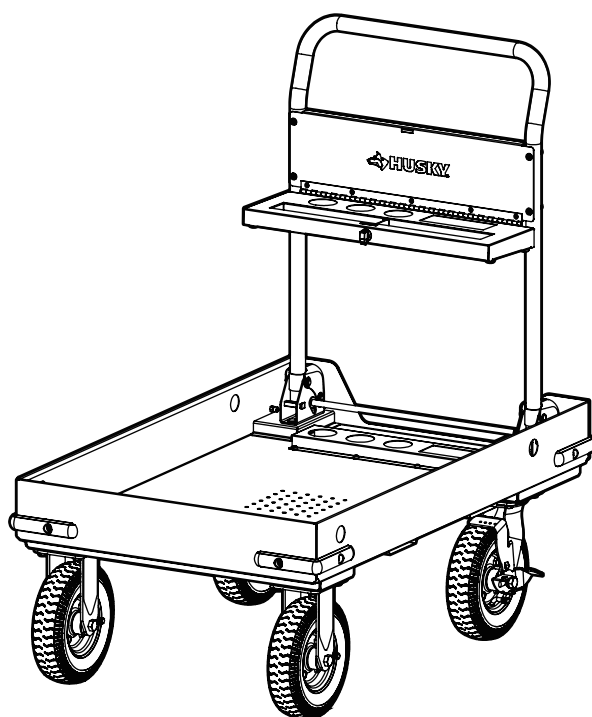

Item # 1012077087
Model # H38FOLDCART

USE AND CARE GUIDE

38in Folding All-Terrain Cart



Husky All-Terrain
Cart Collection



Assembly video

Questions, problems, missing parts?
Before returning to the store, call Husky Customer Service
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-888-HD-HUSKY

HUSKYTOOLS.COM

THANK YOU

We appreciate the trust and confidence you have placed in Husky through the purchase of this product. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Husky!

Table of Contents

Table of Contents	2
Safety Information	2
Warranty	3
Specifications	3
Package Contents	3
Hardware Included	3
Alternative Tools For Assembly (Not Included)	3

Assembly.....	5
Operation.....	6
Maintenance.....	8
Replacement Parts.....	9

Safety Information

1. Do not exceed the maximum load capacity.
2. Use the brakes when this product is not being moved.
This prevents the product from rolling.
3. Do not tow the product with power equipment.
4. Do not alter this product in any manner other than what is stated by the manufacturer.
5. Do not allow children to use this cart without supervision.
6. Do not store the product outside or keep the product in a corrosive environment. Inspect the product and tires for damage or excessive wear or corrosion before each use.
7. Check and maintain adequate tire pressure. Do not over inflate the tires. Max air pressure is 30 PSI.



CAUTION: Do not use the push handle as a point of leverage to lift the unit off of the ground when the cart is loaded. Handle is not intended to withstand the force of vertical lifting, and is only designed to aid in the movement of unit around on casters. Failure to adhere to this warning may cause handle to break and cause personal injury and/or product damage.



CAUTION: Do not sit or stand on this product. You may fall which may cause personal injury or product damage.



CAUTION: Be careful when using this product on uneven surfaces. Ensure the load is evenly distributed and secured in the cart before moving to avoid accidental tipping or loss of cargo.

Warranty

The manufacturer warrants the product to be free from defects in materials and workmanship for a period of three (3) years from date of purchase. This warranty applies only to the original consumer and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alteration neglect or mishandling. This warranty shall not apply to any product that is found to have been improperly installed, setup, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, faulty installation, or any other failure not relating to faulty material or workmanship. This warranty shall not apply to the finish on any portion of the products such as surface and/or weathering, as this is considered normal wear and tear.

The manufacturer does not warrant and specifically disclaims any warranty, whether express or implied, of fitness for a particular purpose, other than the warranty contained herein. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss or damage, including but not limited to any labor/expense costs involved in the replacement or repair of said product.

Contact the Customer Service Team at 1-888-HD-HUSKY or visit www.huskytools.com.

Specifications

Maximum load capacity

800 lbs.

Package Contents

HARDWARE INCLUDED



NOTE: Hardware not shown to actual size.



AA



BB



CC



DD


ALTERNATIVE TOOLS FOR ASSEMBLY (Not Included)



*12 mm wrench or socket

Part	Description	Quantity
AA	M8 x 25 Bolt	16
BB	Washer	16
CC	M6 x 16 Bolt	16+1(extra)
DD	Hex Key	1

Package Contents (continued)

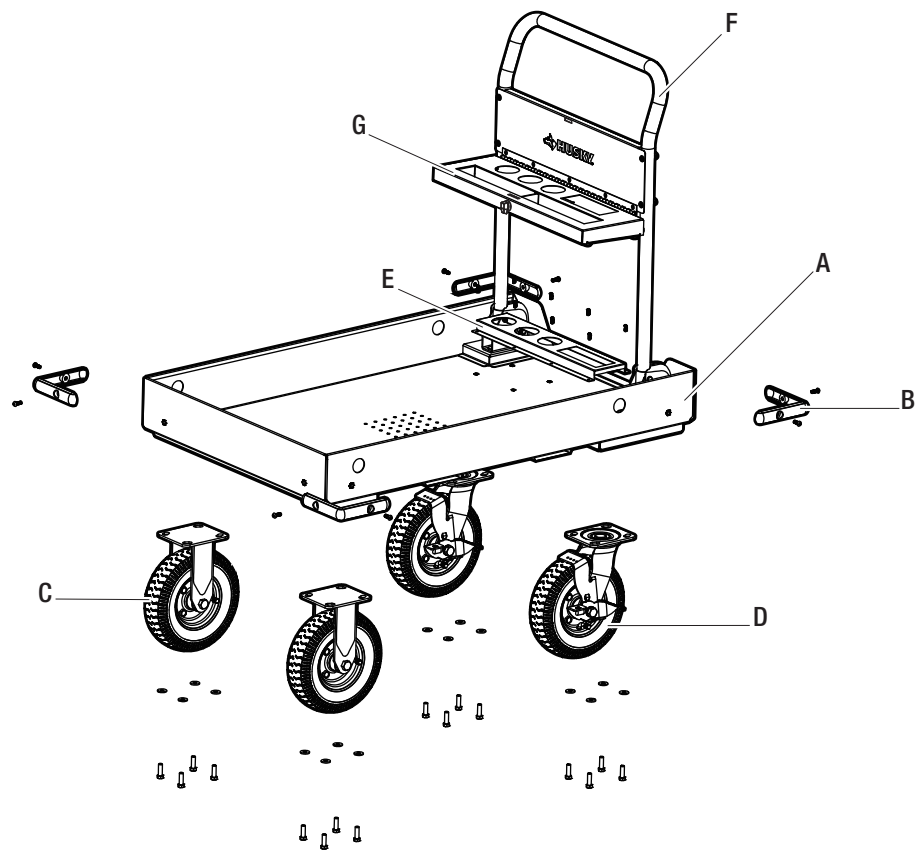

Part	Description	Quantity
A	Cart	1
B	Plastic Bumper	4
C	Fixed Caster	2
D	Swivel Caster	2
E	Tool Holder Plate	1
F	Folding Handle	1
G	Folding Shelf	1

Assembly




CAUTION: Two people are recommended for assembly.

1 Attaching the casters

- Carefully, lay the Cart (A) upside down. Use packaging material to protect the finish.
- Attach the Swivel Casters (D) to the unit, on the same side as the handle, insert Bolts (AA) and Washer (BB) through the Swivel Caster (D) into the Cart (A).
- Tighten the caster bolts with 12 mm wrench/socket or Hex Key (DD).
- Repeat this process for the Fixed Casters (C) on the opposite side of the Cart (A).
- Carefully, return the Cart (A) to its upright position.




CAUTION: Do not over tighten the bolts.

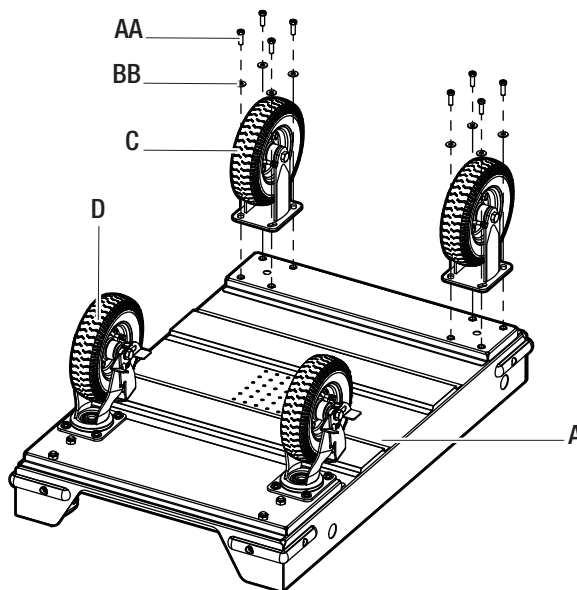


2 Attaching the plastic bumper

- Position the Plastic Bumper (B) over the holes on the 4 corners of the Cart (A).
- Attach Plastic Bumper (B) using 2 pcs Bolts (CC) per Bumper and supplied Hex Key (DD).

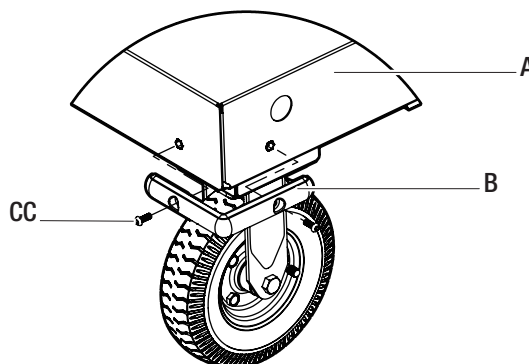

3 Attaching the tool holder plate

- Position the Tool Holder Plate (E) over the holes on the Cart (A). Ensure the tool holder openings line up with the folding tray above.
- Attach using 8pcs Bolts (CC) with supplied Hex Key (DD).

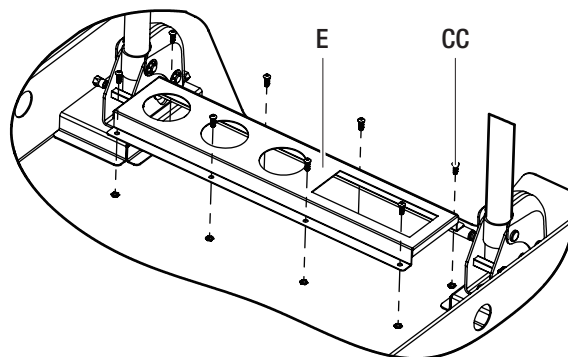

1 Raising and lower the handle

Step 1

- Remove all cargo from the Cart (A) and Folding Shelf (G).

Step 2

- Raise the Folding Shelf (G) to the backplate and secure into place by turning the twist lock 90°.




Step 3

- With your foot, apply downward force to the release bar at the base of the Folding Handle (F) to release the Handle.

Step 4


- Carefully lower the Handle (F) into the body of the Cart (A).
- To raise the Folding Handle (F), simply lift the Handle (F) to the vertical position until you hear it click into place. Then lower the Folding Shelf (G).

Step 2

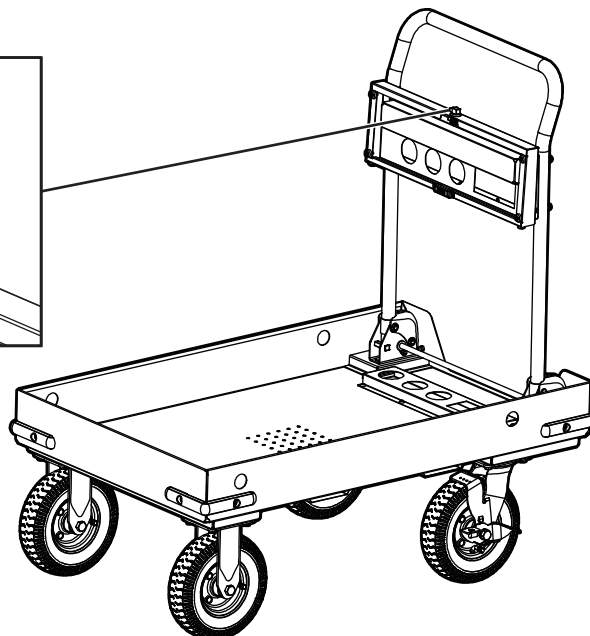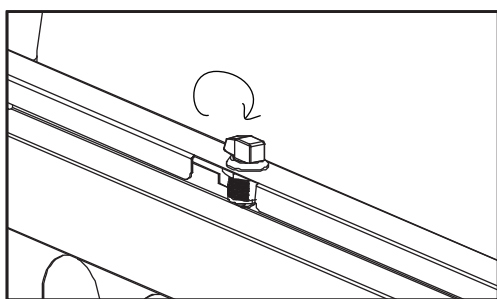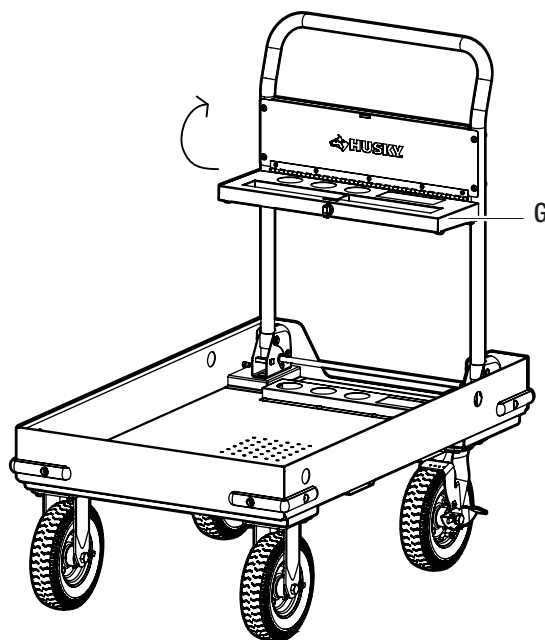


Operation (continued)

Step 3

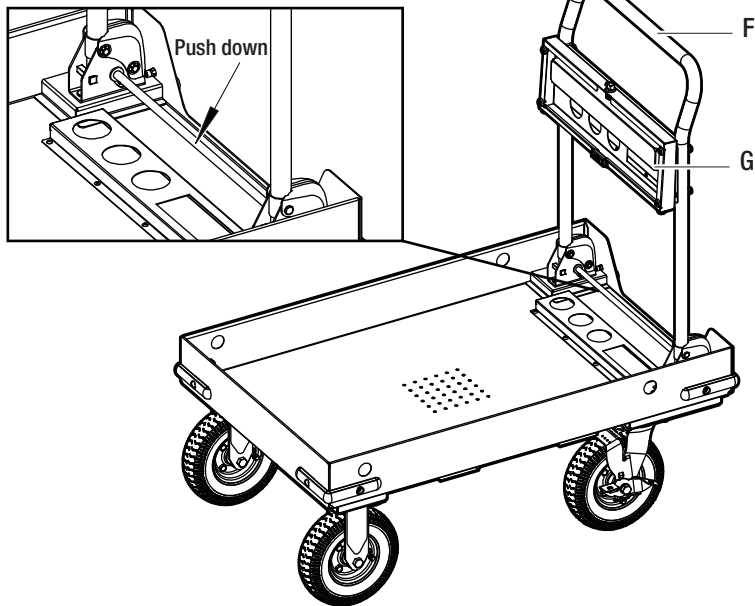


Step 4

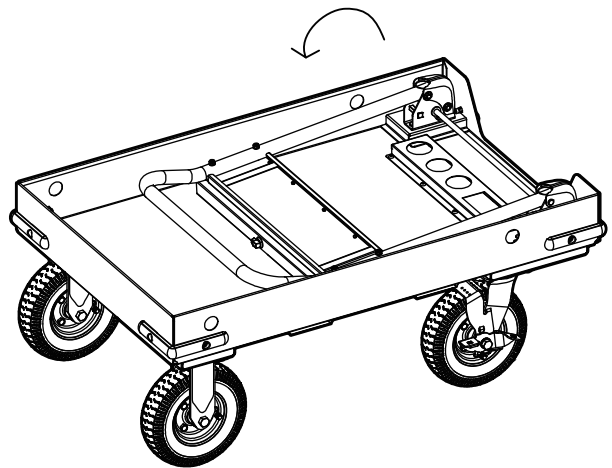


2 Storing the Cart

- The Cart can be stored in the vertical position.
- The Handle (F) should be in the folded position, facing down and the magnetic catch on the bottom of the Folding Shelf (G) will help secure the Handle (F).

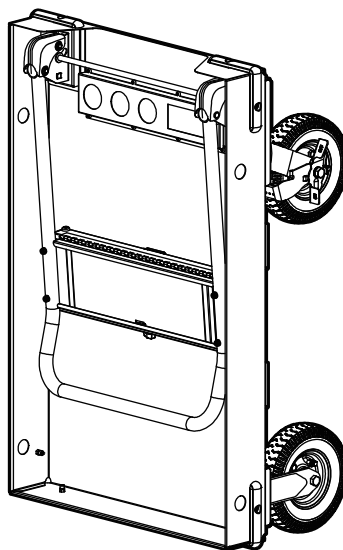


Caster maintenance

- Grease the casters annually using high-quality bearing grease.
- Check and maintain adequate tire pressure. Do not over inflate the tires. Max air pressure is 30 PSI.

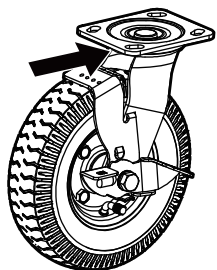


- Periodically grease or lubricate the folding latch mechanism on the Folding Handle (F).

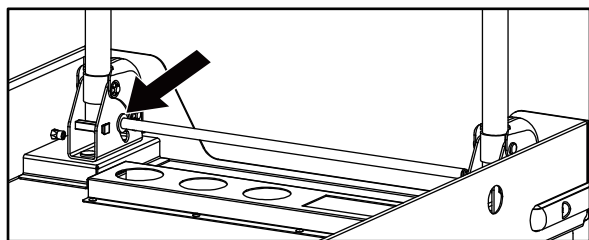

- Periodically clean and dry the cart with a mild detergent and water.
- Remove grease and oil with a standard nonflammable cleaning fluid.
- Do not allow water or debris to remain inside the cart.
- The Cart is designed with weep holes located in the center of the bottom tray. Keep the weep holes clear of debris to facilitate drainage.

Replacement Parts

For assistance with replacement parts please call 1-888-HD-HUSKY.

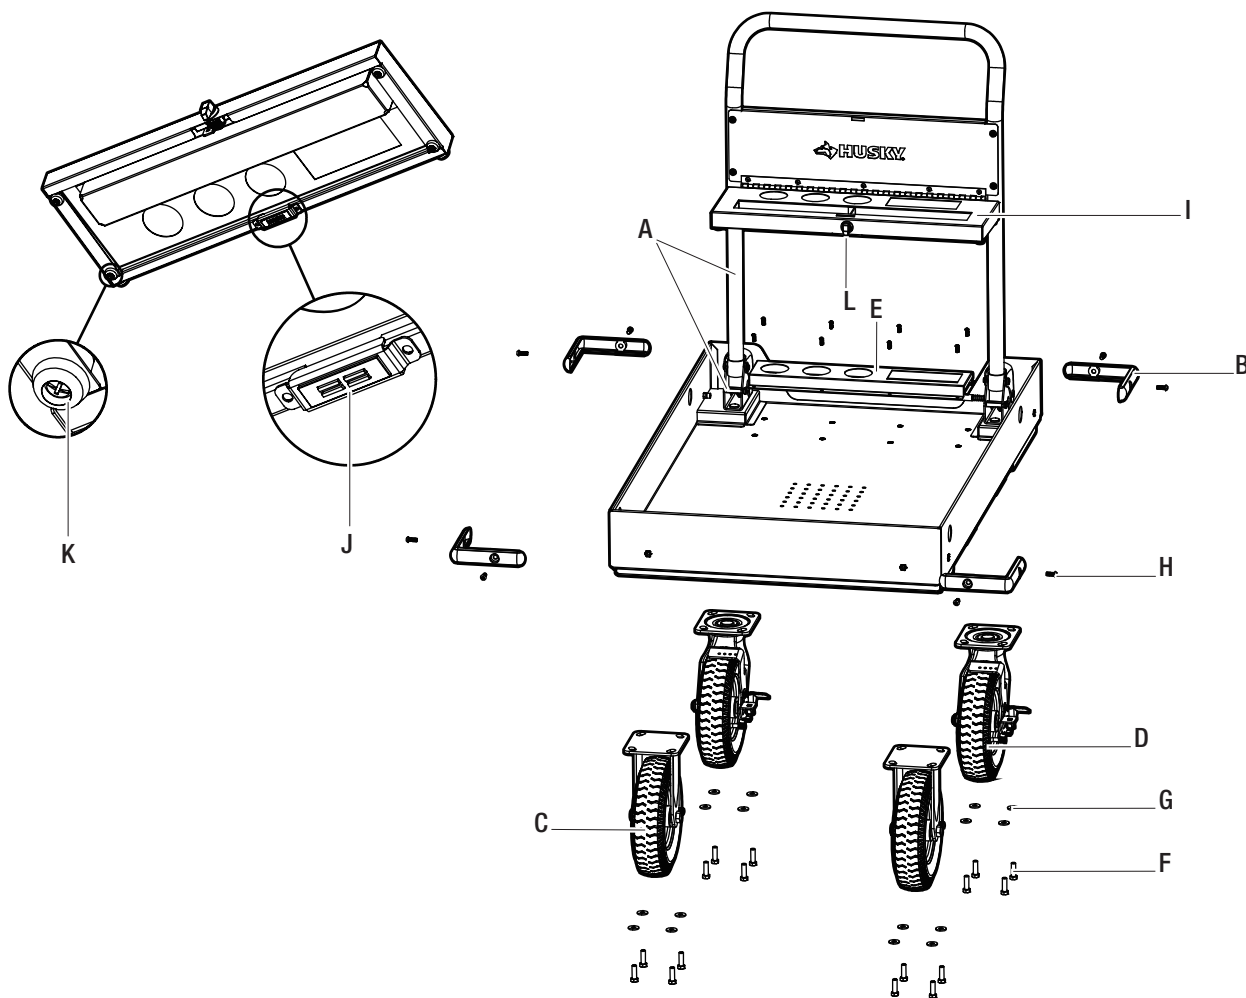

Part	Description	Quantity
A	Folding Mechanism (include Folding Handle)	1
B	Plastic Bumper	4
C	Fixed Caster	2
D	Swivel Caster	2
E	Tool Holder	1
F	Castor Bolt	16
G	Castor Washer	16
H	M6 x 16 Bolt	16
I	Folding Shelf	1
J	Magnet	1
K	Rubber Pad Bumper	6
L	Twist Lock	1



Questions, problems, missing parts? Before returning to the store,
call Husky Customer Service
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-888-HD-HUSKY

HUSKYTOOLS.COM

Retain this manual for future use.