

HAUSLANE | chef^{SERIES}

INSTRUCTION, USE & CARE MANUAL



Model UC-PS38SS-30

Table of Contents

Safety Information.....	2	2. Take Off the Panel Filter.....	7
Warranty Information.....	3	3. Remove Bottom Cover & Attach the Adapter.....	7
Specifications.....	4	4. Jack Up the Hood.....	7
Parts Included.....	4	5. Screw It Into Place.....	7
Tools Needed.....	4	6. Double-Check Installation & Remove Support...	7
Preparation: What to do before installation.....	5	7. Connect Damper & Check for Airtightness.....	8
1. Read This Manual.....	5	8. Plug the Range Hood In.....	8
2. Gather Your Tools.....	5	9. Reinstall Bottom Cover & Panel Filters.....	8
3. Make Sure the Unit Works.....	5	10. Keep This Manual.....	8
4. Ensure There is Proper Height Clearance.....	5	How to Use Your Range Hood.....	8
5. Check Your Power Supply	5	Using the Front Control Panel.....	8
6. Check Ducts and Install Adapter.....	5	How to Use Steam Auto-Clean.....	9
7. Prepare the Cabinet (Soffit).....	5	Basic Maintenance Instructions.....	10
8. Find a Helper.....	5	Maintaining the Grease Filter.....	10
How to Install Your Range Hood.....	7	Maintaining the Lighting.....	10
1. Power the Range Hood.....	7	Cleaning Your Range Hood.....	10
		Troubleshooting Tips.....	11
		Contact Hauslane.....	12

Safety Information

Before installing your range hood, read the entire instruction manual. Installers, leave this manual with the homeowner.

WARNING

SUITABLE FOR USE IN HOUSEHOLD COOKING AREA ONLY. TO REDUCE THE RISK OF FIRE, ELECTRICAL SHOCK, OR INJURY, OBSERVE THE FOLLOWING:

1. Use this range hood only in the manner intended by the manufacturer. If you have the questions, contact Hauslane at 1-800-929-0168 or email at info@Hauslane.com.
2. Before servicing or cleaning, switch power off at service panel and lock service panel to prevent power from being switched on accidentally. When the service disconnecting means cannot be locked, securely fasten a prominent warning device, such as a tag, to the service panel.
3. Installation work and electrical wiring must be done by qualified personnel in accordance with all applicable codes and standards, including fire-rated construction codes and standards.
4. Sufficient air is needed for proper combustion and exhausting of gases through the flue (chimney) of fuel-burning equipment to prevent back drafting. Follow the heating equipment manufacturer's guidelines and safety standards such as those published by the National Fire Protection Association (NFPA), and the American Society for Heating, Refrigeration and Air Conditioning Engineers (ASHRAE), and the local code authorities.
5. When cutting or drilling into wall or ceiling, do not damage electrical wiring and other hidden utilities.
6. Ducted fans must always be vented to the outdoors.
7. Do not use this unit with any solid-state speed control device.
8. To reduce the risk of fire, use only steel ductwork.

9. This unit must be grounded.

TO REDUCE THE RISK OF A RANGE TOP GREASE FIRE:

1. Never leave surface units unattended at high settings. Boil overs cause smoking and greasy spillovers that may ignite.
2. Heat oils slowly on low or medium settings.
3. Always turn hood ON when cooking at high heat or when cooking flaming foods.
4. Clean ventilating fans frequently. Grease should not be allowed to accumulate on fan or filter.
5. Use proper pan size. Always use cookware appropriate for the size of the surface element.

WARNING

TO REDUCE THE RISK OF INJURY TO PERSONS IN THE EVENT OF A RANGE TOP GREASE FIRE, OBSERVE THE FOLLOWING*:

1. SMOTHER FLAMES with a close-fitting lid, cookie sheet or metal tray, then turn off the burner. BE CAREFUL TO PREVENT BURNS. IF THE FLAMES DO NOT GO OUT IMMEDIATELY, EVACUATE AND CALL THE FIRE DEPARTMENT.
2. NEVER PICK UP A FLAMING PAN as you may be burned.
3. DO NOT USE WATER, including wet dishcloths or towels. This could cause a violent steam explosion.
4. Use an extinguisher ONLY if:
 - A. You own a Class ABC extinguisher and you know how to operate it.
 - B. The fire is small and contained.

- C. The fire department has been called.
- D. You can fight the fire with your back to an exit.

*Based on "Kitchen Fire Safety Tips" published by NFPA.

⚠ CAUTION

1. For general ventilating use only. Do not use to exhaust hazardous or explosive materials and vapors.
2. To avoid damage and noisy and/or unbalanced impellers, keep drywall/construction dust, etc. off power unit.
3. Mount your range hood so that the bottom of the hood is 24" to 30" above the cooking surface. The minimum hood distance above cooktop must not be less than 24"; any installation less than 24" may cause overheating and cause damage to the range hood, HAUSLANE does not warrant this improper installation.

4. Two to three installers are recommended because of the larger size and weight of this hood.
5. To reduce the risk of fire and to properly exhaust air, be sure to duct air outside. Do not exhaust air into spaces within walls and ceiling or into attics, crawl space or garages.
6. Because of the high exhausting capacity of this hood, you should make sure enough air is entering the house to replace exhausted air by opening a window close to or in the kitchen.
7. Use with approved cord-connection kit only.
8. Please read product specification label on range hood for further information and requirements.

Warranty Information

This range hood is warranted to the original purchaser to be free of defects in material and workmanship for two (2) years from the date of purchase.

Our obligation shall be limited to the repair or replacement of a unit (at our discretion) that may prove, by our sole examination, to be defective under normal use and service during the warranty period. We may issue credit in the amount of the invoice value of the defective product (or a percentage of it according to use) in lieu of repair or replacement. Any failure of this product that is not traceable to a defect in material or workmanship is not covered by this warranty. These non-warrantable items include, but are not limited to:

- Any defects or damage to light bulbs
- Change in color or finish due to chemical usage
- Improper installation not in accordance with the instructions
- Dents, bumps, and scratches incurred during shipping, handling, or installation
- Damage caused by failure to follow care and cleaning guidelines, including damage caused by the use of abrasive cleaners
- Alterations made to the unit by the purchaser or installer
- Damage caused by accidental impact, fire, flood, freezing, and normal wear
- Bends and warping caused by forced connections, over-tightened fittings, and inadequate support during installation

A thorough inspection must be made before installation and any damage must be promptly reported. We will not be liable for failures or damage that could have been discovered or avoided by proper inspection and testing prior to installation.

Incidental repairs that would involve a minimum of time and effort on behalf of the purchaser will not be considered warranty work and no compensation will be deemed forth coming.

This warranty is non-transferable and shall be voided if the unit is removed from its initial installation or if it is not installed following the instructions.

Under no circumstance shall we be held liable for personal injury or property damage resulting from improper installation or use of this product. We will not be held liable for inconvenience caused by loss of use of this product, costs incurred for labor or materials, removal and installation of replacement units, or any other incidental or consequential damages. Costs relating to obtaining access for repair or replacement are the responsibility of the user.

This warranty does not extend to commercial and institutional installation or use.

Warranty Claim Procedure

If a claimable defect occurs, please contact our customer service team at 1-800-929-0168 (8 a.m. - 5 p.m., PST, Monday - Friday). or email us at info@hauslane.com Before you make your claim call, please ensure that you have:

- Description of the range hood
- Proof of sale
- Details regarding the defect
- Name(s) and address(es) of the owner and installer


Claims must be filled out in writing and returned within six (6) months of the appearance of a defect. Failure to comply with this stipulation will make this warranty null and void. We reserve the right to a thirty-day (30) delay following the receipt of a claim in which to inspect the product. We assume no responsibility for labor costs, removing or replacing a previously installed product, transportation, or the return of a product.

Specifications


Dimentions UC-PS38SS-30	Volts	Hertz	Fan CFM	Speeds	Light Wattage	Stainless Steel Grade
29.7" W 22.9" D 8.2"H	120	60	950	6	3W (LED)	430

Package Contents

- 1 Hood
- 2 Round Adapter
- 3 (2) LED Light
- 4 Rubber Gasket
- 5 Philips Head Sheet Metal Screws
- 6 Grease Collector
- 7 Water Tray
- 8 User Manual

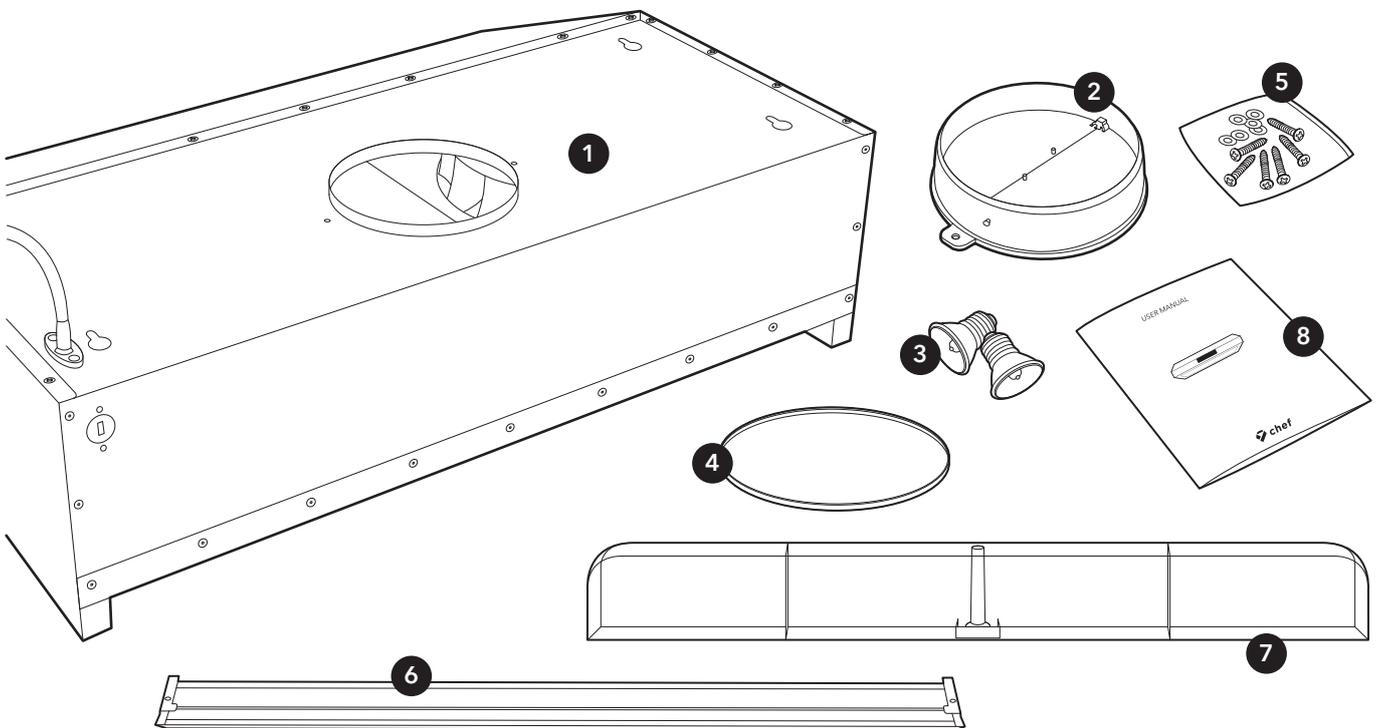

Tools Needed

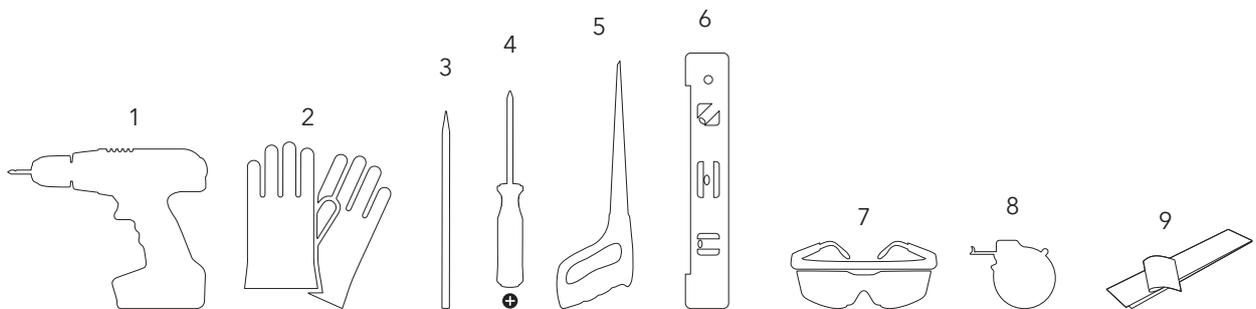

- 1 Electric Drill & Extended length head driver bit
- 2 Safety Gloves
- 3 Pencil
- 4 Philips Screwdriver
- 5 Keyhole Saw
- 6 Level
- 7 Safety Goggles
- 8 Measuring Tape
- 9 Aluminum Foil Tape

Preparation: What to Do Before Installation

Before installing your range hood, carefully follow these steps:

1. Read This Manual

Read through all the steps. If you fail to read the instructions carefully, we will not be responsible for damages incurred on your part. If you're not confident in your abilities to install the range hood properly, we recommend hiring a certified technician to complete the installation.

2. Gather Your Tools

Ensure you have all the necessary tools according to the previous page.

3. Make Sure the Unit Works

Unpack the unit and check your range hood for damage or missing parts. Plug it in to an outlet to ensure the fan and lights work. If anything is damaged or missing, contact the seller to get the issues solved. Don't throw away packaging until you're sure you are fully satisfied with the product.

4. Ensure There is Proper Height Clearance

Check that you'll be able to install the PS38 Range Hood at the correct height. To ensure the best performance, the bottom of your range hood must be between 24" and 30" from the top of the cooking surface. For gas ranges, the required distance is 30".





Do not exceed the maximum height of 30" while in operation. This is very important! Installing at the incorrect height could lead to drastic reduction in the range's performance or even cause a fire.

5. Check Your Power Supply and Ducts

Check to ensure your main voltage is in line with the required voltage outlined on the rating plate inside this hood. Also check the domestic power supply to guarantee adequate earthing before installation.

6. Check Ducts and Install Adapter

This range hood must be ducted to the outside using 6-inch ductwork. Use an existing duct or have one professionally installed. Don't connect the range hood to exhaust ducts that carry any type of combustion fumes like fireplaces, boilers, or any similar items. For best results, use a minimum number of transitions and elbows when running the ductwork. To install the adapter, place the black rubber gasket over the lip at the duct opening on the main body of the unit. Next, install the adapter over the lip and insert two screws (BB) to securely fasten the adapter.

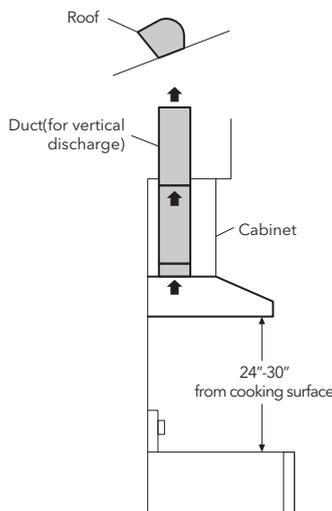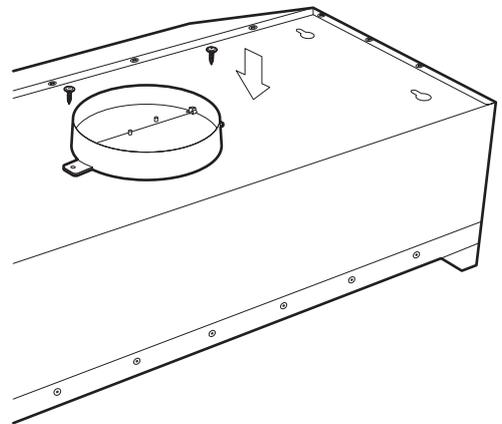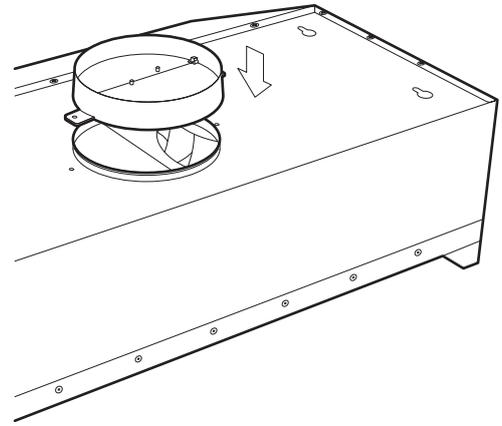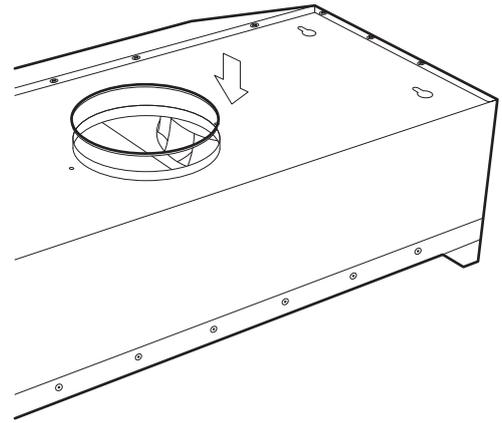

7. Prepare the Cabinet (Soffit)

Measure the size of the outlet adapter relative to the cabinet. If it is not already done, you'll need to cut an opening in the cabinet to ensure the outlet adapter and power cable can pass through. If you must do this, use a pencil and ruler to mark the area, then cut with a wall/keyhole saw.


If you're installing the UC-PS38 under a cabinet with a recessed bottom, we recommend using 4" wood fillers on each side to stabilize the cabinet for secure mounting.

9. Find a Helper




This range hood is best installed by two or more people due to its size and weight. Again, it is recommended to hire a certified technician for installation to reduce the risk of damage or injury.

Preparing the Cabinet

Cabinet with recessed bottom

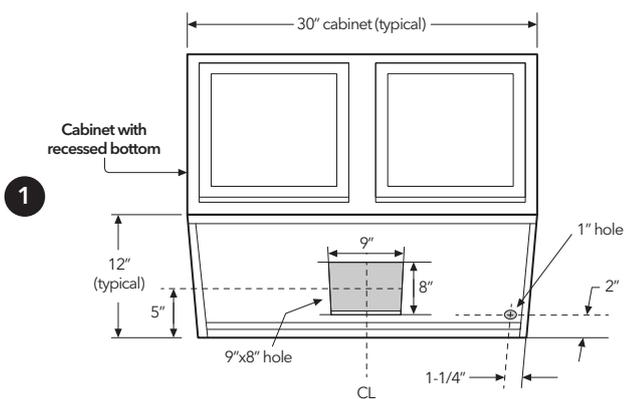

Cabinet or soffit with flush bottom

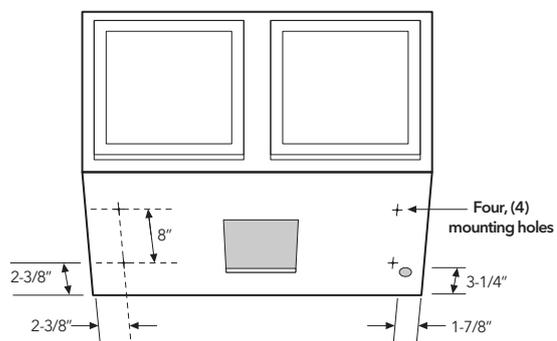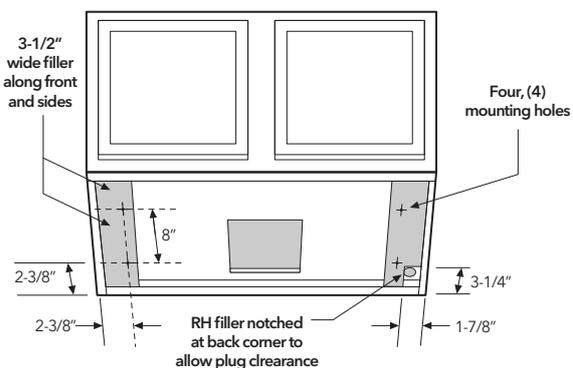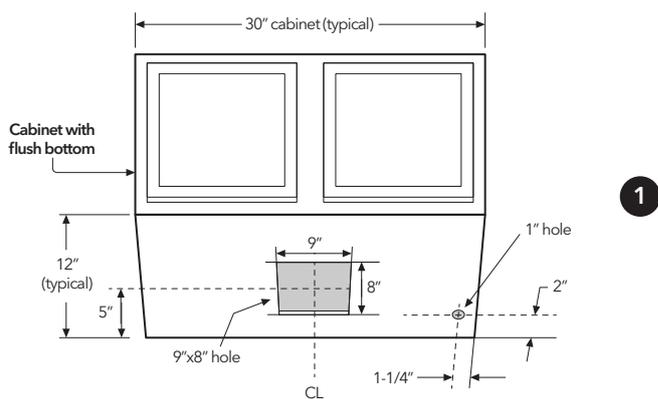

How to Install Your Range Hood

When you've completed all the preparation steps, you're ready to install your range hood.

1. Power the Range Hood

Power the range hood and test all functions before proceeding with the installation. Plug the power cord into an outlet and ensure that the light, fan, and clock work properly. Refer to page 9, "How to Use Your Range Hood," for instruction.



⚠ IMPORTANT: *If the range hood is not working properly, please contact us immediately (1-800-929-0168 / info@hauslane.com).*

2. Take Off the Panel Filter

Disengage the panel filter from the UC-PS38 range hood by putting slight pressure in pulling it down, then slowly lift the panel upward and remove gently from the bracket at the back.

3. Remove Bottom Cover & Attach the Adapter

Remove the bottom cover by carefully unscrewing the three screws as shown. Place the rubber gasket in the opening. Then, attach a round 6" outlet adapter and securely fasten the adapter with two screws.

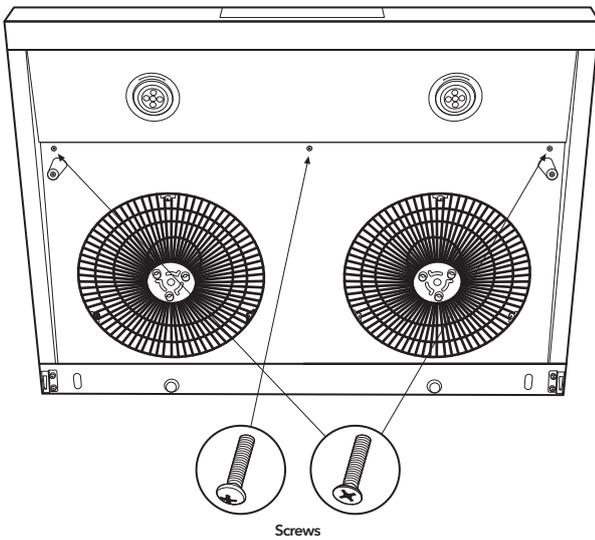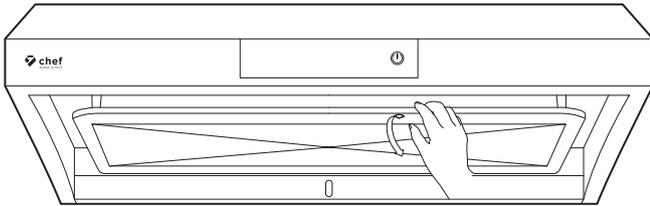


4. Jack Up the Hood

For this step, you will need one or two helpers.

If you aren't removing the range, place the plywood (30" x 24") over the range / cooktop to avoid possible damage. Put the cabinet jacks on the plywood and place the second piece of plywood over the two cabinet jacks. Using the cabinet jacks, lift the hood into its position under the cabinet. One person should operate the jack while another person steadies the range hood and situates it into the proper position. For cabinet jack operation, please refer to its manual.

Ensure that the adapter and power cord enter the cabinet openings and that the power cord is not pinched between the hood and the cabinet.

If you don't use a cabinet jack, you will need three people. Have two helpers holding the range hood in place while the third person inserts the screws to mount the range hood.

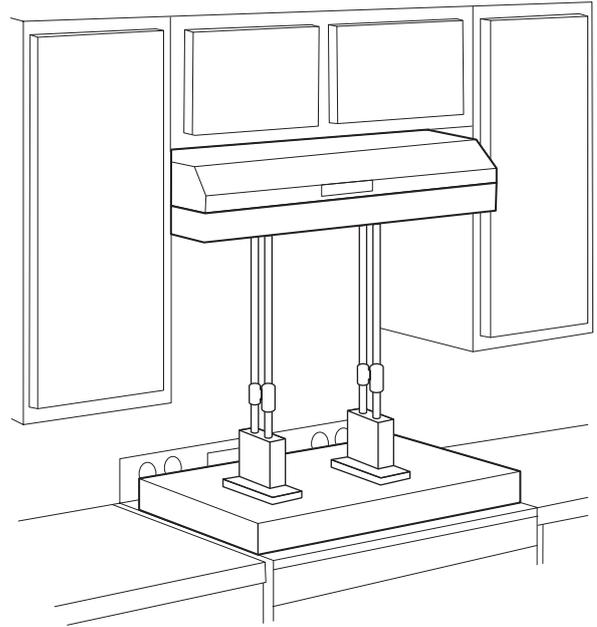


5. Screw It Into Place

From the bottom of the hood, carefully insert the mounting screws (AA) with washers into each of the pre-drilled mounting holes in the range hood. Start with the front left, then front right.

After the screws are in place for the front mounting holes, work on the rear left, then rear right. If you feel that you need to install the range hood more securely, you can use the additional two mounting screw holes in the front/center.

⚠ IMPORTANT: *Ensure the hood is perfectly leveled from back to front for the water cleaning process to function properly.*

Tip: To easily reach the rear mounting holes, use an extension tool for the power drill.

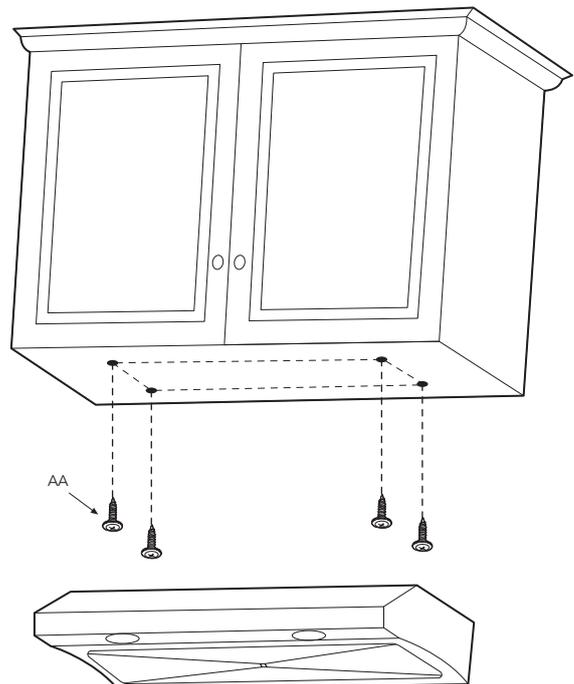


6. Double-Check Installation and Remove Support

Be sure that the hood is securely attached before removing the cabinet jacks and plywood.

7. Connect Damper & Check for Airtightness


Turn on the hood to make sure that the damper opens and closes freely. This will ensure better and quieter performance. Loosen the screw on the side of the adapter, then insert the duct into the adapter and tighten the screw to lock in its position. Make sure the duct is firmly attached to the adapter and wrap the joint with aluminum foil tape to make it air tight.

⚠ IMPORTANT: Be careful when connecting the vent pipe to the adapter. Excessive force might dislodge the damper and fell into the house, which may damage the motor.

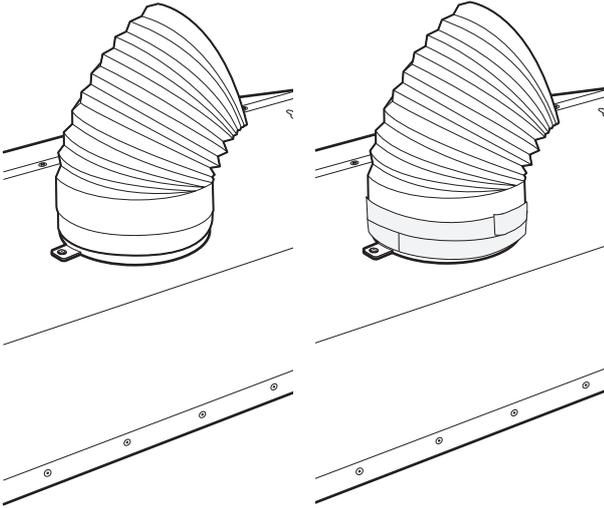

8. Plug the Range Hood In

Plug the power cable into an outlet.

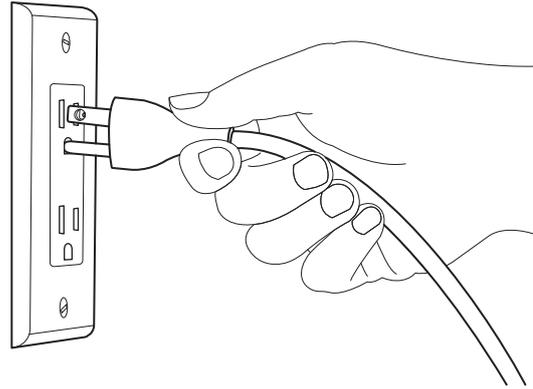

9. Reinstall Bottom Cover, Panel Filter and Grease Collector

Using the 3 screws you removed earlier, reinstall the bottom cover. Then, reinstall the panel filter by aligning the holes to the bracket in the rear of the hood. After the panel filter is secured by the brackets, lift it up to put it back in place.

10. Keep This Manual


Put this manual in a safe place and keep for further reference.

How to Use Your Range Hood

The UC-PS38 range hood is very simple to use and is operated entirely using the front control panel.

Using the Front Control Panel

Use the front control panel to adjust your range hood's settings and to turn it on/off.

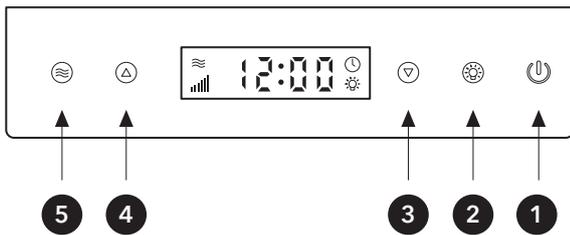

- 1- ON/OFF
- 2- LIGHT
- 3- DOWN
- 4- UP
- 5- STEAM AUTO CLEAN


How to Turn Light On/Off

This range hood has a single light setting. Press the lightbulb button (2) to turn the light on or off.

⚠ CAUTION: For halogen lamps never touch bulbs during operation; they can get very hot.


How to Set the Fan Speed

Press the on/off button (1) to turn the range hood on. To increase/decrease fan speed, use the up/down arrows (3 & 4) to find your desired fan speed.

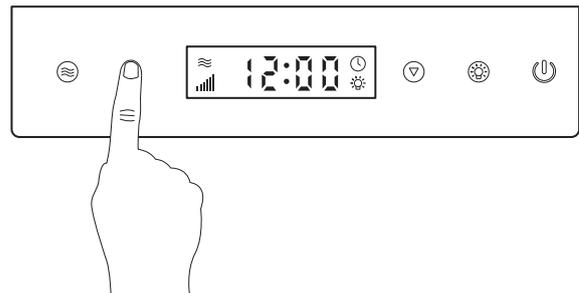

How to Set the Clock


Press the on/off button for 3 seconds. When the time starts flashing, touch the up and down arrows (3 & 4) to reach the desired hour. Then, press the on/off button once again to set the minutes using the up and down buttons.

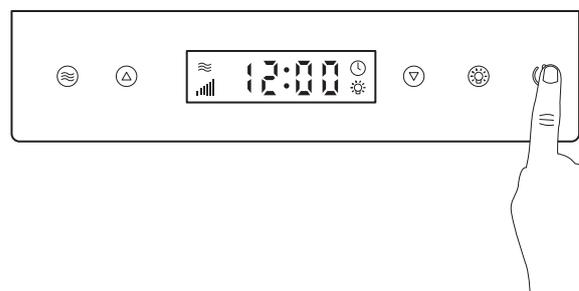


How to Use Steam Auto-Clean

The auto-clean feature makes it easy to clean the fan wheel and internal housing of the UC-PS38 range hood. Use it every 2 weeks or as frequently as possible.


1. Gently remove the metal grease tray from the rear of the hood.

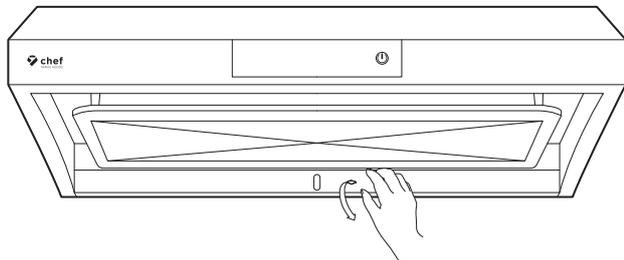

 2. Use the clear plastic tray that came with the range hood. Fill the middle section with clean water up to the water level mark.



 3. Gently attach the plastic tray to the range hood. Be careful to avoid spilling the water. Important: Make sure the plastic tray has a tight seal with the range hood after inserting. Mis-alignment or improper insert may lead to water not being properly drawn into the hood and the auto-clean function will not work properly.




4. Touch and hold the Steam Auto-Clean button (5) to start the 3-minute cleaning process.


Note: This process may be noisy. High-pressure water is spraying onto the fan wheels while they are spinning. Since the steam is ventilated out, you may not notice any steam.



 5. Towards the end of the process, dirty water will dispose into the plastic tray.garages.



6. When the cleaning process is complete, remove the plastic tray and dispose of the water. Reattach the metal grease tray to the range hood.

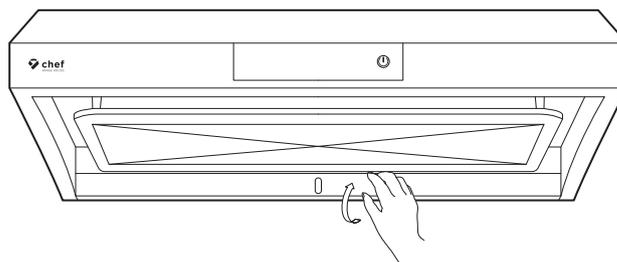

7. Reattach the metal grease tray to the range hood.


Basic Maintenance Instructions

Your range hood requires some easy routine maintenance to keep it running efficiently.

Maintaining the Grease Filter

Clean the grease filters frequently—we suggest cleaning every 2 weeks.

1. Remove the filter from the hood by gently pulling it down, then lift the panel upward and remove gently from the bracket at the back.


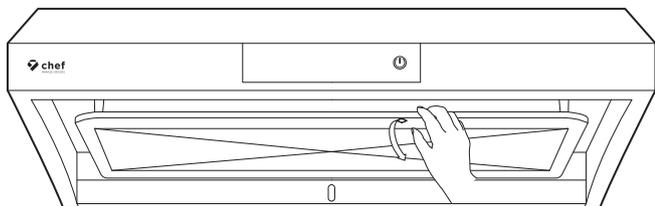


2. Clean the filter with warm water and detergent, or place them in the dishwasher. Be careful with the filters to avoid damage.
3. Let the filters dry completely.
4. Reinstall the filters.

Maintaining the Lighting

This range hood uses two lamps of 3W.

1. Turn off power. For halogen lights, let light bulbs cool completely before removing, if needed (about 5 minutes).
2. Wearing protective gloves, rotate the light bulb counterclockwise to disengage the bulb.
3. Place new lightbulb into the socket and rotate clockwise until fixed.

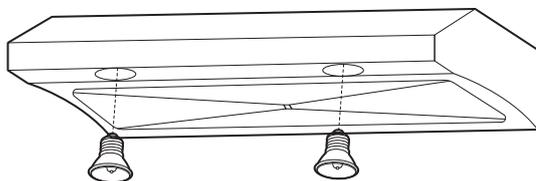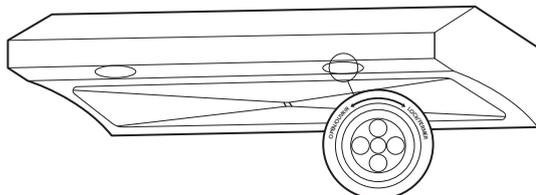

Cleaning Your Range Hood

This range hood will look great and function correctly for a long time with proper care. Here are a few do's and don'ts when caring for your range hood.

⚠️ WARNING: Failure to maintain basic standards of care and cleaning will increase the risk of fire.

DO	DONT
Clean the range hood with warm, soapy cloth or a stainless-steel polish.	Don't use cleaners or cloths that are corrosive or abrasive. Don't use detergents with ingredients like chloride, iodide, or fluoride.
Clean the hood in line with the grain of the stainless steel.	Don't leave dirt or soap residue on the hood. This can damage the surface. Wash the hood's surface and rinse immediately with clean water.
After cleaning with soap, rinse with clean water and wipe with a clean, dry cloth.	Don't let particles, especially construction particles (from sanding, etc.) enter the hood. Cover the hood during room renovations.
Check the ducts and vents regularly to make sure they are not clogged.	Don't use flammable agents near the stove, as these can cause explosions.

Troubleshooting Tips

⚠ WARNING: Failure to maintain basic standards of care and cleaning will increase the risk of fire.

Problem	Solution
My range hood won't work.	<ol style="list-style-type: none"> 1. Make sure the power supply and wiring are connected securely. 2. Double-check to see that the power breaker is on and the power supply is live. 3. Check to see that the control panel cables are connected correctly to the switchboards.
My range hood vibrates while the fan is operating.	<ol style="list-style-type: none"> 1. Check to ensure the hood is firmly secured to the cabinet/wall. Tighten or add screws if necessary. 2. Confirm that the motor is firmly in place and secured safely. If it is not, tighten it. 3. If those steps haven't resolved the issue, your fan may be damaged. If it is damaged, you may need to replace it.
The fan is operating weakly.	<ol style="list-style-type: none"> 1. Double-check to ensure the duct size is correct. 2. Clean ducts or filters if they're dirty. Also, check to make sure the mesh enclosure on the hood is receiving proper air ventilation. 3. If possible, check to see that the damper is functioning properly regarding the opening.
The fan is not working properly even though the lights are working.	<ol style="list-style-type: none"> 1. Double-check that the fan is not jammed /that it isn't scraping any of the surfaces of the hood. 2. If this doesn't work, you may need to replace the motor as it may be defective.
The vent hood is not working efficiently.	<ol style="list-style-type: none"> 1. The minimum distance between the cooking area and the appliance should be 24" or 30" maximum. Check to see if this is correct. 2. Make sure that the duct is not susceptible to easy wind opening. 3. Make sure the fan speed is at the appropriate rate. The heavier the cooking, the greater the speed of the hood should be set. 4. Closing the windows and doors in the room will allow the vent to work much better. 5. As noted during the installation process, all ductwork must be done correctly. You may need to reduce the length of ductwork or reduce elbows. 6. Make sure all joinery in ductwork is sealed and secured properly.
The light is not working.	<ol style="list-style-type: none"> 1. Check to see if lightbulb is loose and needs to be tightened. 2. If tightening doesn't fix the problem, replace bulb with a new one and see if that solves the issue. 3. If replacement and/or tightening does not solve, you may need to replace the lighting service system on the hood.
The touch panel is not responding.	<ol style="list-style-type: none"> 1. Perform a power cycle reset by unplug the power cord, wait 10 seconds, and plug the power cord back. 2. If Step 1 doesn't resolve the issue, please contact us immediately for a control panel replacement.

Still experiencing problems after following these steps? Contact a technician to assist. Contact us at **1-800-929-0168** or **info@hauslane.com**.



Extended Warranties

If you are interested in an extended warranty, sign up on our website at www.hauslane.com



Parts and Accessories

If you need replacement parts or accessories, visit www.hauslane.com



Contact Us

We'd be happy to answer your questions or resolve any issues you may have.
Phone: 1-800-929-0168



Find Us and Connect with Us

