

Quickstart Guide




Bundle Contents

This bundle contains a movie theater kit to enhance your viewing experience. The bundle contains:

- 1 Projector
- 1 Projection screen
- 1 42" Tripod
- 1 Bluetooth speaker

Power

Plug the AC/DC power adapter (included) into a standard wall outlet and the DC power input on the back of the unit. After connecting power, please allow approximately 5 seconds to pass before powering the unit ON.

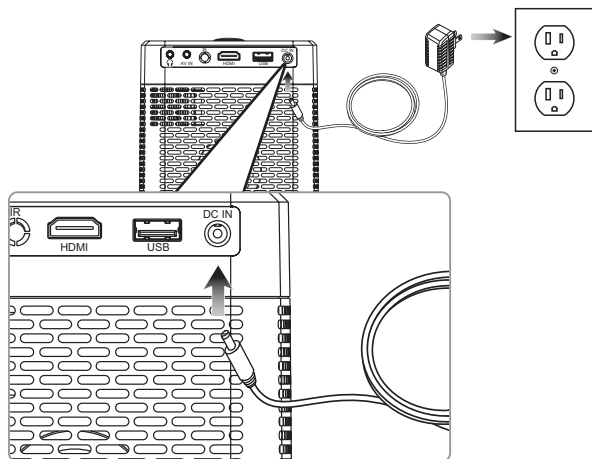


Bluetooth - Pairing to Wireless Speakers or a Sound Bar

NOTE: Bluetooth is OFF by default when the projector first powers ON. Bluetooth can be turned ON or OFF from the Sound Menu of the projector.

1. Enable Bluetooth on the included speaker or on another Bluetooth enabled speaker/sound bar you wish to connect to.
2. Power on the projector and make sure the projector's Bluetooth is ON (see note above). The projector will begin searching for nearby Bluetooth devices to connect to and will automatically start the pairing process. Note: To avoid confusion, turn off Bluetooth receivers you do not wish to connect to or move them out of connection range.
3. When successfully paired, the Bluetooth receiver should announce the connection, usually with a voice or tone. Check the user manual for your Bluetooth receiver for more information.
4. When successfully connected, the projector will display the name of the connected Bluetooth receiver on the top right portion of the Main Menu screen, and sound played from the projector will be heard through the Bluetooth receiver.

After initial pairing, the projector and the Bluetooth receiver will stay paired unless unpaired manually by the user, or erased due to a reset of either device. If this occurs or you find either unit is unable to connect, repeat the above steps.

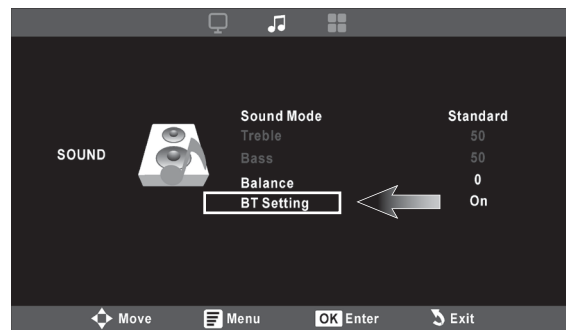


Quickstart Guide




Setting Up the Projection Screen

Indoor Installation

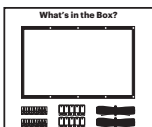


Package includes screen, mounting hooks, adhesive strips and ropes.


Instructions

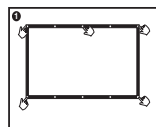


Unfold the screen and locate a desired position on the wall for installation. Mark the position of the grommets on the wall.
Note: Please make sure to stretch tight to avoid wrinkling or sagging.

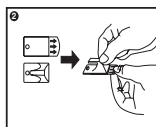

Remove the cover on one side of the adhesive strip and stick it to the back of the mounting hook. Make sure to align the hole on the mounting hook and the adhesive strip.

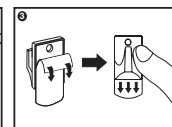


Remove the other side of the adhesive strip and stick the mounting hook on the wall at the marked location from **step 1**. Make sure the mounting hook hole lines up with the marked location.

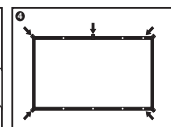


Mount the screen onto the mounting hooks. For best results, use 5 mounting hooks. To easily remove the mounting hooks, slowly stretch the adhesive strip straight down using the tab with downward facing arrows.
Note: The adhesive strips should not be used on textured walls, wallpaper, brick, non-stick surfaces, or fabrics.


Outdoor Installation Instructions

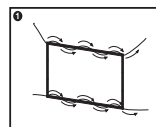

Thread the included ropes through the grommets located at the top and bottom of the screen.

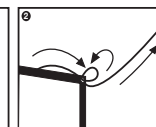


Loop the rope twice through the final grommet on each corner so the screen will stay tight.

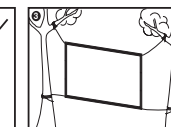

Tie both ends of the two ropes to nearby fixed objects, like trees, as shown in the diagram. **Note: When the screen is not in use, please store it in the carry bag to keep the screen clean and prevent discoloration from UV rays due to prolonged Sun exposure.**

Connecting to a DVD player, Gaming Console, or other device with HDMI

Locate the **HDMI** output on your device.

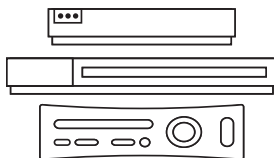

Connect with **HDMI Cable** (not included)

Set the connected device and projector media source to **HDMI**.

You can set the source using the remote or the controls on the projector.

Note: Please make sure to remove the projector's lens cap in order to see picture.

Projector **HDMI** input

HDMI

Using the Tripod

• Before using the tripod, adjust each leg to the desired height and angle, the lock each section securely. It is best to use the tripod on a flat level surface.

• Attach your projector to the **Camera Mount** using the screw on the top side of the mount. Use the **Pan Bar** to move the projector to angle you desire.

Warning: Please make sure the projector is securely fastened to the tripod to avoid causing damage to the unit from falling.

