


BODEGA


C O O L E R

INSTRUCTION MANUAL

COMPRESSOR WINE COOLER
BRAND: BODEGA

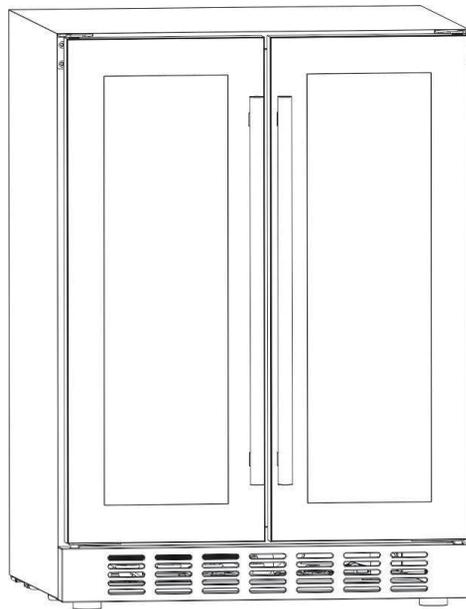

MODEL: JC-150WM

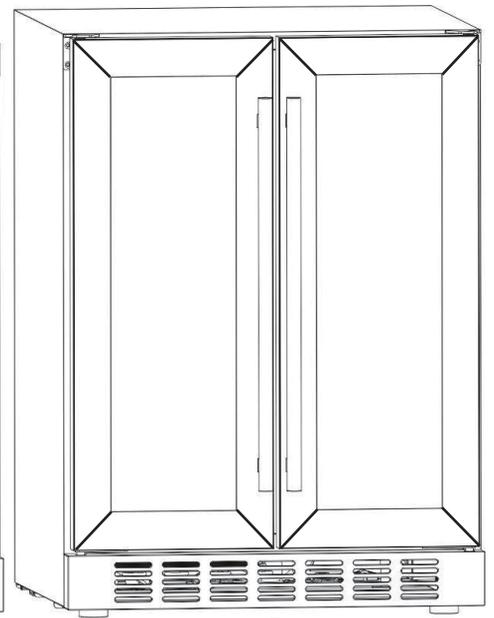

MODEL: JC-150SG

■ THIS manual contains important information including safety and installation instructions of the appliances. Please read it carefully before use and follow all safety information & instructions. It is recommended to keep this manual for easy reference so that you can be familiar with the operation of the appliance.

COMPRESSOR WINE COOLER

B O D E G A
C O O L E R



CONTENTS

IMPORTANT SAFEGUIDES.....	1
INSTALLATION.....	3
OPERATING THE APPLIANANCE.....	5
CARE AND MAINTENANCE.....	8
TROUBLESHOOTING.....	9
TECHNICAL DATA	10
WARRANTY.....	11



Thanks for choosing our products, hope that our products can bring you different feelings. Please read the following safety and operating instructions carefully before using the wine cooler.

▶ IMPORTANT SAFEGUIDES

- Plug into a grounded 3-prong outlet, do not remove grounding prong, do not use an adapter, and do not use an extension cord.
- Read all instructions before using the wine chiller.
- Child entrapment and suffocation are not problems of the past. Junked or abandoned appliances are still dangerous.
- Before you throw away your old wine chiller, take off the door but leave the shelves in place so that children may not easily climb inside.
- Never allow children to operate, play with, or crawl inside the appliance.
- Replace all panels before operating.
- It is recommended that a separate circuit, serving only your appliance be provided. Use receptacles that cannot be turned off by a switch or pull chain.
- Never clean appliance parts with flammable fluids. These fumes can create a fire hazard or explosion. And do not store or use gasoline or other flammable vapours and liquids in the vicinity of this or any other appliance. The fumes can create a fire hazard or explosion.
- Before proceeding with cleaning and maintenance operations, make sure the power line of the unit is disconnected.
- Do not connect or disconnect the electric plug when your hands are wet.
- Unplug the appliance or disconnect power before cleaning or servicing. Failure to do so can result in electrical shock or death.
- Do not attempt to repair or replace any part of your appliance unless it is specifically recommended in this material. All other servicing should be referred to a qualified technician.
- Use two or more people to move and install appliance. Failure to do so can result in back or other injury.

To ensure proper ventilation for your appliance, the front of the unit must be completely unobstructed. Choose a well-ventilated area with temperatures above 16°C (60.8°F) and below 32°C (89.6°F). This unit must be installed in an area protected from the element, such as wind, rain, water spray or drips.
- The appliance should not be located next to ovens, grills or other sources of high heat.
- The appliance must be installed with all electrical, water and drain connections in accordance with state and local codes. A standard electrical supply, properly grounded in accordance with the National Electrical Code and local codes and ordinances is required.
- Do not kink or pinch the power supply cord of appliance.
- The fuse (or circuit breaker) size should be 13 amperes.
- Never allow children to operate, play with or crawl inside the appliance.
- Do not use solvent-based cleaning agents or abrasives on the interior. These cleaners may damage or discolor the interior.
- Do not use this apparatus for other than its intended purpose.
- Before the appliance is used, it must be properly positioned and installed as described in this manual, so read the manual carefully. To reduce the risk of fire, electrical shock or injury when using the appliance.



Before the appliance is used, it must be properly positioned and installed as described in this manual, so read the manual carefully. To reduce the risk of fire, electrical shock or injury when using the appliance.

- It is recommended that a separate circuit, serving only your appliance be provided. Use receptacles that cannot be turned off by a switch or pull chain.
 - Never clean appliance parts with flammable fluids. These fumes can create a fire hazard or explosion. And do not store or use gasoline or other flammable vapours and liquids in the vicinity of this or any other appliance. The fumes can create a fire hazard or explosion.
 - Before proceeding with cleaning and maintenance operations, make sure the power line of the unit is disconnected.
 - Do not connect or disconnect the electric plug when your hands are wet.
 - Unplug the appliance or disconnect power before cleaning or servicing. Failure to do so can result in electrical shock or death.
 - DO NOT use mechanical devices to defrost refrigerator. DO NOT puncture refrigerant tubing.
 - To be repaired only by trained service personnel. DO NOT puncture refrigerant tubing.
 - Consult repair manual / owner's guide before attempting to service this product. All safety precautions must be followed.
 - To prevent a child from being entrapped, keep out of reach of children and not in the vicinity of the cooler.
- **Try to avoid use in hot environments.**

⚡WARNING⚡	To reduce the risk of fire, electrical shock, or injury when using your appliance, follow these basic precautions:
<ul style="list-style-type: none"> ● Read all instructions before using the wine chiller. ● DANGER or WARNING: Risk of child entrapment. Child entrapment and suffocation are not problems of the past. Junked or abandoned appliances are still dangerous. ● Before you throw away your old wine chiller, take off the door but leave the shelves in place so that children may not easily climb inside. ● Never allow children to operate, play with, or crawl inside the appliance. ● Never clean appliance parts with flammable fluids. The fumes can create a fire hazard or explosion. ● Do not store or use gasoline or any other flammable vapours and liquids in the vicinity of this or any other appliance. The fumes can create a fire hazard or explosion. <p style="text-align: center;">-Save these instructions-</p>	






EXTENSION CORD

Because of potential safety hazards, it is strongly recommended that you do not use an extension cord with this appliance. However, if you must use an extension cord, it is absolutely necessary that it be a UL/CUL Listed, 3-wire grounding type appliance extension cord having a grounding type plug and outlet and that the electrical rating of the cord be 115 volts and at least 10 amperes.



► INSTALATION


Installation space requirements

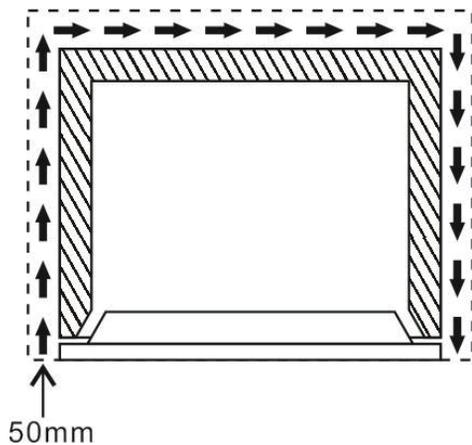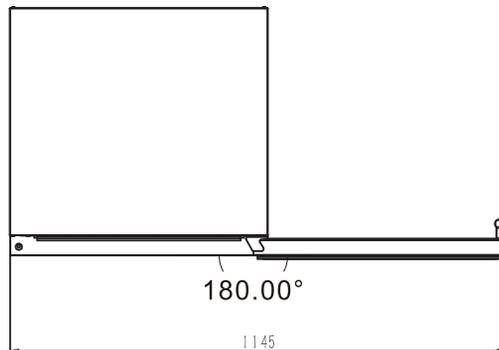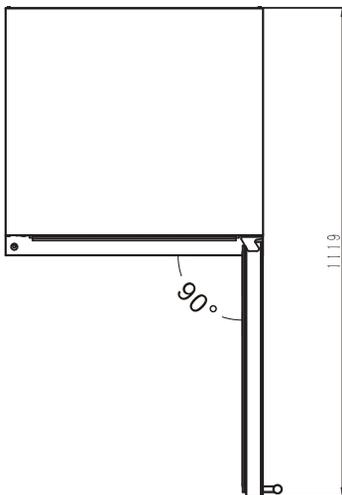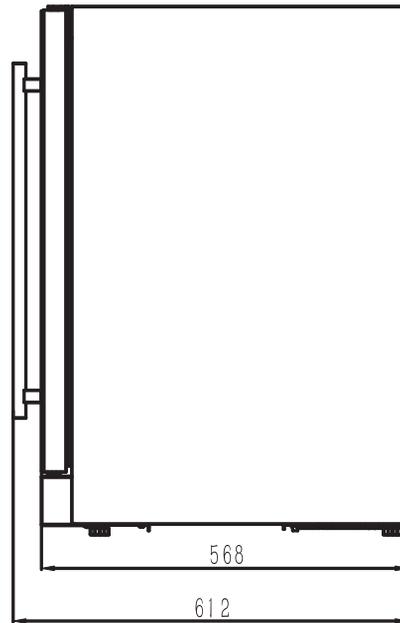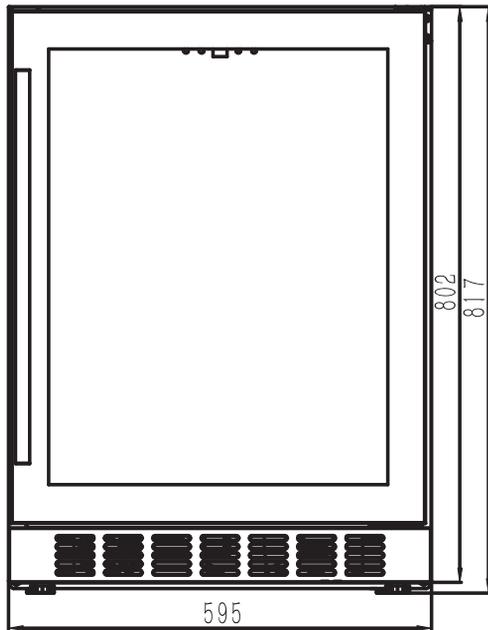

For built-in installation, ensure proper service access and ventilation, allow at least 1/4" (6.35mm) space on each side and at the top.



Parts and features

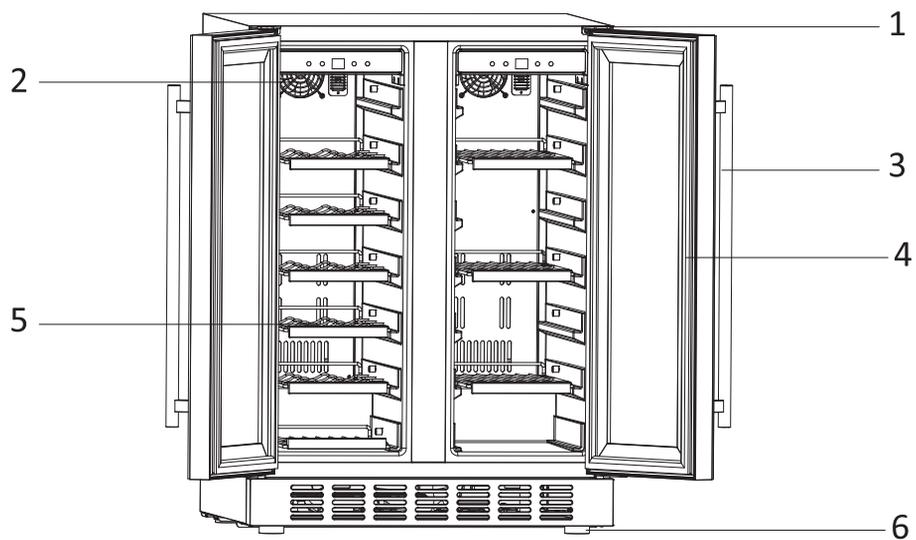

- 1: Upper Hinge
- 2: Fan
- 3: Door Handle

- 4: Door Gasket
- 5: Shelves
- 6: Bottom Hinge

Before the first use

- Remove the exterior and interior packing materials.
- It is important for the appliance to be leveled in order to work properly. You may need to adjust the feet to make it level.
- Let the appliance stand upright for approximately **12** hours before connecting it to the power source, which helps to reduce the possibility of a cooling-system malfunction from handling during transportation.
- Use a soft cloth to clean the interior surface with lukewarm water.

Door handle installation

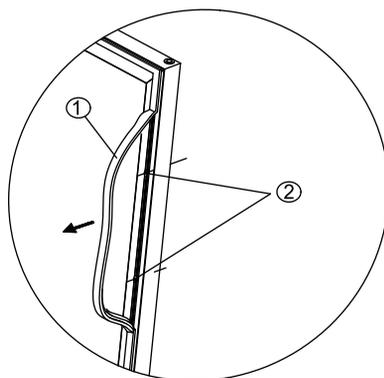


Fig:1

①sealing ②screws

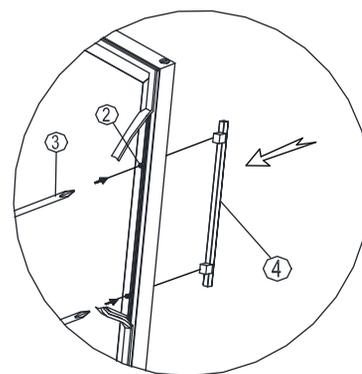


Fig:2

③Phillips screwdriver ④Handle




How to install the handle:

- 1) Pull away the sealing gasket where the handle is to be installed as shown in Fig1. The gasket is easily displaced by hand. No tools are necessary.
- 2) Align the handle with the screws installed. Tighten the screws using a Phillips head screwdriver until the handle sets both flush and secured tightly against the door frame. (DO NOT over tighten as this will cause damage to the handle assembly).
- 3) Install the sealing gasket to its original position.

▶ OPERATING THE APPLIANCE

Control Panel

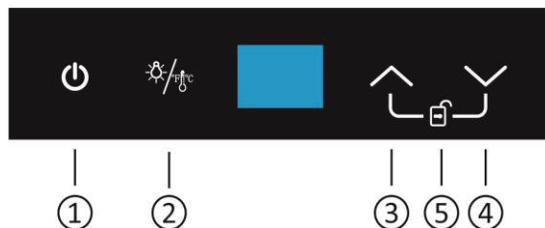

Key Function

- ① Switch key: Short power on/off.
- ② Light/CF key: Short press on or off the light, long press 3s Fahrenheit Celsius function conversion.
- ③ Add key: temperature setting.
- ④ Minus key: temperature setting.
- ⑤ Lock/Unlock key: Press the "∧" and "∨" keys simultaneously for 3s to lock or unlock.

Automatic locking function

When all the key no operation for 20 seconds, the key will be locked automatically. After locking, the plus and minus keys cannot be operated. The unlock key and light /CF key operate normally.

Auto light off function

When all the key no operation for 10 minutes, the lamp will turn off automatically.

Adjustable range

Minimum value: 5°C/41°

FMaximum value: 18°C/64°F

Display range

Control panel temperature display range: 0~37°C/32~99°F.

Display stability

In the Celsius state: When the temperature measured by the temperature probe is within +1°C of the set temperature, the temperature display will display the set temperature value.



In the Fahrenheit state: When the temperature measured by the temperature probe is within $\pm 2^{\circ}\text{F}$ of the set temperature, the temperature display will display the set temperature value.

Forced defrosting function

When the compressor works for 12 hours, the compressor will stop working for 30 minutes.

Memory function

The control board is re-energized after each power-off, the temperature setting value, Fahrenheit/Celsius state will be the same as before the power-off, and the length of power-off time is not limited.


Cooling Zone	Temperature Range
Beverage Refrigerator (Right Zone)	3°C-12°C (37.4°F-53.6°F)
Wine Refrigerator (Left Zone)	5°C-18°C (41°F-64.4°F)

Note:

- If the appliance is power off suddenly. Please turn on the appliance after 3-5 minutes later. The temperature setting is with automatic memory function.
- This wine cooler is suitable for the ambient temperature 5-32°C/41-89.6°F. If temperature is higher or lower than it, the performance may be affected.
- If it is the first time to use this appliance, it is normal that the preset temperature and display temperature is different. Everything will back to normal after few hours working.

Removing Shelf

- To avoid the damage of door sealing, please open the door fully when you slide out the shelves.
- For your convenience of taking wine, you can pull out the shelf by 1/3. Our product is designed with shelf holder to prevent the shelf pull over and fall off the cabinet.
- If you need to take off the shelf from cabinet, you can pull out the shelf to the position where the notch of shelf is exactly under the plastic post and then lift it up and out. (See figure below)

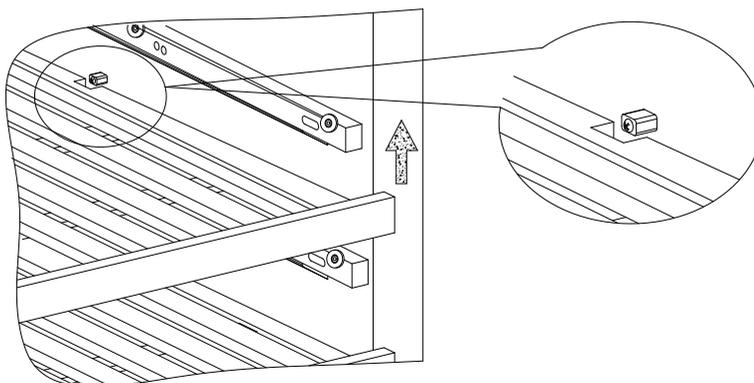




Storage


Wine Cooler Zone

750ml bottles

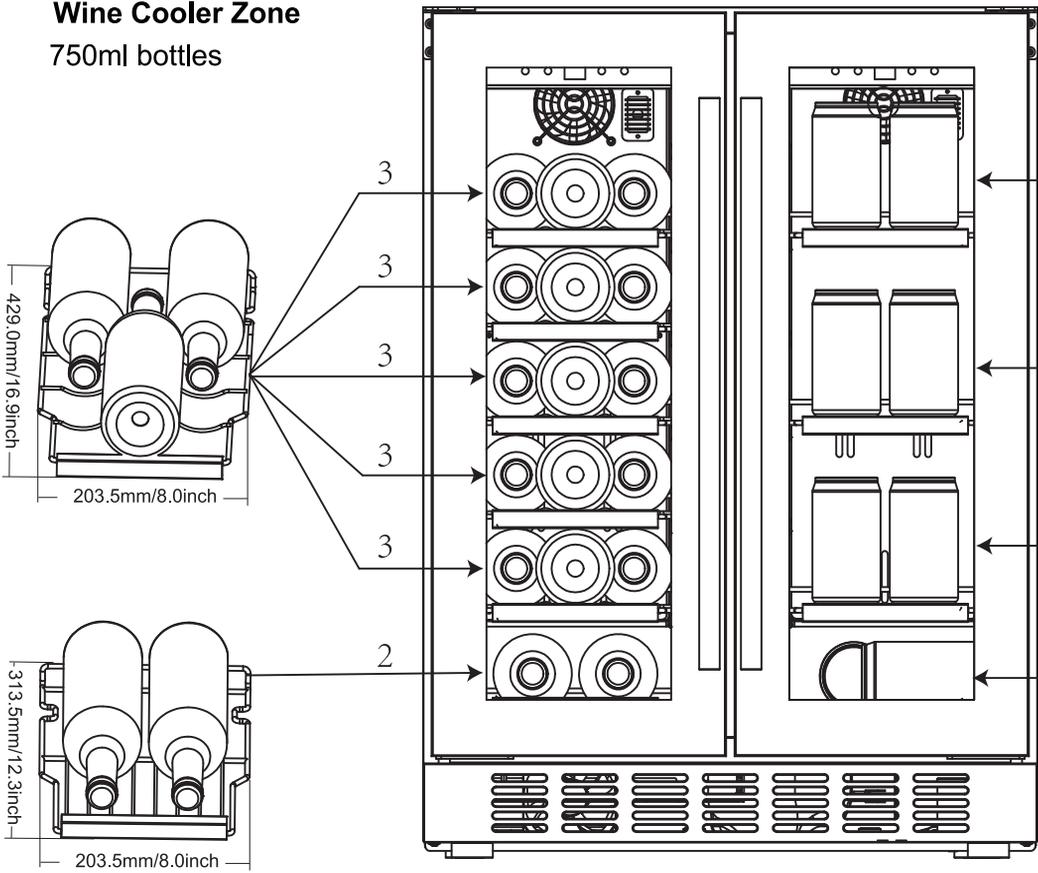

Beverage Cooler Zone

12oz cans

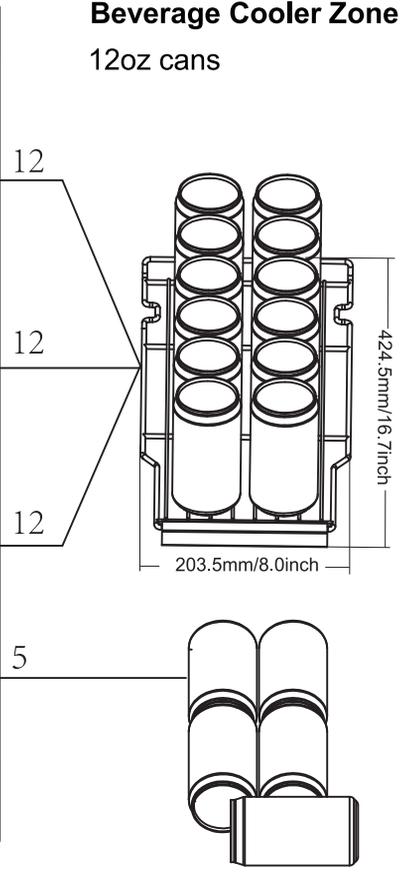



► CARE AND MAINTENANCE

Cleaning your wine cooler

- Turn off the power, unplug the appliance, and remove all items including shelves
- Wash the inside surfaces with a warm water and soft cloth
- Wash the shelves with a mild detergent solution
- Wring excess water out of the sponge or cloth when cleaning area of the controls, or any electrical parts
- Wash the outside cabinet with warm water and mild liquid detergent. Rinse well and wipe dry with a clean soft cloth. Do not use steel wool or steel brush on the stainless steel. These will contaminate the stainless steel with steel particles and rusting may occur.

Power failure

Most power failures are corrected within a few hours and should not affect the temperature of your appliance if you minimize the number of times the door is opened. If the power is going to be off for a longer period of time, you need to take the proper steps to protect your contents.

Moving your wine chiller

- Remove all items (bottles)
- Tape down securely all loose items (shelves) inside your appliance.
- Turn the adjustable leg up to the base to avoid damage.
- Tape the door shut. Be sure the appliance stays secure in the upright position during transportation. If you absolutely need to transport the chiller horizontally, transport the chiller on its back (door on top). Also protect outside of appliance with a blanket, or similar item.

Energy saving tips

The wine chiller should be located in the coolest area of the room, away from heat producing appliances, and out of the direct sunlight.



▶ TROUBLESHOOTING GUIDE

You can solve many common wine chiller problems easily, saving you the cost of a possible service call. Try the suggestions below to see if you can solve the problem before calling the service.

PROBLEM	POSSIBLE CAUSE
Wine cooler does not operate.	Not plugged in. The appliance is turned off. The circuit breaker tripped or a blown fuse.
Wine cooler is not cold enough.	External environment may require a higher setting. The door is opened too often. The door is not closed completely. The door gasket does not seal properly.
The compressor turns on and off frequently.	The room temperature is hotter than normal. A lots of bottles has been added to the chiller. The door is opened too often. The door is not closed completely. The temperature control is not set correctly. The door gasket does not seal properly.
The light does not work	Not plugged in. The circuit breaker tripped or a blown fuse. The light button is "OFF".
Vibrations.	The chiller is not leveled The bottles are vibrating. There is an object under the chiller.
The chiller seems to make too much noise.	The flow of refrigerant is normal The circulation of the refrigeration The chiller is not level.
The door will not close properly.	The chiller is not level. The door was reversed and not properly installed. The gasket is dirty. The shelves are out of position.
Condensation on the glass surface	Avoid using in high temperature environments. Refrigerator refrigeration glass surface low temperature, high ambient temperature air encounter low temperature glass door will produce condensation, belongs to the normal phenomenon.
Error code "EE"	"EE" is displayed when the temperature probe is short-circuited or disconnected, flashes, and cooling is stopped. Contact after-sales service.



Error code "LL"	When the temperature measured by the temperature probe is lower than 0 degrees Celsius, "LL" is displayed, flashing, and the cooling is stopped. Contact after-sales service.
Error code "HH"	When the temperature measured by the temperature probe is higher than 37 degrees Celsius, "HH" is displayed, flashing, and cooling is stopped. Contact after-sales service.
Error code "--"	When the communication between the display board and the power board fails, the nixie tube will display "--", blink, and stop refrigeration.- Contact after-sales service.

► TECHNICAL DATA

BRAND	BODEGA	BODEGA
MODEL	JC-150WM	JC-150SG
POWER	115V~60Hz	115V~60Hz
POWER INPUT	85W	85W
RATED CURRENT	1.2A	1.2A
PRESSURE HIGH SIDE	120PSIG	120PSIG
PRESSURE LOW SIDE	60PSIG	60PSIG
REFRIGERANT AMOUNT	R600a(22g)	R600a(22g)

Manufacturer: FOSHAN SHUNDE DAPAN TRADING CO., LTD

Address: NO.18 XINHUI RD, DALIANG SHUNDE FOSHAN CITY CHINA

Contact: Mickey Tel: +1 (313) 913-7585

E-Mail: info@bodegacooler.com



BODEGA
C O O L E R

Brand: BODEGA

Thank you for purchasing **BODEGA** product. We sincerely hope that you are satisfied with the product.

We'd like to offer you **12-month warranty** for free.

Once activated the warranty, you will be ensured that if anything goes wrong with your product. Replacement unit/parts will be warranted during the warranty period.

———— **What you need to do** ————

Any help or questions during use, please contact us via website

www.bodegacooler.com, send email to **info@bodegacooler.com**,

we will service you within 24 hours.

When contacting us, we suggest to send Order ID,

problem and a photo or a video for helping us much

more clearer about the problem and offer you the best solution.

C
O
O
L
E
R

✉ info@bodegacooler.com

<https://www.bodegacooler.com/> 🔍