

CARE AND MAINTENANCE

Inspecting

Inspect this chiminea on a regular basis to ensure product safety and longer product life.

DO NOT attempt to inspect this outdoor chiminea until the fire is COMPLETELY out and cooled down.

1. Check handles to make sure they are secure.
2. Check components for any signs of damage or rust.
3. If you detect damage to any component, do not operate until you make repairs.

Cleaning

Make sure the fire is completely out when you are no longer using the chiminea.

Make sure the fire is completely out before you clean the ash tray. Sweep the ash into the ash tray, pull ash tray out and empty it.

Use a damp cotton cloth to remove the smoke stain from the mesh cover and chimney cap.

Clean this outdoor chiminea on a regular basis to promote safer experiences and longer product life.

Note: After repeated use, the finish may become discolored.

DO NOT attempt to clean this outdoor chiminea until the fire is COMPLETELY out and cooled down.

DO NOT use oven cleaner or abrasive cleaners as they will damage this product.

DO NOT clean any part of this outdoor chiminea in a self-cleaning oven as it may damage the finish.

1. Wipe exterior surface with a mild dishwashing detergent or baking soda.
2. For stubborn surface stains use a citrus-based degreaser and a nylon scrubbing brush.
3. Rinse clean with water.
4. Remove built-up creosote from components with a chiminea cleaning product.

Storage

DO NOT move or store this outdoor chiminea until the fire is COMPLETELY out and cooled down.

1. Once the fire is out, (coals are cold and outdoor chiminea is cool to touch), remove ashes and properly dispose.
2. Store assembled in a location away from children and pets.

Note: If you do not use a cover, store this outdoor chiminea in a dry location to maximize product life.