

USE AND CARE GUIDE

RICHMOND HILL 9 FT. ALUMINUM UMBRELLA



Questions, problems, missing parts? Before returning to the store,
call Home Decorators Collection Customer Service
8.00 a.m. - 6.00 p.m., EST, Monday - Friday

1-800-998-7021


HOMEDECORATORS.COM

THANK YOU


We appreciate the trust and confidence you have placed in Home Decorators Collection through the purchase of this umbrella. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Home Decorators Collection.

Table of Contents	
Table of Contents.....	2
Safety Information.....	2
Warranty.....	2
5 Year Frame / 2 Year Fabric Limited Warranty.....	2
What Is Covered	2
What Is Not Covered	2
Care Instructions.....	2
Pre-Assembly	3
Planning Assembly	3
Package Contents	4
Assembly	5
Operation	6


Safety Information




DANGER: Please keep children out of the assembly area during assembly.



WARNING: Mind your fingers while switching the tilt or rotating the knob.



CAUTION: Use the umbrella in an umbrella base only.



IMPORTANT: Please tighten the umbrella pole before use.

Warranty

FIVE YEAR FRAME /TWO YEAR FABRIC LIMITED WARRANTY

WHAT IS COVERED

We warrant the frame to be free of manufacturing defects to the original purchaser for five years and the fabric for two years.

WHAT IS NOT COVERED

It remains the customer’s responsibility for freight and packaging charges to and from our service center. This warranty does not cover commercial use, hardware, acts of nature, fire, freezing and abusive use. In addition, purchased parts are not covered under this warranty. We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production.

Care Instructions

Before using, wipe with a clean, dry cloth. Do not use bleach or solvents. Treat frame with liquid wax for maximum protection against UV light and salty, damp air. When not in use, store furniture in a cool, dry place.

 
Pre-Assembly

PLANNING ASSEMBLY


It will take one person about 3 minutes to complete the assembly process.

Pre-Assembly (continued)

PACKAGE CONTENTS

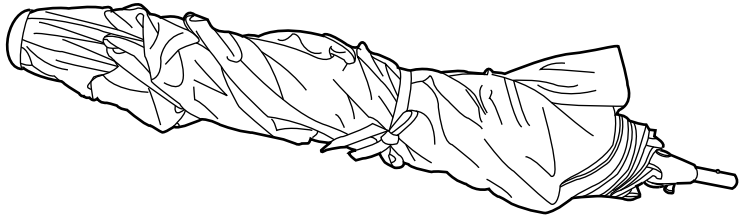

_____ A

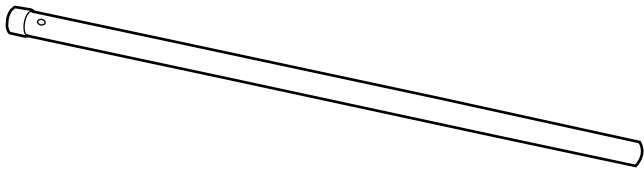 


_____ B

Part	Description	Quantity
A	Umbrella	1
B	Pole	1

Assembly

1 Assembling the umbrella

 - Press down on the locking pin located on the pole of the umbrella (A) and push the pole (B) up until an audible click is heard and the poles lock into place.

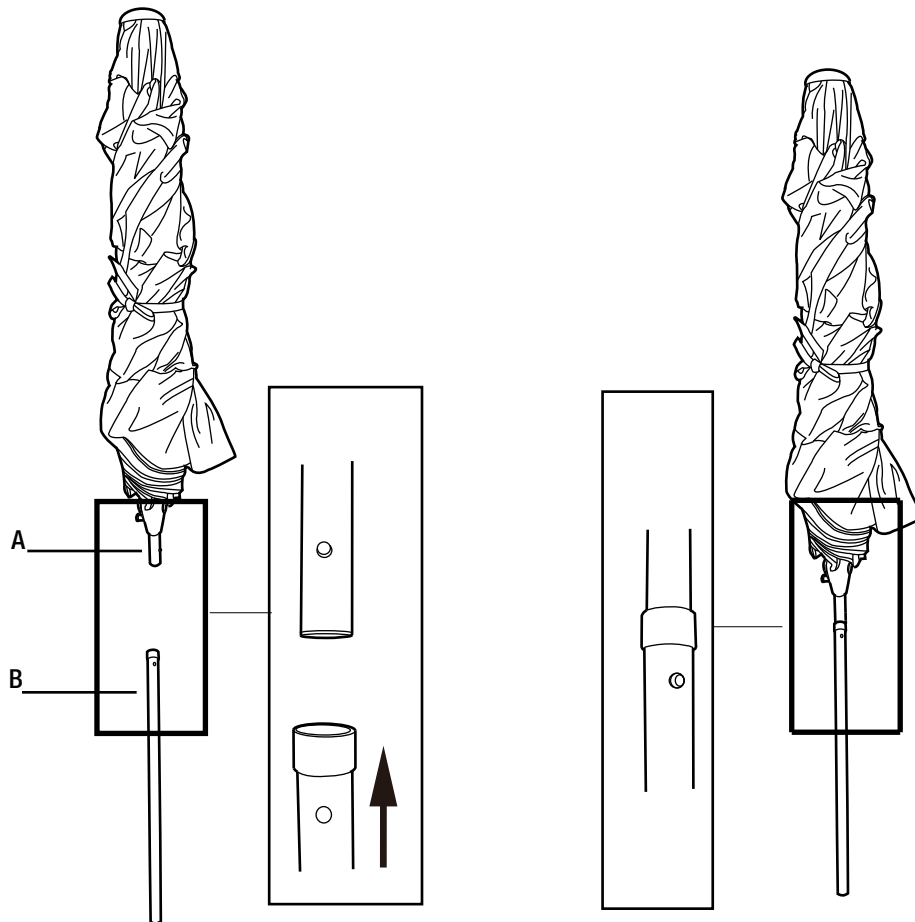


Operation

1 Setting up the umbrella

- Have an umbrella base (not included) ready on a flat surface.
- Insert the umbrella pole (B) into the holder of the umbrella base (not included). Tighten the knob (1) on the umbrella base.



 WARNING: Strong wind will damage the umbrella.
Do not use the umbrella in strong wind.

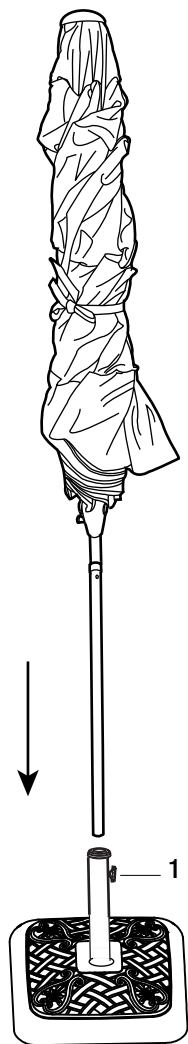

2 Open the umbrella

 
- Loosen the tie that holds the umbrella fabric in place.
- Rotate the knob on the umbrella pole in a clockwise direction to open the umbrella.



Operation (continued)

3 Tilting the umbrella

- Tilt the umbrella by pressing the button (2).

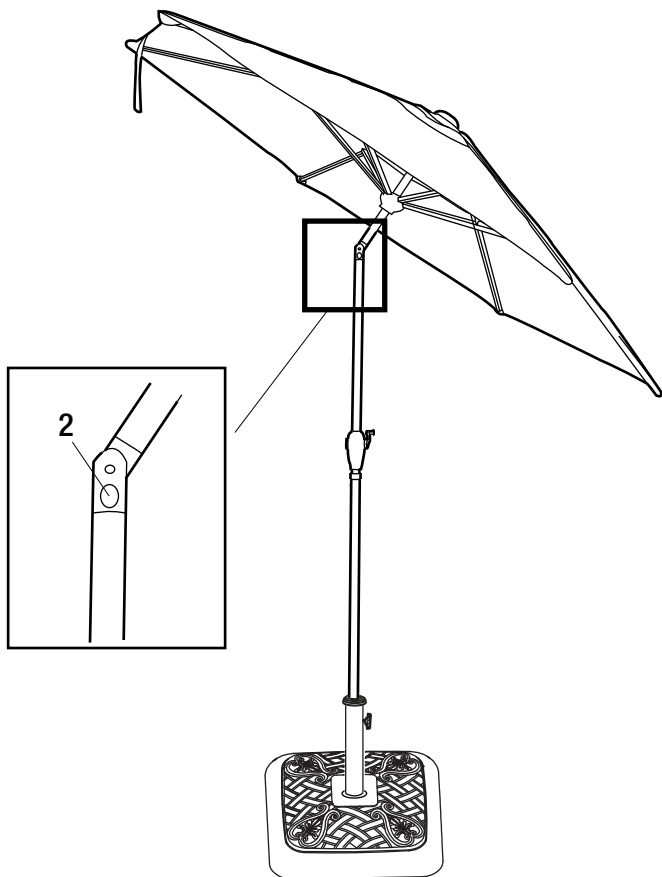

4 Taking down the umbrella

- Close and take down the umbrella after use or before bad weather.
- Remember to loosen the knob on the umbrella base (not included) before taking the umbrella out of the umbrella base.

HOME DECORATORS COLLECTION

Questions, problems, missing parts? Before returning to the store,
call Home Decorators Collection Customer Service
8.00 a.m. – 6.00 p.m., EST, Monday-Friday

1-800-998-7021

HOMEDECORATORS.COM

Retain this manual for future use.