


USE AND CARE GUIDE

UNFINISHED STORAGE CABINET

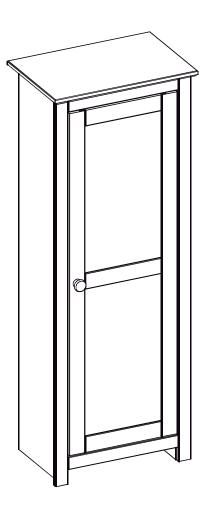

Questions, problems, missing parts?

Before returning to the store, call Customer Service.

8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-877-527-0313

HOMEDEPOT.COM

THANK YOU

Table of Contents

Pre Assembly Pre Assembly Assembly Assembly		Assembly Assembly Assembly Assembly	11 12 13 14
Assembly Assembly	7 8		

Safety Information



Assembly Assembly

DANGER

☐ Keep small parts away from children during assembly.

......10

□ Read and follow instructions carefully.



WARNING

- Read these instructions carefully and keep in a safe place.
 TO GUARANTEE THE SAFE USE OF THIS PRODUCT, FOLLOW THE WARNINGS, GUIDELINES AND RECOMMENDATIONS IN THIS MANUAL.
- □ Adult assembly required.
- ☐ Small parts may present choking hazard prior to assembly.
- \square Do not stand, step or climb on unit.
- ☐ Unit must be placed on a level surface or leveled with included hardware (when application).
- Do not sit on or allow children to climb, sit or stand on the assembled product.
- For safety reasons, it is imperative that this unit be mounted
- Do not use without installing the tip restraint.
- $\ \square$ Unit can tip over causing severe injury or death.
- □ Never open more than one drawer at a time.
- \Box Do not exceed the recommended weight limits.
- Evenly distribute the weight on each level and always keep the heavier loads on the bottom.
- Before cutting, drilling or hammering into any wall or floor surface, verify the location of electrical, plumbing and gas lines. Cutting may cause serious injury.

CAUTION

- Do not use power tools to assemble your furniture. Power tools may strip or damage parts/product.
- Do not overtighten connectors (screws, bolts, etc.).
 Overtightening can lead to product damage.
- Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment. If parts are missing, contact THE HOME DEPOT to obtain any missing parts.
- □ DO NOT USE SUBSTITUTE PARTS.
- $\hfill\Box$ This product should only be used on a flat, level surface.
- Product is designed to hold 10 Kg.
 Exceeding this limit may damage the product or cause injury to the user.

Warranty

1 YEAR WARRANTY

WHAT IS COVERED

We guarantee this product to be free of manufacturing defects to the original purchaser for one year.

WHAT IS NOT COVERED

This warranty does not cover commercial use, acts of nature, and abusive use.

Pre-Assembly

PLANNING ASSEMBLY

Read all instructions before assembly.

To avoid damaging this product, assemble it on a soft, non-abrasive surface such as carpet or cardboard.



NOTE: More than one person may be required to assemble this product.

TOOLS REQUIRED



Safety goggles



Phillips screwdrive



HARDWARE INCLUDED



NOTE: Hardware not shown to actual size.







 




























Part	Description		Quantity
AA	8X30	Wooden dowel	19
BB	3.5x30	Screw	1
CC	6X44	Screw mini-fix	22
DD	14x10	Case mini-fix	22
EE	4.0x40	Screw	3
FF	19x20	Nail in caps	4
GG	4.0x16	Screw	13
HH	100x5	Plastic profile	10
11	6x12	Shelf Support	16
JJ	26mm	Hinge	3
KK	16x5	Washer	2
LL	6x20	Wall plastic dowel	1
MM	26mm	Knob	1
NN	120mm	Wall Strap	1
00	12mm	Hinge Support	3
PP		Glue	1
		<u> </u>	


PACKAGE CONTENTS

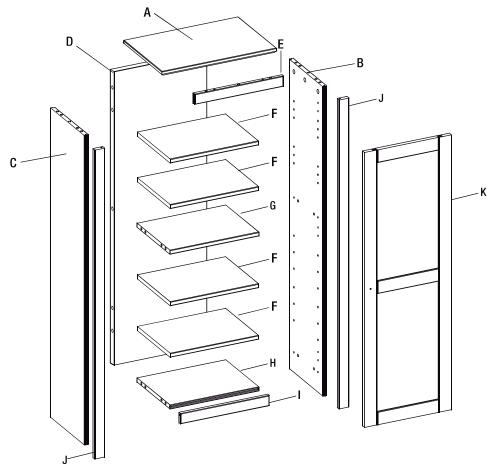


Part	Description	Quantity
Α	Top Panel	1
В	Right Side	1
С	Left Side	1
D	Back Panel	1
E	Rail Front	1
F	Shelf	4
G	Center Shelf	1
Н	Base Panel	1
	Rail	1
J	Side Rail	2
K	Door	1

 
Placing the Fittings in the Left Side Panel

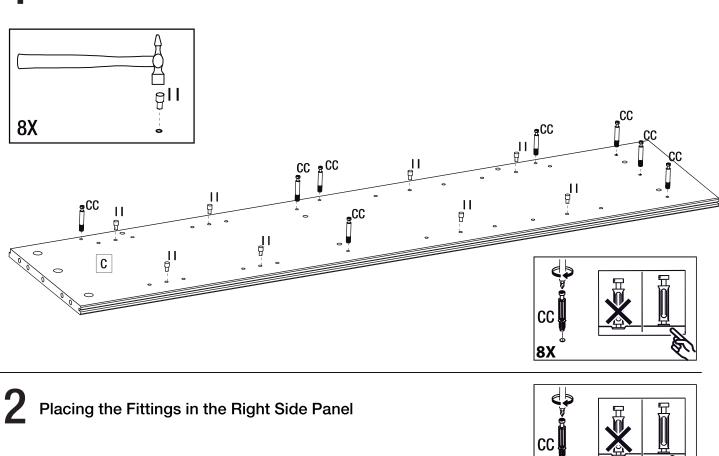




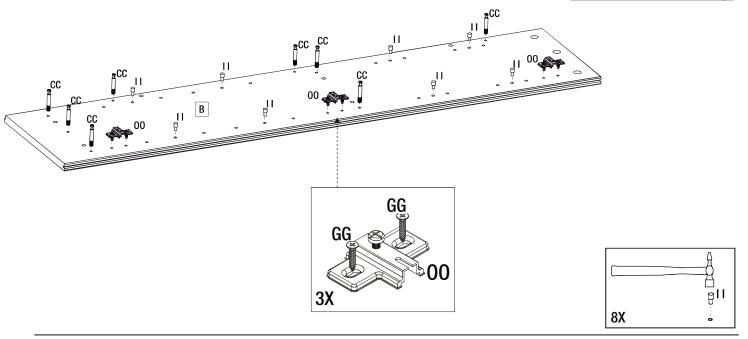



3 Placing the Fittings on the Top Panel

 


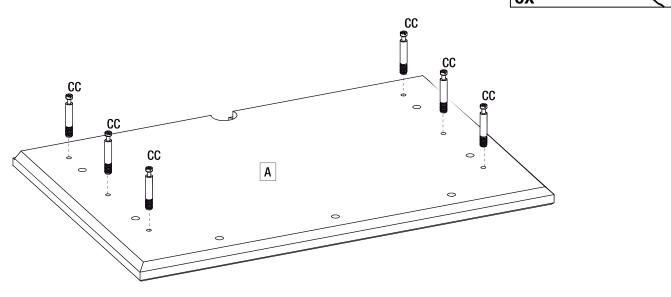



4 Attaching the rail on the top panel

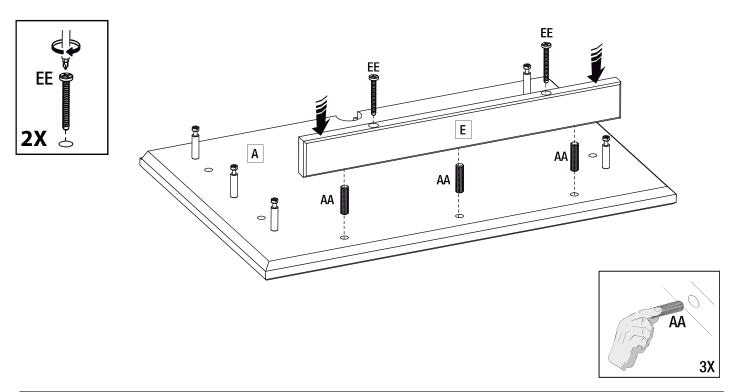

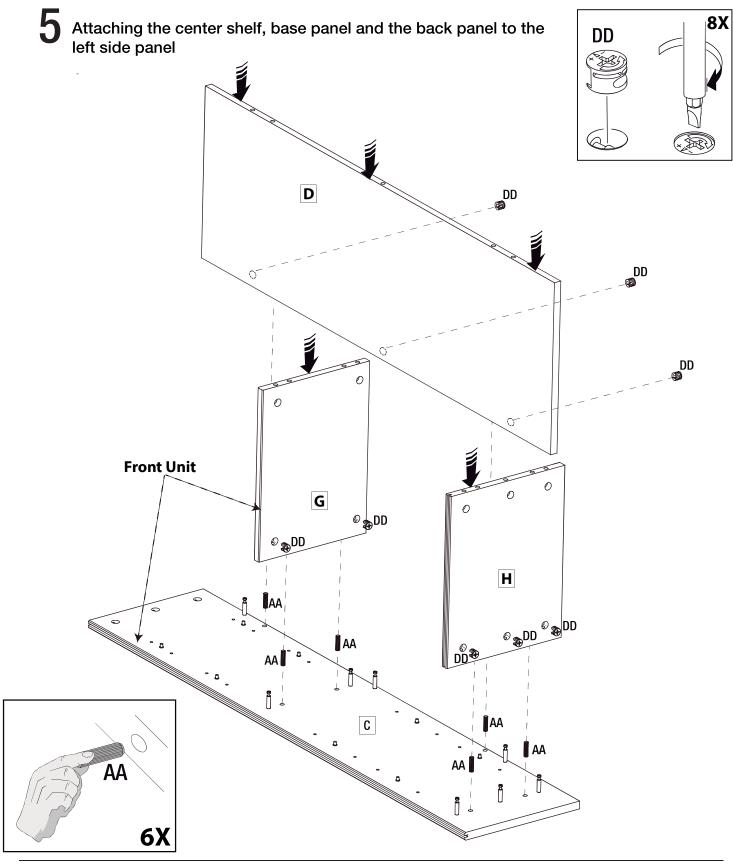

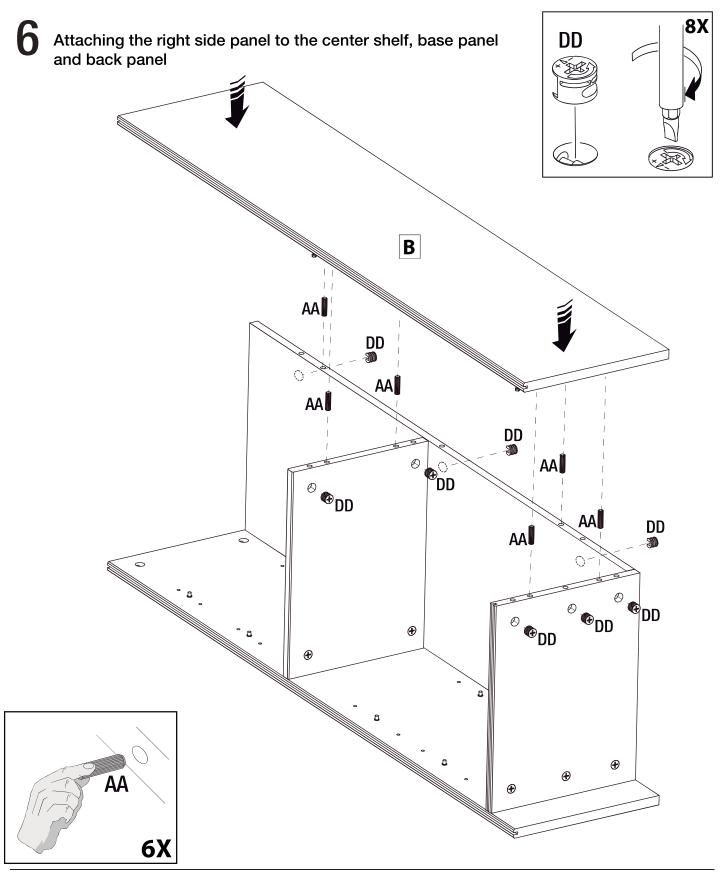


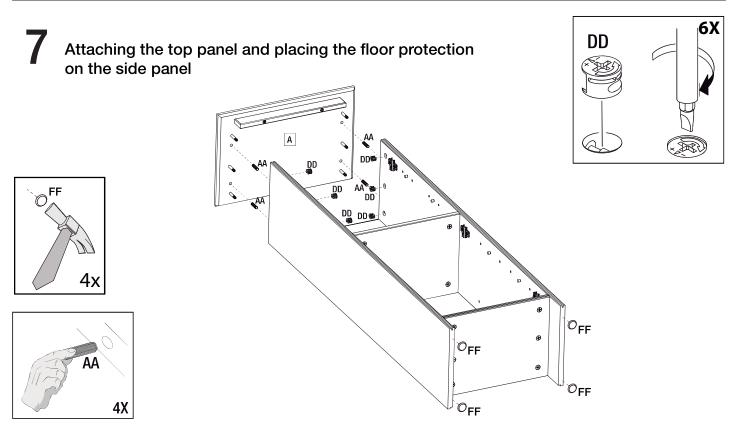

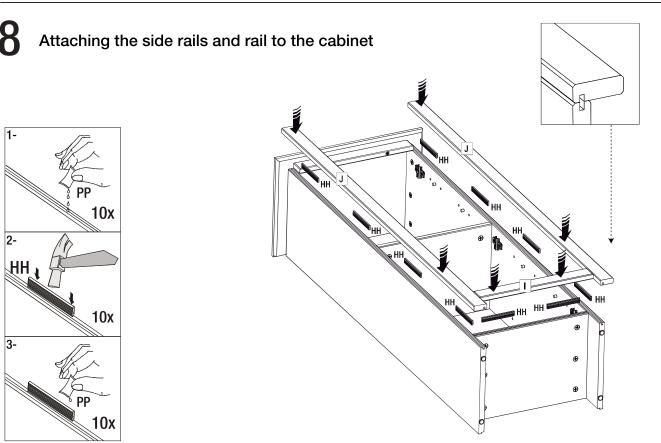


Marking the tipover restraint

Important: Position the furniture into place and make a mark to the wall, as shown

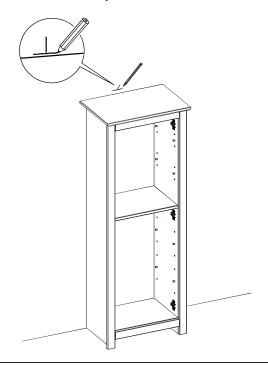


1 Placing the Tipover Restraint on the wall

- Important: With help,carefully move the furniture away to access the mark in the wall.
 Drill hole on wall 4cm below the mark, as shown in the diagram.
- Important: Before drilling, check wall for hidden pipes and cables.

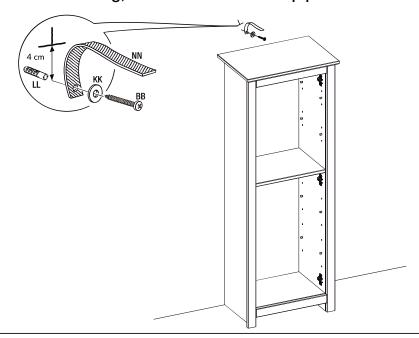

1 Placing the Tipover Restraint on the cabinet


Important: With help, carefully move the furniture back to position and insert wall strap into slot on the top panel as shown.

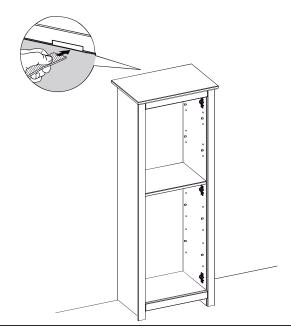


12 Placing the Tipover Restraint on the cabinet

Important: Inside the cabinet, hold wall strap in position and fix it using


washer and screw, as shown.

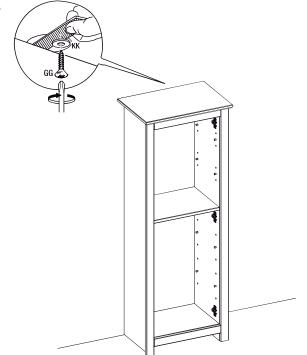


13 Adding the adjustable shelves to the cabinet

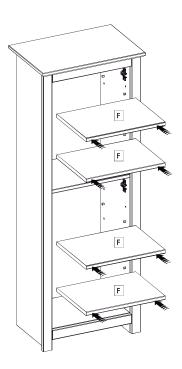


14 Adding the hinges to the doors

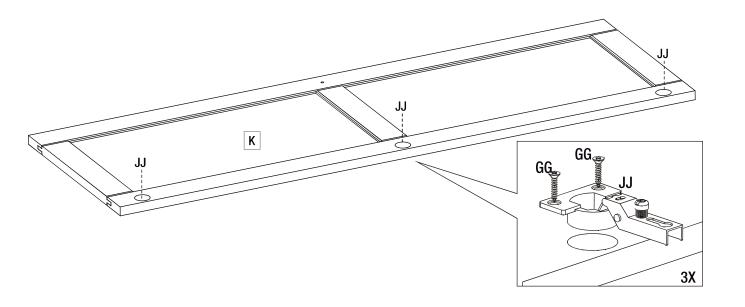


15 Attaching the door to the cabinet

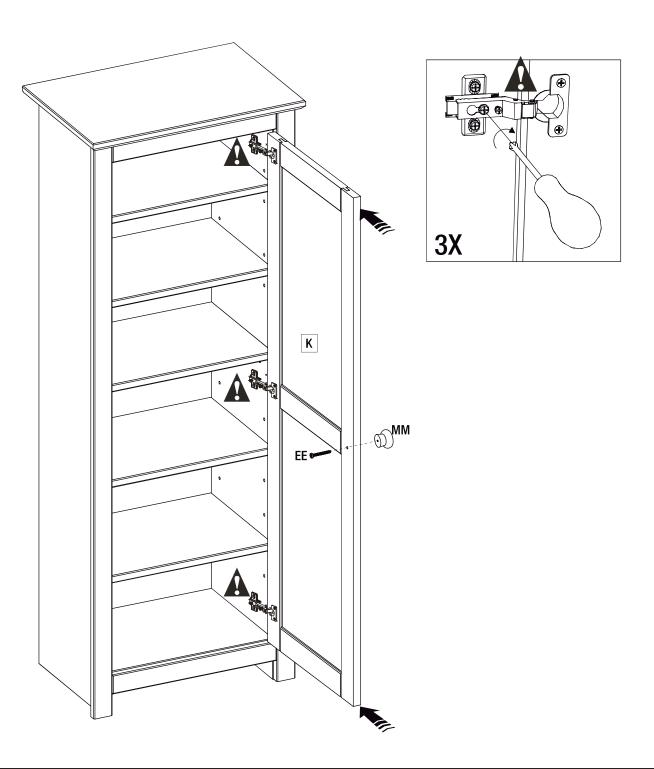

16 Regulating the door hinges

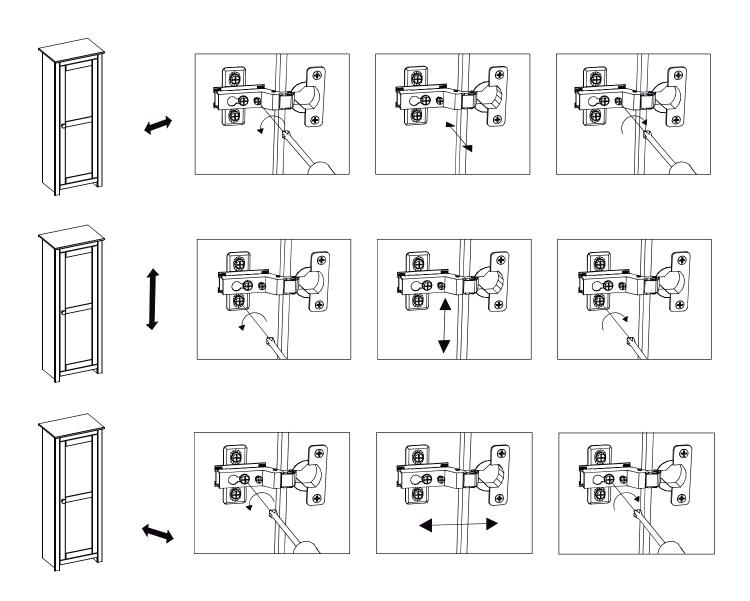

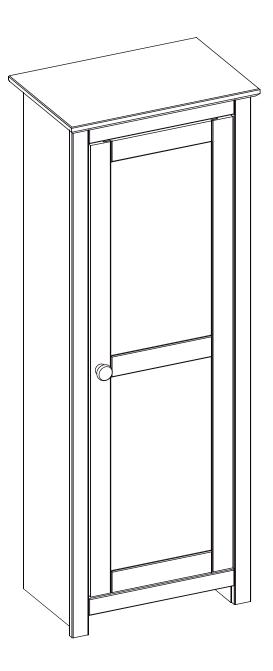

Care and Cleaning

- □ For best results, clean the furniture with a damp cloth and dry thoroughly. This will help prevent mildew by removing dirt particles that may accumulate.
- □ Do not clean with abrasive materials, bleach, or solvents.
- $\hfill\Box$ Store the furniture in a dry, sheltered place when not in use.
- □ Keep the furniture away from fire, extreme heat, freezing conditions, and inclement weather such as rain, hail, sleet, snow, or wind.

StyleWell.

Questions, problems, missing parts?

Before returning to the store, call Customer Service.

8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-877-527-0313

HOMEDEPOT.COM

Retain this manual for future use.