



THD SKU# 1006 128 621

Model # 21RT08421241

# ASSEMBLY INSTRUCTIONS

## 8ft Halloween Classics Giant-Sized LED Ghost Tree

### USE AND CARE GUIDE

#### PLANNING ASSEMBLY

Carefully remove all the parts from the box and place them on the ground or a flat surface. Many parts are connected by the lighting string that runs throughout the item. Take special care not to pull, cut or damage the lighting string. Read the entire manual prior to assembly and identify all the parts included in the package against the parts list. It is recommended to assemble parts of the product while laying flat on the ground versus standing the item up to assemble the parts. There are multiple electrical plug-in cords on the product. Be sure to plug all the cords in. If any parts are missing or damaged do not attempt assembly but contact our customer service center or return the product to place of purchase with receipt.

\*Assembly of this product may require more than one person.

#### Pre-Operation

**CAUTION:** Grasp the plug to insert or remove from the power source.

Do not unplug by pulling on the cord.

**CAUTION:** The lighting string on this product is rated at 19.2 Watts (0.16 Amps). Do not overload. Do not connect to another lighting string, decorative outfit or other electrical products. Before you use or re-use this product inspect it carefully. Discard or return to place of purchase with purchase receipt if the product has cuts, damage, frayed wire insulation on cords, cracks in the socket enclosures, loose connections, exposed copper wire or other obvious damage.

#### Care and Cleaning

- Carefully remove the product from wherever it is placed. This helps to avoid any undue strain or stress on the product connections and wires. If the product is placed somewhere other than the ground it should be well secured and flat.
- Carefully disassemble the product taking caution not to cut any electrical wires.
- Wipe the product with a damp cloth and allow to dry before storing.
- Store the product neatly in a cool, dry location protected from sunlight.

#### Trouble Shooting

- Ensure that the floor or surface that the item sits on is flat and level
- Be sure to plug the item correctly to a wall outlet or a UL Listed Power Cord
- Ensure all parts are assembled properly per the Instruction Manual
- If the item does not light check for loose or broken bulbs and connections
- Do not plug into other electrical items
- If the item has multiple Light String Cords be sure to plug in all cords
- Check for Broken or Burned Out Fuse In Plug

### Guarantee

#### What is Covered

The product is intended for residential seasonal use for 90 days per year. This product is covered by a 90 days limited guarantee due to defects in material and workmanship. Return the product with purchase receipts to the location of purchase for refund within 90 days of purchase.

#### What is Not Covered

This warranty does not cover commercial use, normal wear and tear, products not used in accordance with directions provided on or with the product, burn out of bulbs or LEDs, products that have been subjected to unauthorized repair and/or modification and damage caused by shipping and improper handling, alterations, misuse, in store display models or accidents. Questions, problems, missing parts? Before returning to the store, call Home Accents Holiday Customer Service 8 a.m.-6 p.m., EST, Monday-Friday



#### Thank you!

We appreciate the trust and confidence you have placed in Home Accents through the purchase of this 8 ft Halloween Classics Giant-Sized LED Ghost Tree. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Home Accents!


1-877-527-0313

HOMEACCENTSHOLIDAY.COM

Parts List		
A	Lower Base Section	1
B	Upper Middle Section B	1
C	Upper Right Section C	1
D	Upper Left Section D	1
E	Stabilizing Bar	1
F	Stabilizing Bar	1
G	Base Stand	1

Hardware List		
H	Spare Fuse	8
I	Spare Bulb	8
J	Plastic Tie	25
K	Cotter Pin	2
L	Anchoring String	4
M	Ground Stake	8


### Diagram of Parts

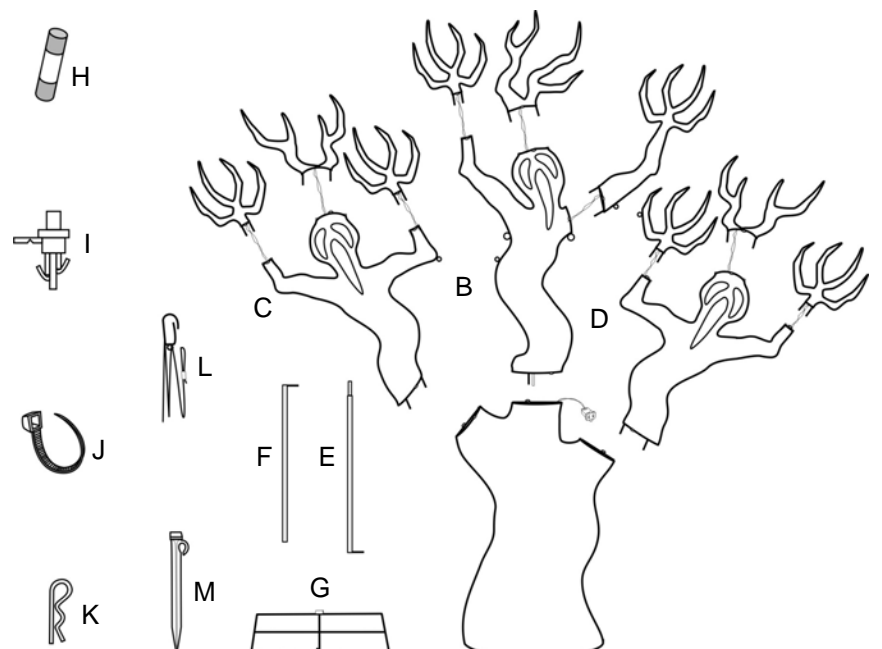

# ASSEMBLY


## 1 Assembling the Branches to the Upper Sections

NOTES: Place the Sections of the Ghost Tree down on the ground. Each Upper Section (B, C, D) has branches attached. Insert the connecting rods at the bottom of each branch into the connecting holes on the top of each Upper Section (B, C, D) then fasten together at the connecting loops with the Plastic Ties (J). Use the diagram of the finished Tree on this Assembly Sheet as a reference to place the branches on each Upper Section. The branches are connected to the Upper Sections (B, C, D) by the lighting string that runs throughout each section.

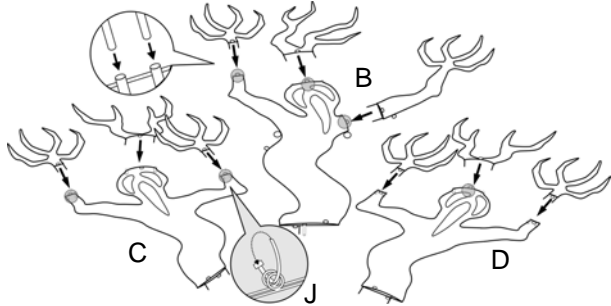


## 2 Assembling the Upper Middle Section to the Lower Base Section

Insert the connecting rods on the bottom of the Upper Middle Section (B) into the connecting holes on the top of the Lower Base Section (A) then fasten together at the connecting loops with the Plastic Ties (J).

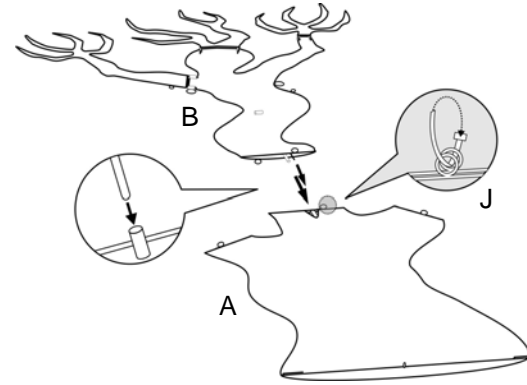


## 3 Assembling the Lower Base Section to the Base Stand

Insert the horizontal connecting rods on the bottom of the Lower Base Section (A) into the connecting holes on the Base Stand (G) then fasten together at the connecting loops with the Plastic Ties (J).

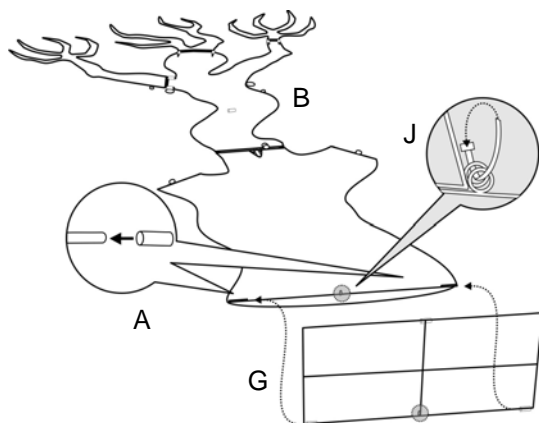


## 4 Attach the Stabilizing Bars to the Upper Middle Section and Base Stand

Attach the sections of the Stabilizing Bar (E, F) together and lock with built in locking pin. Insert the end connecting rod on the upper Stabilizing Bar (E) into the matching connecting hole on the back of the Upper Middle Section (B) then secure with the Cotter Pin (K). Insert the end connecting rod on the lower Stabilizing Bar (F) into the Base Stand (G) then secure with the Cotter Pin (K).

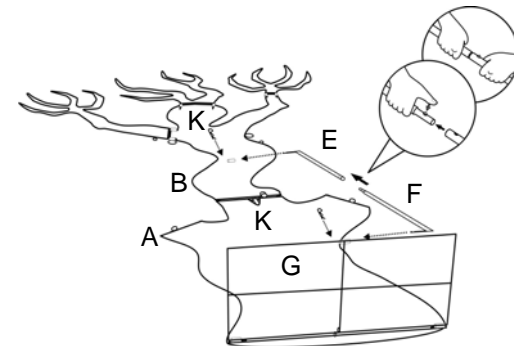


## 5 Stand the assembled sections A & B upright on the Base Stand

Stand the assembled sections A & B to an upright standing position.

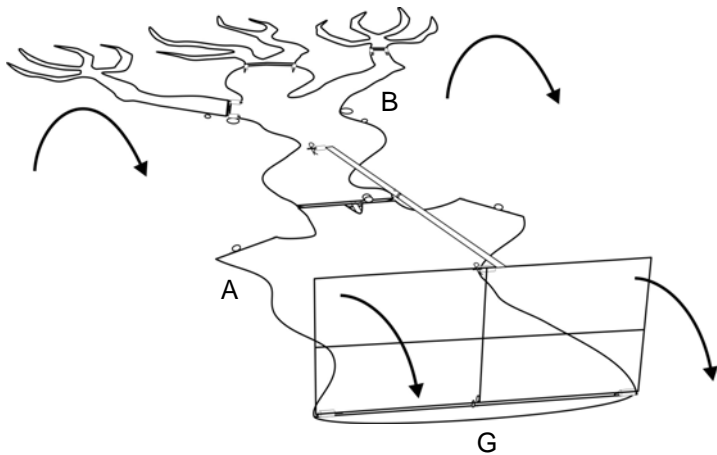

## 6 Assembling the branches to the Upper Left and Right Sections then to the Lower Base Section

Insert the connecting rods on the bottom of the Right and Left Upper Sections (C, D) into the connecting holes on the top of the Lower Base Section (A) then fasten together at the connecting loops with the Plastic Ties (J). Secure the Upper Sections (B,C,D) together with the Plastic Ties (J) at the connecting loops per the diagram below.

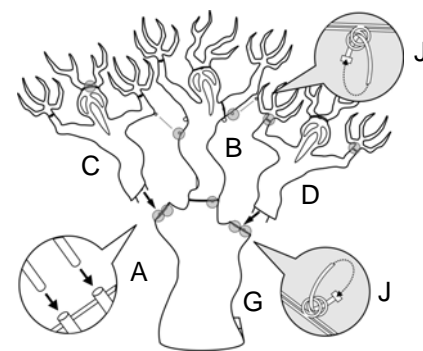

## 7 Assembling the Anchoring Strings and Ground Stakes

This product includes heavy duty Anchoring Strings (L) and large plastic Ground Stakes (M) to secure to ground. Hook the plastic clip end of each of Anchoring Strings (L) onto the metal loop on the Upper Middle Section (B) per the diagram below. Attach the looped end of the Anchoring String (L) to the top clip on the Ground Stakes (M). Pull the Anchoring Strings with Stake attached tightly out and away from the Tree evenly at 4 corners then insert the Stake firmly into the ground. With the remaining 4 Ground Stakes (M) secure the top clip to the Base Stand at 4 corners then into the ground firmly.

