

# Instructions / Assembly

## Before Use

1. Ensure the product is intact and free of damage. Check all components: 1 touchless foaming soap dispenser, 1 USB charging cable, and wall-mount accessories (if included). 2. The dispenser is equipped with a built-in rechargeable battery. Fully charge it before first use to ensure optimal performance.

## Charging Instructions

1. Locate the USB charging port on the bottom/back of the dispenser. 2. Connect one end of the included USB cable to the dispenser and the other end to a 5V USB power source (e.g., phone charger, power bank). 3. A red indicator light will turn on during charging; it will turn off once fully charged (charging time: approx. 2-3 hours). 4. Disconnect the USB cable after charging. The fully charged dispenser can be used continuously for 3-4 weeks under daily use.

## Refilling Soap

1. Press the release button (if equipped) or twist the top cover counterclockwise to open the dispenser. 2. Pour foam soap (recommended) or diluted liquid soap (1:3 soap to water ratio) into the tank, do not exceed the maximum capacity (13.5oz/400ml) to avoid leakage. 3. Wipe off any spilled soap on the dispenser surface. 4. Tighten the top cover clockwise until secure.

## Foam Volume Adjustment

1. Press the power button once to turn on the dispenser (blue indicator light on). 2. Short-press the power button repeatedly to switch between 4 foam levels (from low to high). 3. The indicator light will flash corresponding times to indicate the current level. Adjust according to your needs to reduce soap waste.

## Installation Options

Option 1: Countertop Use - Place the dispenser on a flat, dry surface. Ensure the bottom anti-slip pad is attached to protect the desktop and enhance stability. Option 2: Wall-Mounted Use - 1. Clean and dry the wall surface (smooth, non-porous surfaces are recommended). 2. Peel off the protective film of the adhesive pad and attach it to the back of the dispenser. 3. Press the dispenser firmly against the wall for 30 seconds, wait 24 hours before use to ensure strong adhesion. 4. To remove, gently peel off the dispenser from the wall.

## Usage

1. Turn on the dispenser (power button on). 2. Place your hand 2-3 inches below the sensor window. The dispenser will automatically dispense foam within 0.5 seconds. 3. Remove your hand after dispensing; the dispenser will enter standby mode to save power. 4. Press the power button for 3 seconds to turn off the dispenser (indicator light off).

## **Cleaning & Maintenance**

1. Turn off the dispenser and disconnect the power before cleaning. 2. Wipe the surface with a damp cloth; do not immerse the dispenser in water (IPX5 waterproof rating, resistant to splashing water only). 3. Clean the sensor window regularly with a dry cloth to avoid obstruction affecting sensitivity. 4. Empty and clean the soap tank every 2 weeks to prevent soap residue buildup.

## **Notes**

1. Use only foam soap or diluted liquid soap; avoid thick gel soap or sanitizer to prevent clogging. 2. Keep the dispenser away from high temperatures and direct sunlight. 3. Do not disassemble the dispenser by yourself to avoid damaging internal components. 4. Keep out of reach of children; the sensor is sensitive to small objects. 5. If the dispenser fails to work, check if it is powered on, fully charged, or if the soap tank is empty.