

EN

With your inspiring rating, COSTWAY will be more consistent to offer you EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!

DE

Mit Ihrer inspirierenden Bewertung wird COSTWAY konsistenter sein, um Ihnen EIN SCHÖNES EINKAUFSERLEBNIS, GUTE PRODUKTE und EFFIZIENTEN SERVICE zu bieten!

FR

Avec votre évaluation inspirante, COSTWAY continuera à fournir une EXPÉRIENCE D'ACHAT PRATIQUE, des PRODUITS DE QUALITÉ et un SERVICE EFFICACE !

ES

Con su calificación inspiradora, COSTWAY será más consistente para ofrecerle EXPERIENCIA DE COMPRA FÁCIL, BUENOS PRODUCTOS y SERVICIO EFICIENTE.

IT

Con la tua valutazione incoraggiante, COSTWAY sarà più coerente per offrirti ESPERIENZA DI ACQUISTO FACILE, BUONI PRODOTTI e SERVIZIO EFFICIENTE!

PL

Dzięki twojej opinii COSTWAY będzie mógł oferować jeszcze WYGODNIEJSZE ZAKUPY, LEPSZE PRODUKTY i SPRAWNIEJSZĄ OBSŁUGĘ KLIENTA.

US office: Fontana

UK office: Ipswich

AU office: Truganina

DE office: Hamburg

FR office: Saint Vigor d'Ymonville

PL office: Gdańsk



USER'S MANUAL

Misting Fan ES10138US-BK

SAFETY INFORMATION

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Read all instructions before using this appliance.
2. Use fan only for purposes described in the instruction manual.
3. Those who are not qualified electricians should not disassemble, repair or rebuild the fan.
4. This product must be grounded to reduce the risk of electric shock.
5. Do not unplug the fan by holding the cable cord. Grip plug and pull from wall outlet. Never yank on cord.
6. Close supervision is necessary when any appliance is used by or near children.
7. Unplug from outlet when not in use, when moving fan from one location to another, before putting on or taking off parts and before cleaning.
8. Avoid contact with moving parts.
9. Do not operate in the presence of explosive and/or flammable fumes.
10. To avoid fire hazard, NEVER place the cord under rugs or any parts near an open flame, cooking or other heating appliance.
11. Do not operate any appliance with a damaged cord or plug after the appliance malfunctions, or has been dropped/damaged in any manner.
12. The use of attachments not recommended or sold by the appliance manufacturer may cause hazards.
13. Do not let the cord hang over the edge of a table counter or come in contact with hot surfaces or leave exposed to high traffic areas.
14. Always use on a dry, level surface. Do not use the fan on the carpet as the mist may get the flooring.

15. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.

NOTE: If you feel the mist output is too strong and want to reduce the mist output, you can either turn the valve handle counter clockwise to reduce the water supply or change the fan speed from high to low setting.


CAUTION: This product is intended for household use ONLY and not for commercial or industrial applications.

Warning: Do not depend upon the on-off switch as the sole means of disconnecting power when installing or servicing the fan. Always unplug the power cord.

Warning: To reduce the risk of fire or electric shock, DO NOT use this fan with any solid-state speed control device.

ASSEMBLY


1. Remove the screws, washers and nuts from accessory kit.
2. Place the Telescope Pole onto the Base, align the four screw holes in both parts, then insert each hole with the screw and tighten them together firmly with four washers and four nuts at the base bottom.

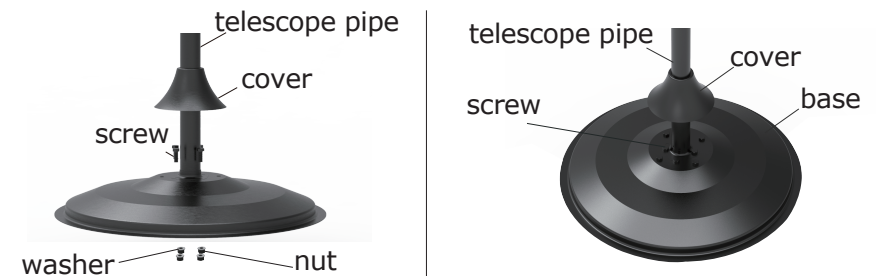

3. Remove the Height Adjustment Knob, insert the cover from top of the Telescope Pole and slide it down onto the base. Raise the Inner Pole to desired height, and then retighten the Height Adjustment Knob clockwise until secured.



4. Align the two Buckles with the Holes, press the two Buckles with fingers, and then insert down into the Inner Pole until the Buckles pop out from the Holes.

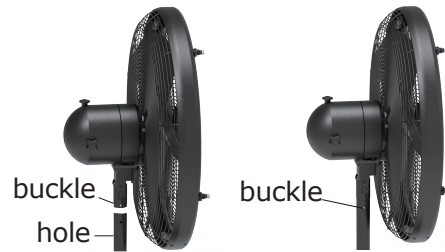

OPERATING INSTRUCTIONS

Place the fan on a safe, flat surface where it can not fall or be pulled by the cord. Plug the power cord into an outlet.

FAN HEAD ADJUSTMENT

In order to adjust the angle of the fan head, loosen the Tilt Adjustment Knob under the Fan Motor. Adjust the fan to the angle desired and retighten the knob to secure the fan at that angle.




MIST ON/OFF

1. Turn the fan speed to off position.
2. Attach the end of the Misting Hose Valve to a standard $\frac{3}{4}$ " garden hose and turn on the water.
3. Turn the Valve Handle to "ON" position to turn on water to the fan.
4. Turn the fan on again and enjoy the mist.
5. Turn the Valve Handle to "OFF" position to temporarily shut down the mist, if needed.



OFF/SPEED SELECTION

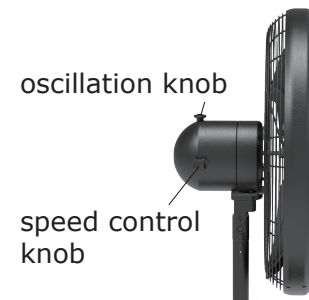

To operate fan, turn the speed control knob, located at the back of motor housing, to high "3", medium "2" or low "1". To turn off the fan, switch the speed control knob to off "0" position.

CLEANING

Always follow these instructions to correctly and safely care and clean for your personal fan.



CAUTION:


Always unplug the fan before cleaning or disassembling.

FAN SURFACE

1. DO NOT allow water to drip on or enter into fan housing.
2. Slightly moisten a cloth with a mild soap solution and then wipe off the surfaces of the fan.
3. DO NOT use any of the following as a cleaner , gasoline, thinner or benzene.

FAN BLADE AND FRONT GRILL

1. Use a spanner to carefully remove five hexagon nuts from the front grill.
2. Remove the front grill.

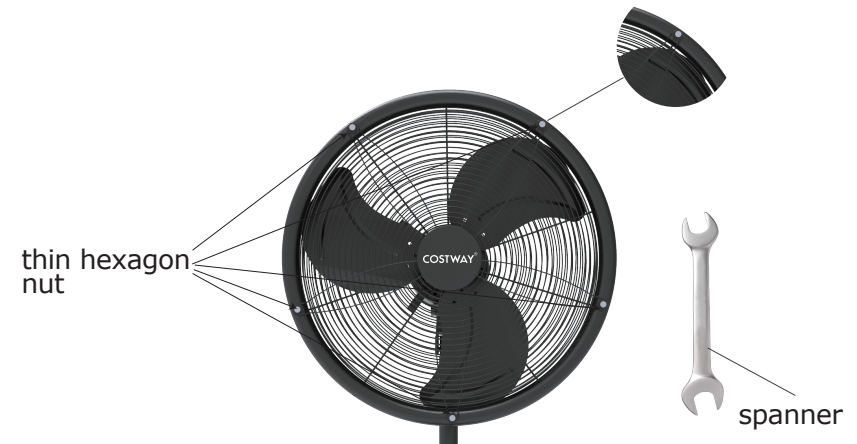

3. Clean the fan blades and grill with a soft damp cloth. Be cautious around the motor housing area.

NOTES: DO NOT attempt to remove the fan blades from the fan. DO NOT allow the motor or other electrical components to be exposed to water.

4. After cleaning, remount the grill and secure it with the hexagon nuts removed in the first step.

SPECIFICATIONS

Voltage	120V
Amperage	0.45A
Wattage	55W
Speeds	3
Size	19.69" X19.69" X56.30"