 


866



871

Parts List for DCE100B Type 1

Item Number	Part Number	Description	Qty Required
1	N434868	INFLATOR	1
2	N433236	SCREW	13
3	5140173-22	HOUSING ASSEMBLY	1
4	N433233	SCREW	1
5	N433232	SPRING WASHER	1
6	N433229	FLAT WASHER	1
7	N433228	FAN	1
8	N433235	SCREW	4
9	N433226	RUBBER PAD	1
10	N433225	MOTOR ASSEMBLY	1
11	N433227	RUBBER PAD	1
12	5140173-25	HANDLE ASSEMBLY	1
13	N433190	MODULE ASSY.	1
14	N433188	SPEED SELECTOR	1
15	N440805	SPRING	1
16	N440804	PIN	1
17	N433492	LOCK-ON BUTTON	1
18	N433493	SPRING	1
19	N433189	CYLINDER	1
20	N433234	SCREW	1
21	N434864	EXTENSION ASSY	1
22	N436354	NOZZLE ASSY.	1
25	N434872	LOGO LABEL	1
26	N434653	WARNING LABEL	1
27	N434652	RATING LABEL	1
866	DCB204	BATTERY PACK	1
871	DCB115	CHARGER	1

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit www.dewaltservicenet.com for current parts information.