





number	Desci
1	contro
2	Protectiv
3	cover
4	diverte
5	on/off l
6	Showe
7	Elbow wi
8	Handle
9	Showe
10	Showe
11	Cover
12	Screv
13	Allen

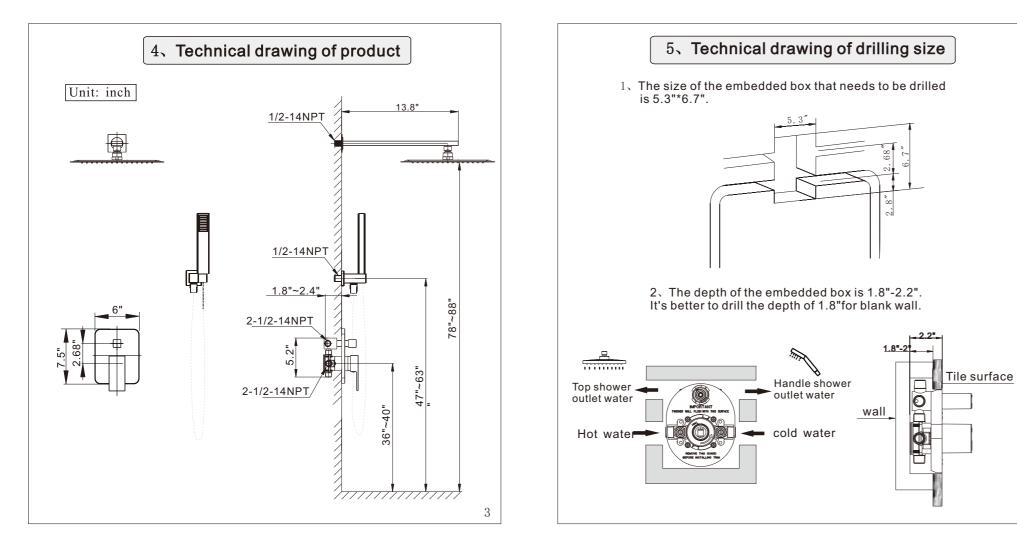


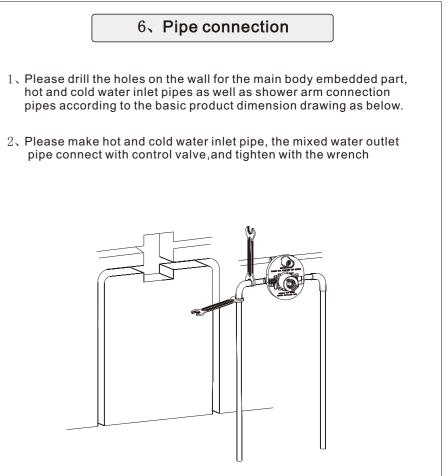


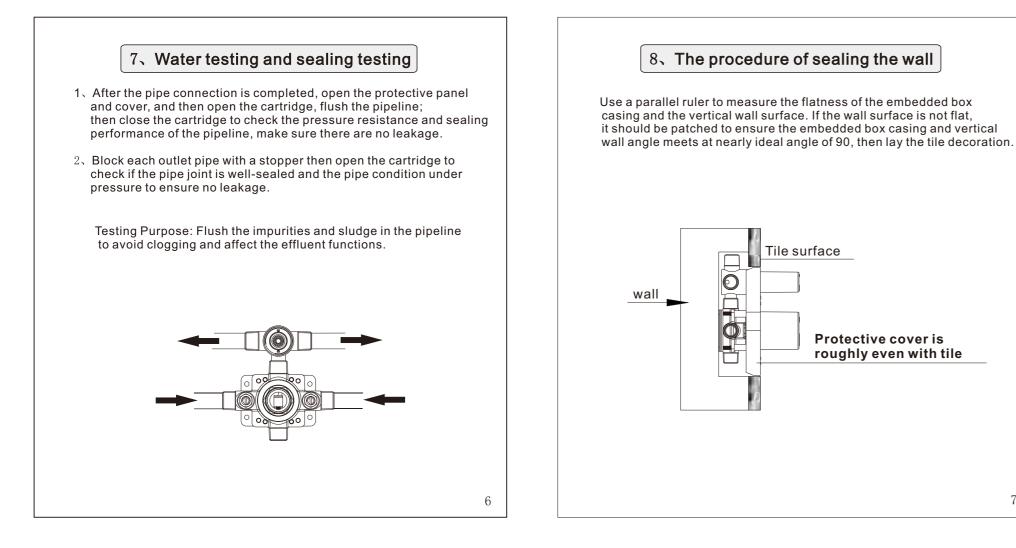

9

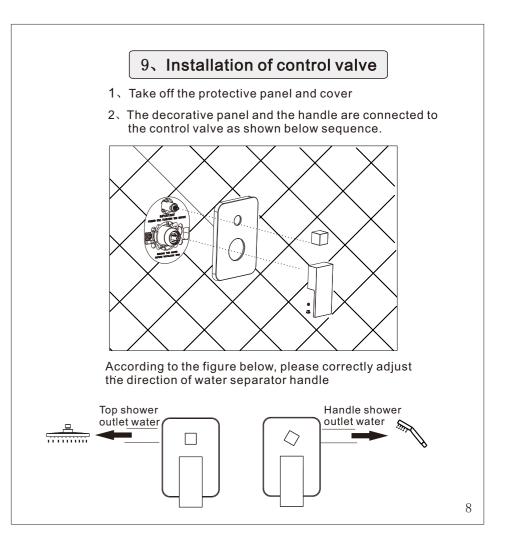

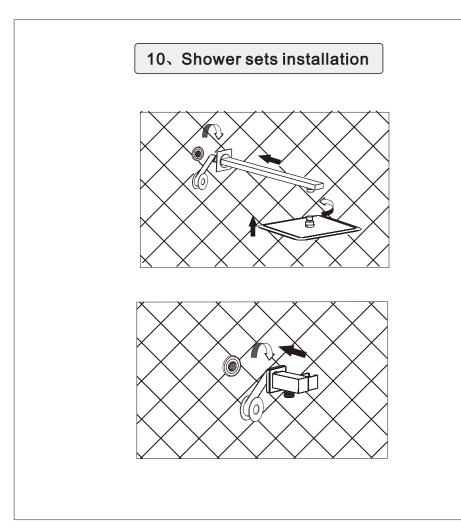

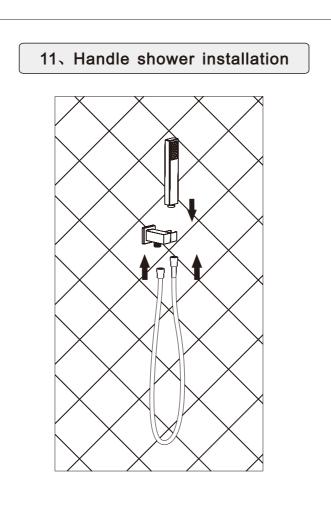

	1	
l	-	

In order to keep the faucet appearance smooth and good performance, please follow the below steps to clean and maintain the faucet.

- to clean the faucet.

7

12, Product reparation

If the cartridge is worn out which cause leakage, please turn off the water source. Remove the handle, panel, and decorative cover in sequence, remove the gland with a wrench, then take out the cartridge and copper sleeve.

Repair or replace the new cartridge, then install it again in sequence.

3、Clearance and Maintenance

1. Clean with water and dry with a soft cotton cloth;

2. Use a mild liquid and a colorless glass cleaner to remove surface dirt and scale, also you can use the cleaner without grinding function.

3、Do not use detergents, polishing tools, abrasive cloth, paper towels or scrapers to clean the faucet.

4. Do not use acid cleaners, insoluble granular detergents, soaps, etc