

| Problem | Cause | Remedy |
|------------------------|--|--|
| Tines do not engage | <ol style="list-style-type: none"> 1. Foreign object lodged in tines 2. Tine clevis pin(s) missing 3. Pulley and idler not in correct adjustment 4. Control cable not adjusted properly 5. Belt worn and/or stretched | <ol style="list-style-type: none"> 1. Dislodge foreign object 2. Replace tine clevis pin(s) 3. Take tiller to authorized service dealer 4. Adjust control cable 5. Replace belt |
| Tines skip over ground | <ol style="list-style-type: none"> 1. Improper rotation. | <ol style="list-style-type: none"> 1. Forward rotation should only be used on soil that has already been tilled, not on virgin soil. |
| Wheels do not engage | <ol style="list-style-type: none"> 1. Clevis pin missing 2. Control cable not adjusted properly 3. Belt worn and/or stretched | <ol style="list-style-type: none"> 1. Replace clevis pin 2. Adjust control cable 3. Replace belt |