



Use and Care Manual

STYLE+

- Use a soft, clean cloth that will not scratch the surface when dusting.
- Liquid spills should be removed immediately. Using a soft, clean cloth, blot the spill gently. Avoid rubbing.
- Never use water to clean your organization system.
- Use of furniture polish is not recommended. Should you use to use polishes, test in a hidden area first.
- Stains or marks from crayons or ink markers will be difficult to remove.
- Always unload unit prior to moving it.
- If shelves begin to bow or bend, the shelf is overloaded. Evenly distribute the weight throughout the unit.
- Follow safety precautions found in the instruction manual.