



THD SKU# 1006 128 592

Model # 21RT0832124

ASSEMBLY INSTRUCTIONS

2.5ft Halloween Classics LED Ghost

USE AND CARE GUIDE

PLANNING ASSEMBLY

Carefully remove all the parts from the box and place them on the ground or a flat surface. Many parts are connected by the lighting string that runs throughout the item. Take special care not to pull, cut or damage the lighting string. Read the entire manual prior to assembly and identify all the parts included in the package against the parts list. It is recommended to assemble parts of the product while laying flat on the ground versus standing the item up to assemble the parts. If any parts are missing or damaged do not attempt assembly but contact our customer service center or return the product to place of purchase with receipt.

* Assembly of this product may require more than one person.

Pre-Operation

CAUTION: Grasp the plug to insert or remove from the power source. Do not unplug by pulling on the cord.

CAUTION: The lighting string on this product is rated at 2.4 Watts (0.02 Amps). Do not overload. Do not connect to another lighting string, decorative outfit or other electrical products. Before you use or re-use this product inspect it carefully. Discard or return to place of purchase with purchase receipt if the product has cuts, damage, frayed wire insulation on cords, cracks in the socket enclosures, loose connections, exposed copper wire or other obvious damage.

Care and Cleaning

- Carefully remove the product from wherever it is placed. This helps to avoid any undue strain or stress on the product connections and wires. If the product is placed somewhere other than the ground it should be well secured and flat.
- Carefully disassemble the product taking caution not to cut any electrical wires.
- Wipe the product with a damp cloth and allow to dry before storing.
- Store the product neatly in a cool, dry location protected from sunlight.

Trouble Shooting

- Ensure that the floor or surface that the item sits on is flat and level
- Be sure to plug the item correctly to a wall outlet or a UL Listed Power Cord
- Ensure all parts are assembled properly per the Instruction Manual
- If the item does not light check for loose or broken bulbs and connections
- Do not plug into other electrical items
- If the item has multiple Light String Cords be sure to plug in all cords
- Check for Broken or Burned Out Fuse In Plug

Guarantee

What is Covered

The product is intended for residential seasonal use for 90 days per year. This product is covered by a 90 days limited guarantee due to defects in material and workmanship. Return the product with purchase receipts to the location of purchase for refund within 90 days of purchase.

What is Not Covered

This warranty does not cover commercial use, normal wear and tear, products not used in accordance with directions provided on or with the product, burn out of bulbs or LEDs, products that have been subjected to unauthorized repair and/or modification and damage caused by shipping and improper handling, alterations, misuse, in store display models or accidents. Questions, problems, missing parts? Before returning to the store, call Home Accents Holiday Customer Service 8 a.m.-6 p.m., EST, Monday-Friday



Thank you!

We appreciate the trust and confidence you have placed in Home Accents through the purchase of this 2.5ft Halloween Classics LED Ghost. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Home Accents!


1-877-527-0313

HOMEACCENTSHOLIDAY.COM

Parts List		
A	Right Wing	1
B	Left Wing	1
C	Upper Body Halves	2
D	Lower Body Halves	2
E	Spring	1
F	Base Stand	1

Hardware List		
G	Bolt & WingNut	1
H	Spare Fuse	2
I	Spare Bulb	2
J	Plastic Tie	15
K	Ground Stake	4


Diagram of Parts

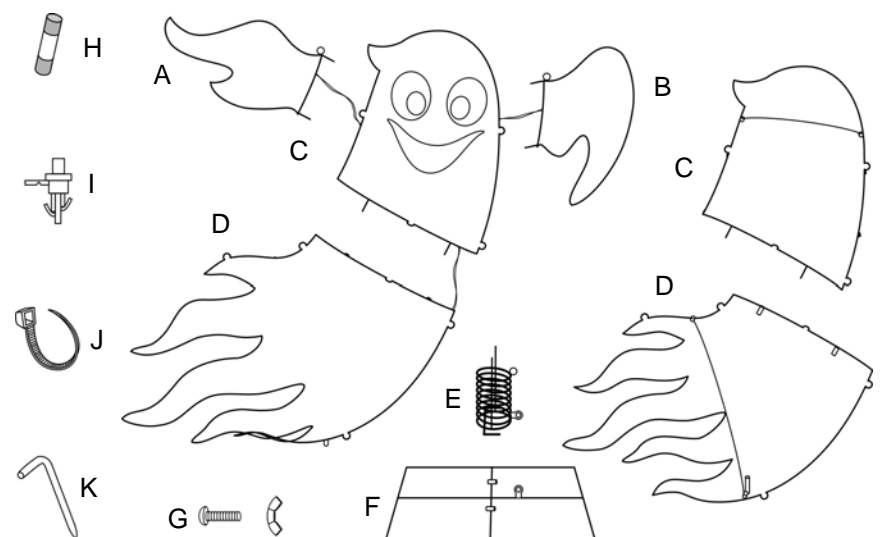

ASSEMBLY


1 Assembling the Lower Body

Align the two Lower Body Halves (D) with each other then insert the connecting rods on one half into the connecting holes on the other half and fasten together at the connecting loops with Plastic Ties (J).

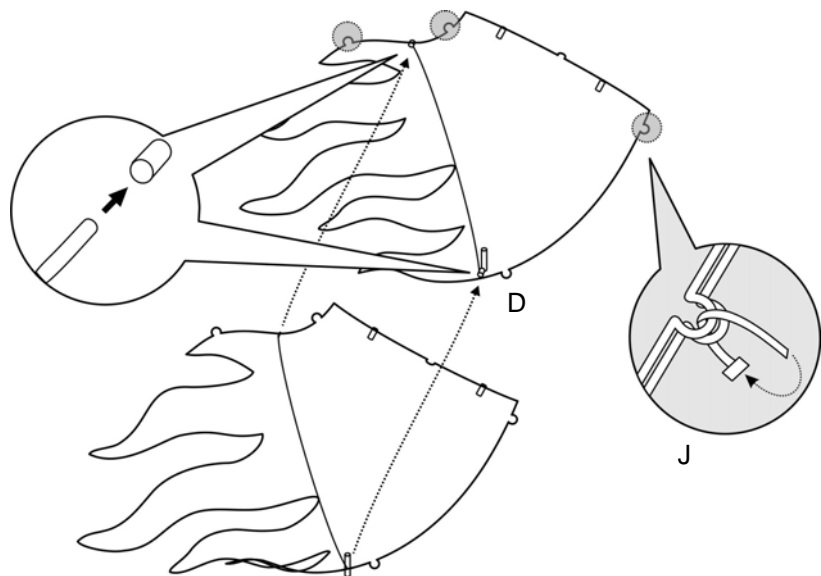


2 Assembling the Upper Body

Align the two Upper Body Halves (C) with each other then insert the connecting rods on one half into the connecting holes on the other half and fasten together at the connecting loops with Plastic Ties (J).

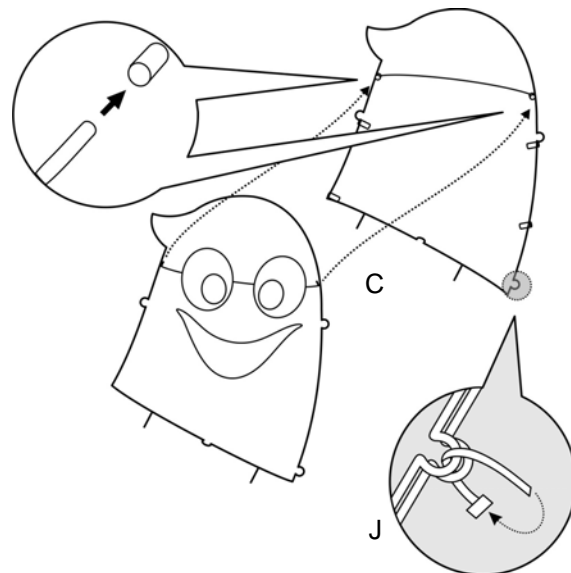


3 Assembling the Wings to Upper Body

Insert the connecting rods on the Right and Left Wings (A,B) into the connecting holes on the Upper Half Body of Ghost (C) and fasten together at the connecting loops with Plastic Ties (J).

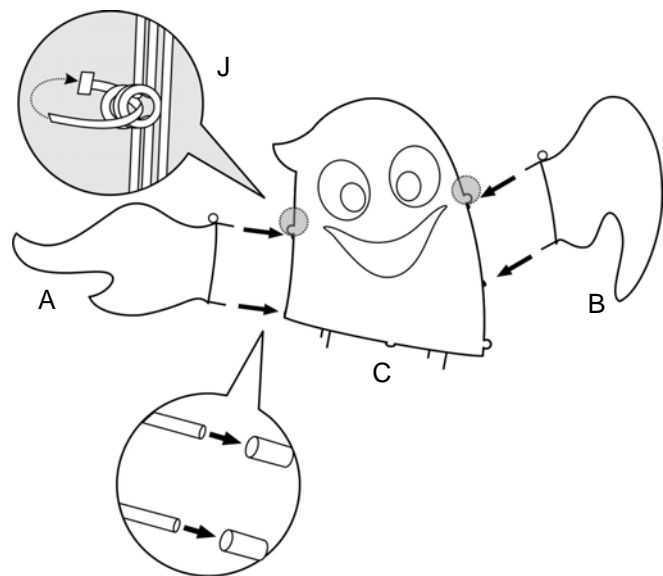


4 Assembling the Upper Body to the Lower Body

Insert the connecting rods at the bottom of the Upper Body (C) into the connecting holes at the top of the Lower Body (D) and fasten together at the connecting loops with Plastic Ties (J).

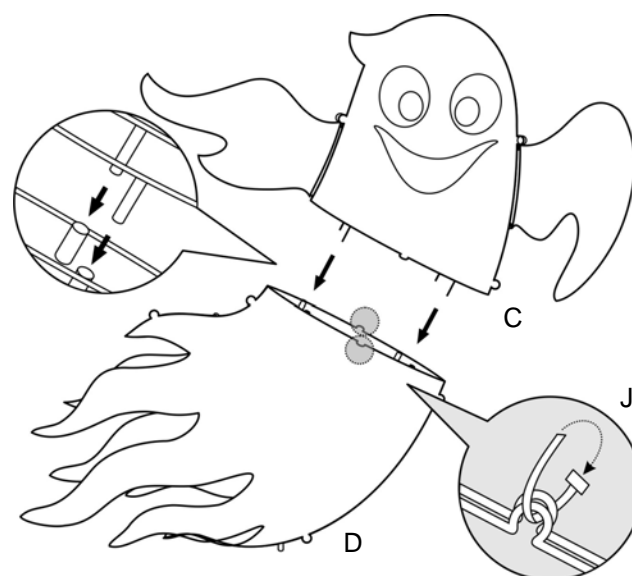

5 Attaching the Spring to the Body

Insert the connecting rods on the top of the Spring (E) into the connecting holes at the bottom of the Lower Body (D) then secure them together at the connecting loops with Plastic Ties (J). Attach the two horizontal metal connecting rods at the bottom of the Spring (E) to the connecting holes in the middle of the Base Stand (F) then secure together at the connecting loop with the Bolt & Wingnut (G).

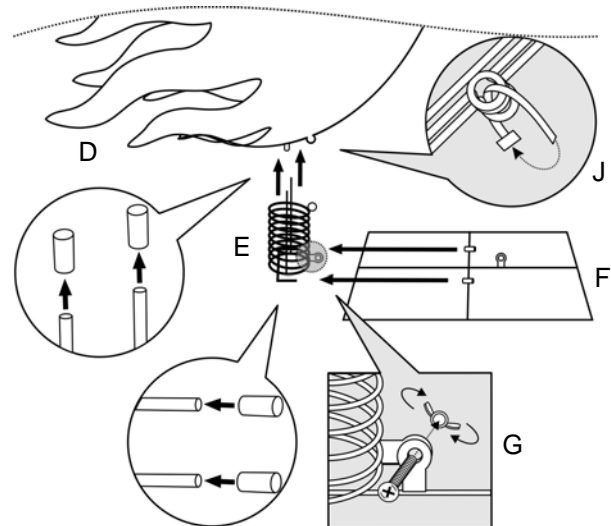

6 Assembling the Ground Stakes

Insert the Ground Stakes (K) over the connecting loop or frame at four corners of the Base Stand (F) then into the ground firmly.

