



INSTRUCTION MANUAL

Steel Garden Wagon with Handle

Ver. 3 SKY2567 + SKY5935



Thank you for choosing us! Since 2002, Best Choice Products has been bringing customers high-quality products at the absolute lowest price. With everything ranging from instruments and toys to furniture and outdoor, we've got your everyday living essentials covered. We're centered around a customer-first philosophy – with free shipping, exceptional customer service, and a catalog sourced with you in mind.

NOTICE

Please retain these instructions for future reference.

- · Please do not exceed the weight limitations of this item.
- Use a hand or foot pump to inflate tires to a maximum of 25 PSI.
- · Do not sit or ride in this wagon.
- Do not allow children to use this item unsupervised. This is not a toy.
- · Always distribute the load evenly over the surface of the wagon.
- · Do not load weight on the edges of the wagon.
- Do not operate in the vicinity of sharp or dangerous objects that could damage the tires.
- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws, and knobs before use.
- · Reconfirm that all bolts, screws, and knobs are secure every 90 days.
- Be aware that some parts are heavy and have sharp edges.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.

TOOLS REQUIRED

 




 


 


HARDWARE
























PARTS

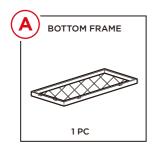


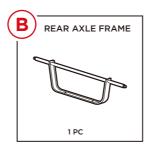


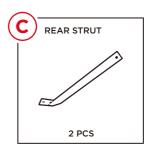


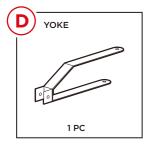


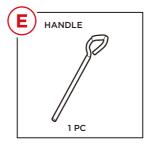


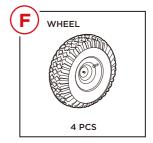


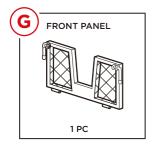


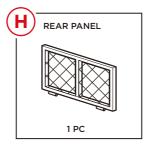


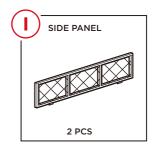

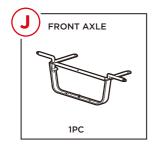

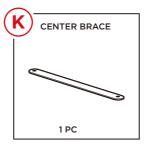


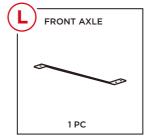

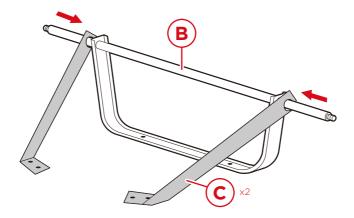

Attach part C rear struts to both ends of part B rear axle frame.


2

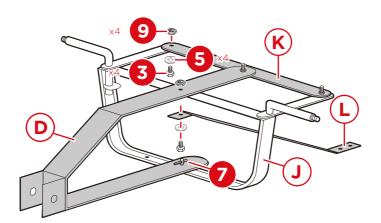


Use a part 3 bolt, part 5 nut, and part 9 flat washer to attach part D yoke, part J front axle, and part L front axle brace together.

Use three part 3 bolts, three part 5 nuts, and three part 9 flat washers to attach part K center brace to part D yoke and part J front axle with a part 7 open pin.

PRODUCT ASSEMBLY

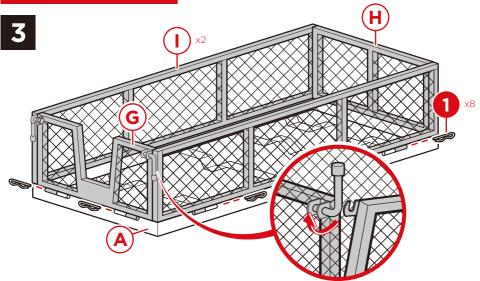


Attach part G front panel, part I side panels, and part H rear panel to part A bottom frame using two part 1 B pins for each panel.

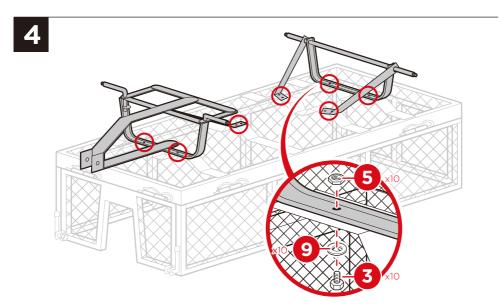

Attach the completed item from step 1 to part A bottom frame using six part 3 bolts, six part 5 nuts, and six part 9 washers.


Attach the completed item from steps 2 to part A bottom frame using four part 3 bolts, four part 5 nuts, and four part 9 washers.

PRODUCT ASSEMBLY

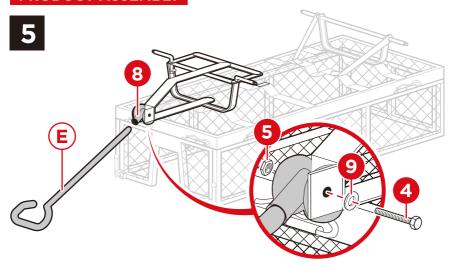

Attach part 8 handle coupler and part E handle to part D yoke using a part 4 bolt, part 5 nut, and part 9 washer.

NOTE: Firmly tighten the hardware at the end of this step

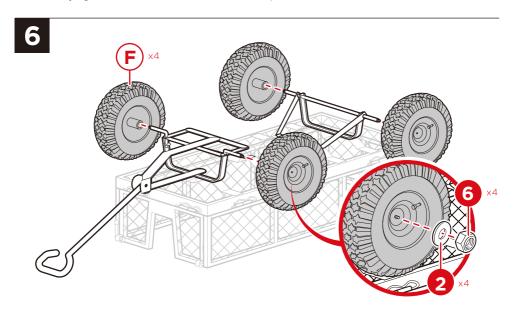

Insert four part F wheels into part J front axle and part B rear axle frame using a part 2 washer and part 6 nut for each wheel. Use the air pump to inflate the wheels to a maximum of 25 PSI.

NOTE: Use pliers to bend the pin and lock the wheel in place.

ASSEMBLY IS COMPLETE!





PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

CONTACT US; WE'RE HERE 7 DAYS A WEEK TO HELP YOU!



bestchoiceproducts.com



customerservice@ bestchoiceproducts.com



844.948.8400



LEARN MORE!

WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.