 


USE AND CARE GUIDE

ROSEMONT COFFEE TABLE W/WICKER TOP

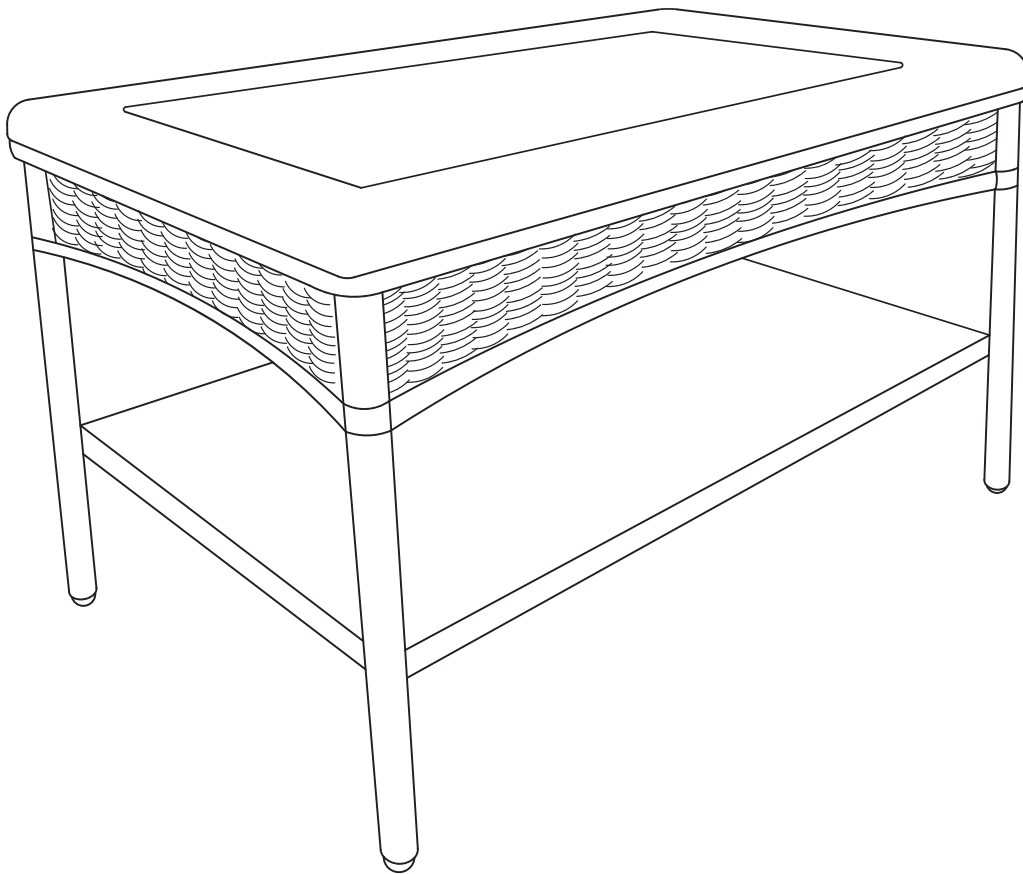

Questions, problems, missing parts?
Before returning to the store, call StyleWell Customer Service
8 a.m. – 7 p.m., EST, Monday-Friday, 9 a.m. – 6 p.m., EST, Saturday

1-877-527-0313
HOMEDEPOT.COM

THANK YOU

We appreciate the trust and confidence you have placed in StyleWell through the purchase of this coffee table. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing StyleWell!

Table of Contents

Table of Contents	2	Assembly	6
Safety Information.....	2	Maintenance	7
Warranty.....	3	Care and Cleaning.....	7
Pre-Assembly.....	4		
Planning Assembly.....	4		
Hardware Included.....	4		
Package Contents.....	5		

Safety Information

SAVE THESE INSTRUCTIONS



WARNING: THIS TABLE WAS MADE FOR THE EXPLICIT PURPOSE OF PROVIDING OUTDOOR FUNCTIONS AND IS NOT TO BE USED AS A TOY. THIS PRODUCT IS INTENDED FOR NORMAL OUTDOOR USE; HOWEVER, THE MANUFACTURER RECOMMENDS STORING AND/OR COVERING THIS PRODUCT WHEN ANY FORMIDABLE/SEVERE WEATHER IS APPROACHING.



WARNING: DO NOT LOCATE THIS PRODUCT NEAR OPEN FLAMES. DO NOT USE THIS PRODUCT AS A SUPPORT. DO NOT SHAKE, LEAN OR CLIMB ON THE PRODUCT. CHILDREN UNDER THE AGE OF 10, NEAR THE PRODUCT, SHOULD BE SUPERVISED BY A COMPETENT ADULT AT ALL TIMES. THIS PRODUCT IS NOT INTENDED FOR COMMERCIAL USE, WHICH WILL VOID THE WARRANTY.

READ ALL INSTRUCTIONS BEFORE USE

To reduce the risk of injury to persons:

1. Close supervision is necessary when this furnishing is used by or near children, or disabled persons, if applicable.
2. Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
3. Do not move the coffee table while it is occupied. Failure to obey this caution could result in injury.

Warranty

This outdoor patio product has a limited residential domestic warranty from the date of the original retail purchase, that the product will be free from defects in material and workmanship and is valid for the original retail purchaser only, with the original sales receipt including purchase date, and is not transferable. In certain warranty claim cases, photographs, and/or visual inspection reports may be required. Should replacement of the warranted item(s) be unavailable, the manufacturer reserves the right to substitute items of our choice that are of similar style and quality. Warranty coverage period depends on the purchased item. This warranty does not apply to any damage caused to the product as a result of the product being used in a commercial or industrial setting. The terms of this warranty are subject to change without notice.

Steel Frame – 1 Year: We warrant the frame to be free of manufacturing and workmanship defects to the original purchaser for one year. If the steel frame fails structurally within one year from the original date of purchase, the manufacturer will replace the frame in the original finish and style whenever possible at no charge to the original purchaser.

Wicker Weave & Vinyl Strap – 1 Year: If the wicker weave or vinyl strap fails structurally within one year from the original date of purchase, the manufacturer will replace the frame in the original finish and style whenever possible at no charge to the original purchaser. The replacement shall be on the individual item or items not on the complete collection or setting. Fading or discolorations resulting from exposure to the elements, chemicals or from spills are not covered.

Alternative Tops – 1 Year: Residential Use: Alternative Table Tops (non-metal) are warranted for one year for defects. Glass and tile tops are not covered in this warranty.

Warranty Exclusions: Failure to follow general care and maintenance guidelines will void all warranty. Excluded from the warranty are any products used for commercial, industrial, contract or any other non-residential purposes, display models, clearance items, or items purchased “as is”, freight damage, products damaged by acts of nature such as, but not limited to, freezing or high winds, extreme climate conditions, vandalism, fire, abuse, or improper assembly. Fading and discolorations from exposure to the elements, chemicals, oils, spills or fluids; hardware against corrosion or rusting; splitting or buckling of tubing resulting from exposure to water and freezing temperatures are not covered. After 90 days from date of purchase, shipping and handling charges are the original purchaser’s responsibility. Also excluded are purchased or replacement parts; plastics, normal fading, scratching, or chipping of the finish, staining or discoloration of furniture, accidental damages, repairs, or modifications by consumer, normal wear and tear. Exclusion also includes loss of time, inconvenience, travel, packaging, and/ or any other incidental damages. Lack of original receipt will void warranty. At no time shall the manufacturer’s responsibility exceed the value of the replacement product. The manufacturer reserves the right to substitute similar product of same quality if model in question is no longer in production or available.

Pre-Assembly

PLANNING ASSEMBLY

Compare all parts with the Hardware Included and Package Contents sections. If any part appears missing or damaged, do not assemble and use this product. Contact Customer Service.

HARDWARE INCLUDED



AA



BB



CC




DD

Part	Description	Quantity
AA	Panhead Allen Bolt (6×16mm)	8
BB	Washer (6mm)	4
CC	Allen Wrench (4mm)	1
DD	Plastic Cap (6mm)	4

Pre-Assembly (continued)

 PACKAGE CONTENTS

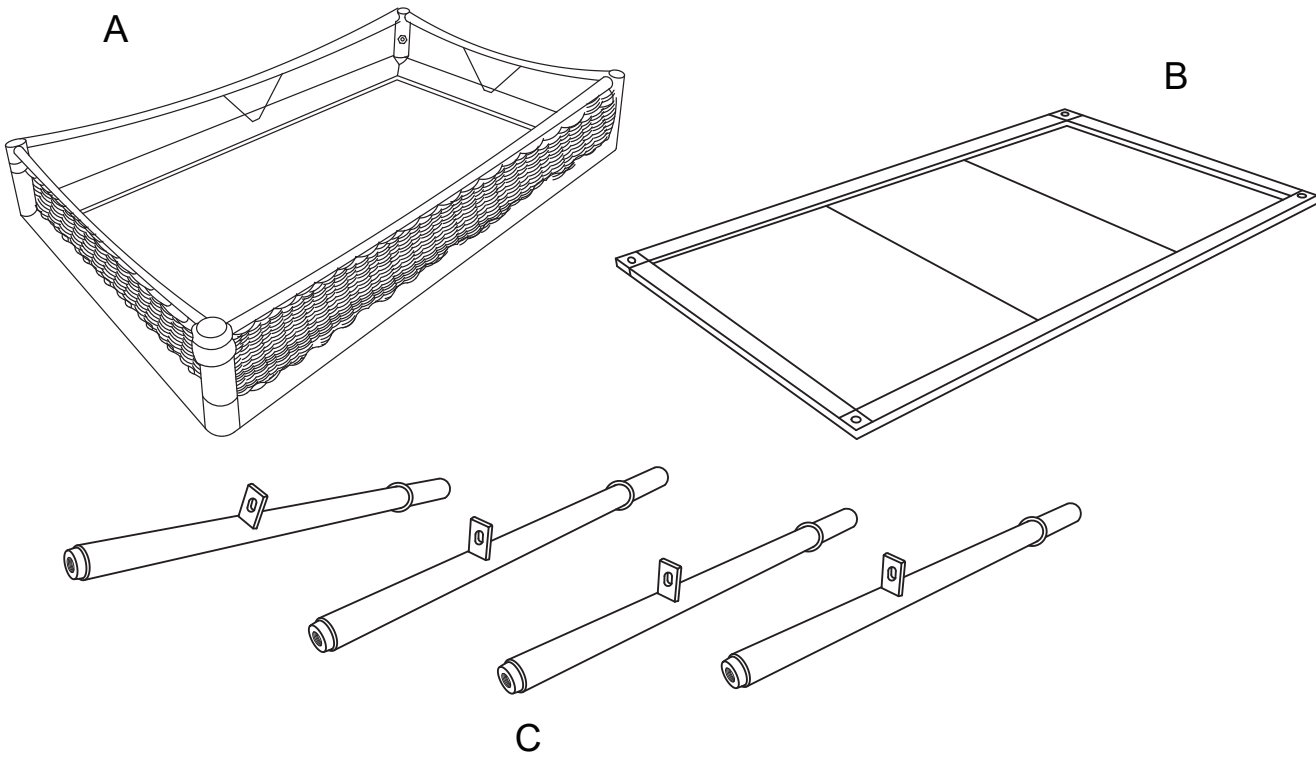


Part	Description	Quantity
A	Table Top	1
B	Shelf	1
C	Leg	4

Assembly


1 Attaching the Shelf

 - For easy assembly, assemble the product upside down on a soft surface.
- Attach the legs (C) to the shelf (B) by aligning holes on the shelf (B) to the legs (C) and inserting panhead Allen bolts (AA) with washers (BB).
- Tighten half-way using the Allen wrench (CC).
- Do not tighten completely.

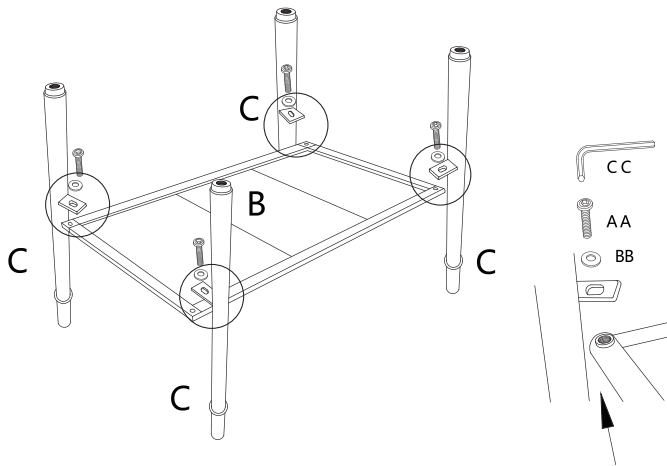


2 Attaching the Table Top

 - Attach the legs (C) to the top (A) by aligning holes on the top (A) to the legs (C) and inserting panhead Allen bolts (AA)
- Tighten half-way using Allen wrench (CC).
- Do not tighten completely.

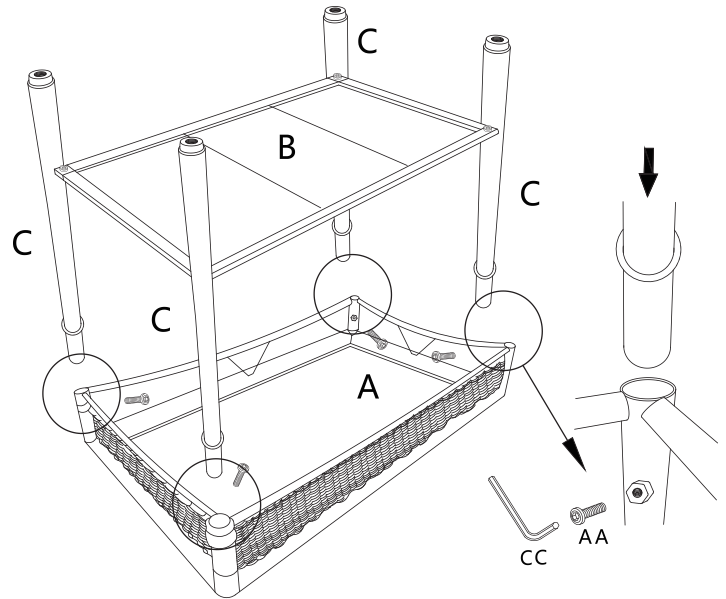

3 Installing the Decorative Screw Caps

 - Check the assembled table and make adjustments if needed.
- Fully tighten all panhead Allen bolts (AA) with the Allen wrench (CC).
- Attach all plastic caps (DD).

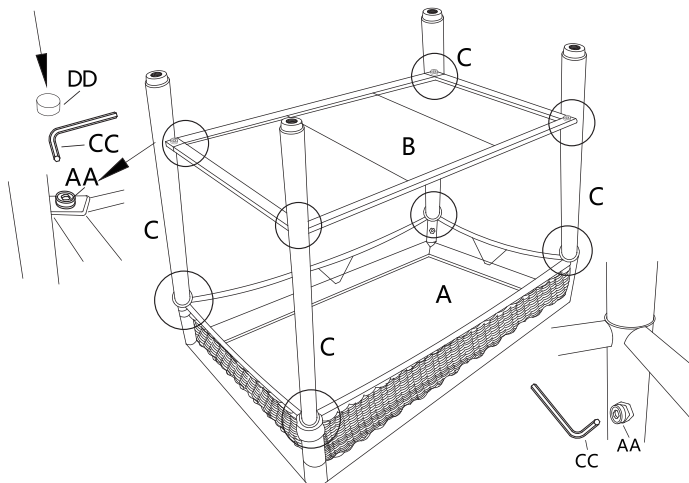

4 Completing the Assembly

- Place the table right side up.
- The table is now ready for your enjoyment.



Maintenance

- Wash the frame with a mild solution of soap and water, rinse with clean water, and dry thoroughly.
- Never use cleaners that contain acid or abrasive materials.
- Use and operation: To improve the lifespan of this furniture, cover when not in use and store in a dry place in the off-season.

Care and Cleaning

- Before using, wipe with a clean, dry cloth. Do not use bleach or solvents. When not in use, store furniture in a cool, dry place.
- When cleaning the table top make sure to use a soft, clean cloth that does not bleed color as well.

StyleWell™

Questions, problems, missing parts?
Before returning to the store, call StyleWell Customer Service
8 a.m. – 7 p.m., EST, Monday-Friday, 9 a.m. – 6 p.m., EST, Saturday

1-877-527-0313

HOMEDEPOT.COM

Retain this manual for future use.