


Included Accessories

Thank you for purchasing this machine.
The following accessories are included with this product.

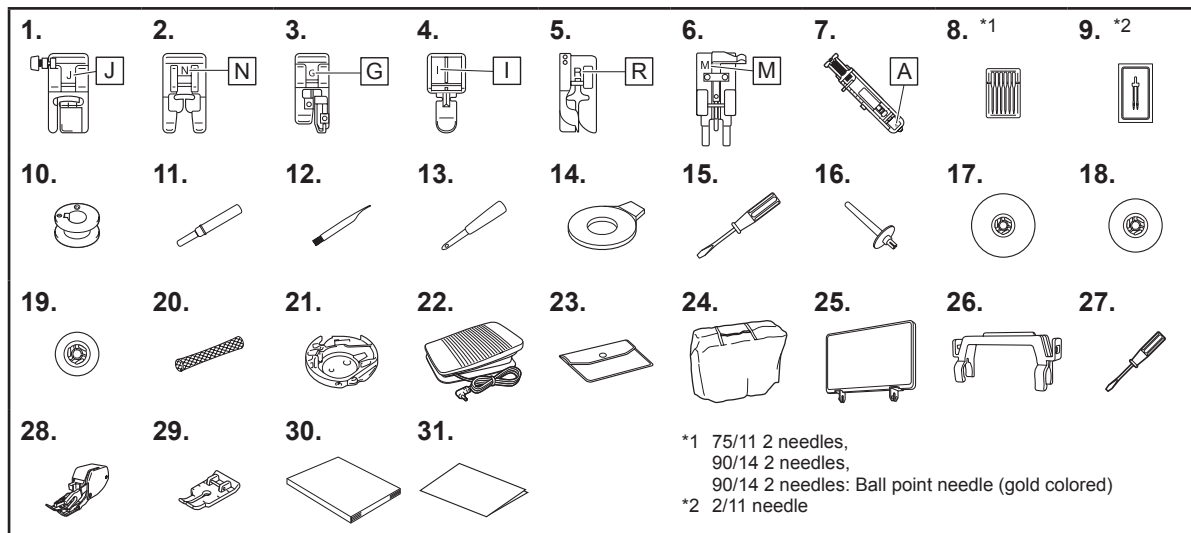

*1 75/11 2 needles,
90/14 2 needles,
90/14 2 needles: Ball point needle (gold colored)
*2 2/11 needle

No.	Part Name	Part Code		
		Americas	Europe	Others
1	Zigzag foot "J" (on machine)		XZ5134-001	
2	Monogramming foot "N"		XD0810-031	
3	Overcasting foot "G"		XC3098-031	
4	Zipper foot "I"		X59370-021	
5	Blind stitch foot "R"		XE2650-001	
6	Button fitting foot "M"		XE2643-001	
7	Buttonhole foot "A"		XC2691-133	
8	Needle set		X58358-021	
9	Twin needle		X59296-121	
10	Bobbin (4) (One bobbin is on machine.)	SA156	SFB: XA5539-151	SFB
11	Seam ripper		XF4967-001	
12	Cleaning brush		X59476-051	
13	Eyelet punch		XZ5051-001	
14	Disc-shaped screwdriver		XC1074-051	
15	Screwdriver (large)		XC8349-021	
16	Extra spool pin		XE2241-001	

No.	Part Name	Part Code		
		Americas	Europe	Others
17	Spool cap (large)		130012-024	
18	Spool cap (medium) (on machine)		XE1372-001	
19	Spool cap (small)		130013-124	
20	Spool net		XA5523-020	
21	Bobbin case (on machine)		XE7560-101	
22	Foot controller		XD0501-121 (EU area) XC8816-071 (other areas)	
23	Accessory bag		XC4487-021	
24	Soft cover		XC1103-022	
25	Stitch pattern plate		XH4166-001	
26	Stitch pattern plate holder		XE2238-002	
27	Screwdriver (small)		X55468-021	
28	Walking foot	SA140	F033N: XG6623-001	F033N F033CN
29	1/4" piecing foot	SA125	F001N: XC1944-052	F001N
30	Operation Manual	Contact your authorized Brother dealer.		
31	Quick Reference Guide			

■ Attaching the stitch pattern plate

The stitch pattern plate shows the stitches and the stitch numbers. A letter (A, G, J, N or R) indicating the presser foot that should be used appears below the stitch number. Attach the stitch pattern plate to the stitch pattern plate holder, and then attach the holder to the handle of the sewing machine as shown in the illustration below.

