


INTRODUCTION

Thank you for purchasing the Elite Platinum *Digital Air Fryer*. Your new *Digital Air Fryer* has a variety of functions to handle a wide array of cooking tasks. With its easy to use digital touch screen display and 7 Quick Menu functions, you can fry, cook, or even bake your favorite meals and snacks with ease! Best of all you will be cooking healthier without the addition of oil. Not only can you cook foods without the mess of oil but you can cook faster which saves you time and energy. Unlike most conventional deep fryers, the *Digital Air Fryer's* unique vapor system combined with circulating hot air will automatically make foods crispier and of course healthier without oil. We hope you enjoy your new Elite Platinum *Digital Air Fryer* and start cooking healthier today!

PARTS IDENTIFICATION

1. Frying basket
2. Drawer Pan
3. Push-button protective cover
4. Push- button Basket Release
5. Handle
6. Air Inlet
7. Touch-Screen Control panel
8. Temperature increase button
9. Temperature decrease button
10. ON/OFF/START button
11. Menu button
12. Timer increase button
13. Timer decrease button
14. Air outlet
15. Power Cord

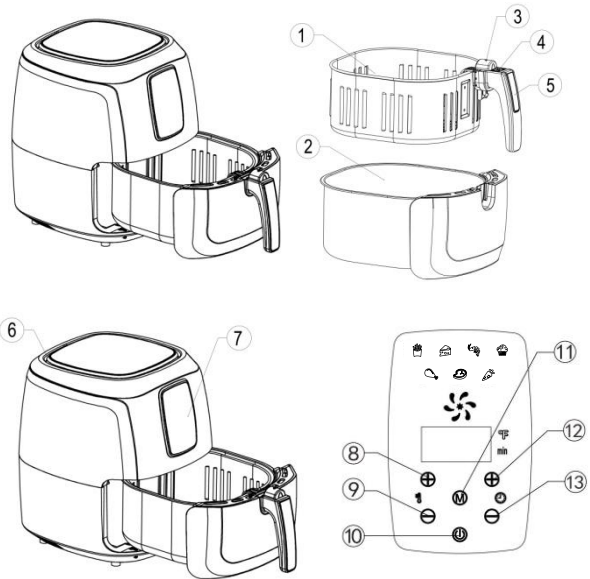

NOTE

The Basket (1) consists of a non-stick surface. To avoid scratching the non-stick surface, please use heat-proof silicone utensils.

