

Portable Backpack Chair User & Maintenance Manual

1. Product Introduction

1.1 Lightweight & Portable: This backpack chair adopts a foldable frame and detachable fabric, facilitating easy storage and carrying. Both assembly and disassembly are simple, allowing for convenient storage. With an ultra-lightweight design, it reduces your load and is easy to carry anywhere.

1.2 Stable Triangular Structure: The camping chair features a lightweight yet sturdy structure made of high-strength 7075 aluminum alloy. The triangular structure enhances stability while providing a high level of comfort, making it ideal for anglers, campers and hikers.

1.3 Material: The backpack chair is constructed with a 7075 aluminum alloy frame and durable 600D polyester fabric, which has stain-resistant, waterproof and scratch-resistant properties. Each chair weighs only 2.9 lbs (1.34 kg) and has a maximum load capacity of 330.6 lbs (150 kg).

1.4 Versatile Uses: With its ultra-light design, this portable camping chair is convenient for you to carry to any outdoor adventure. It is suitable for various occasions such as camping, hiking, fishing, barbecue parties, gardening and indoor use.

2. User Guide

2.1 Quick Assembly

1. Take the 7075 aluminum alloy foldable frame out of the storage bag. Hold both sides of the frame and gently pull outward to unfold it until you hear a "click" sound, indicating the triangular support structure is locked in place.
2. Lay the detachable 600D polyester fabric seat flat on the unfolded frame. Align the 4 pre-installed fixed buckles on the fabric with the corresponding buckling points on the frame, then press each buckle firmly to fasten securely.
3. Adjust the seat position to ensure it is flat and tight. Gently sit on the chair to test stability. If there is wobble, recheck the frame lock and buckles, and adjust until stable.

2.2 Correct Usage

- Do not exceed the maximum load capacity of 330.6 lbs (150 kg) to avoid structural damage.
- Place the chair on flat, solid ground. Avoid using it on uneven, slippery or soft surfaces (e.g., mud, unsupported sand) to prevent tipping.

- Sit in the center of the seat to maintain balance. Do not stand or jump on the chair, especially for children.
- When using outdoors, keep the chair away from open flames (e.g., barbecue grills) and high-temperature sources to protect the fabric.

2.3 Disassembly & Storage

1. Squeeze the release buttons on each fixed buckle to detach the fabric seat from the frame, then place the fabric aside gently.
2. Press the unlocking buttons on both sides of the frame, hold the frame with both hands and fold it inward until compact.
3. Put the folded frame and detachable fabric into the storage bag, zip it tightly, and store in a dry, ventilated place.

3. Maintenance & Care

3.1 Daily Cleaning

- For the 600D polyester fabric: Wipe off surface dust and stains with a damp cloth. For stubborn stains, use a mild detergent (avoid corrosive cleaners such as bleach) and rinse with clean water, then air-dry completely before storage.
- For the 7075 aluminum alloy frame: Wipe with a dry cloth to remove dust and moisture. If exposed to rain, dry it promptly to prevent oxidation.

3.2 Routine Inspection

- Regularly check the frame locks, buckles and fabric for damage, wear or looseness. Tighten loose parts in time; replace damaged parts (contact customer service) if necessary.
- Check the fabric for tears or water leakage. If the waterproof performance decreases, avoid using it in rainy conditions to prevent further damage.

3.3 Storage Precautions

- Store the chair in a dry, well-ventilated place, away from direct sunlight, high temperature and humidity to prevent fabric mold and frame oxidation.
- Do not fold the chair when the fabric is wet; ensure it is fully dried to avoid mold growth.
- Do not place heavy objects on the folded chair during storage to prevent deformation of the frame.

4. Troubleshooting

- Issue: Difficult to unfold the frame. Solution: Check if the unlocking buttons are pressed correctly; do not pull with excessive force to avoid damaging the lock mechanism.
- Issue: Fabric seat slips during use. Solution: Confirm that all fixed buckles are fully fastened; reattach the buckles if they are loose.
- Issue: Chair wobbles when sitting. Solution: Check if the frame is fully unfolded

and locked, and if the ground is flat. Adjust the frame position or move to a flat surface.

- Issue: Fabric is stained and hard to clean. Solution: Use a mild detergent and a soft brush to gently scrub, then rinse thoroughly and air-dry.

5. Customer Service

If you have any questions about the use, maintenance or replacement of parts, please contact our customer service team. We will provide you with professional and timely assistance.