


USE AND CARE GUIDE

ACKWOOD 7 LIGHT CHANDELIER

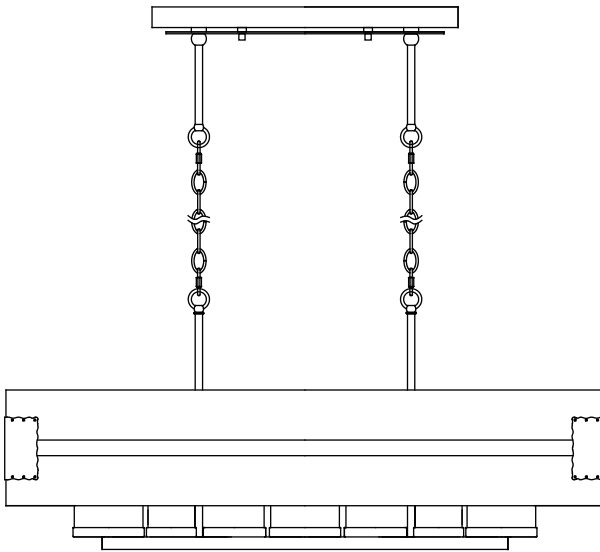

Questions, problems, missing parts? Before returning to the store,
call Home Decorators Collection Customer Service
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-800-986-3460

WWW.HOMEDEPOT.COM/HOMEDECORATORS

THANK YOU

We appreciate the trust and confidence you have placed in Home Decorators Collection through the purchase of this 7-light chandelier. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Home Decorators Collection!

Table of Contents

Table of Contents.....	2	Hardware Included.....	3
Safety Information.....	2	Package Contents.....	4
Warranty.....	2	Installation.....	5
Pre-Installation.....	3	Care & Cleaning.....	7
Planning Installation.....	3	Troubleshooting.....	7
Tools Required.....	3		

Safety Information

- Read all instructions before installing.
- Consult a qualified electrician for installation of this fixture.
- If you have any non-electrical questions about this fixture, please contact our Customer Service Team at 1-800-986-3460 or visit WWW.HOMEDEPOT.COM/HOMEDECORATORS.
- Please reference your SKU 1001-474-159 or (UPC 773546255684).
- Save these instructions for future reference.



CAUTION: Before starting installation of this fixture or removal of a previous fixture, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box.



IMPORTANT: Do not install this lighting system in a wet location.



IMPORTANT: Inspect the wire insulation for any cuts, abrasions, or exposed copper that may have occurred during shipping. If there is a defect in the wire, do not continue the assembly process. Please call our Customer Service Team at 1-800-986-3460.

Warranty

LIMITED WARRANTY

WHAT IS COVERED

The manufacturer warrants this lighting fixture to be free from defects in materials and workmanship for a period of five (5) years from date of purchase. This warranty applies only to the original consumer purchaser and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modification, alteration, neglect, or mishandling.

WHAT IS NOT COVERED

This warranty shall not apply to any product that is found to have been improperly installed, set-up, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, faulty installation, or any other failure not relating to faulty material or workmanship. This warranty shall not apply to the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear. The manufacturer does not warrant and specially disclaims any warranty, whether express or implied, of fitness for a particular purpose, other than the warranty contained herein. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss or damage, including but not limited to any labor/expense costs involved in the replacement or repair of said product.

Contact Customer Care at 1-800-986-3460 or visit WWW.HOMEDEPOT.COM/HOMEDECORATORS.

Pre-Installation

PLANNING INSTALLATION

Read all instructions before assembly and installation. Carefully unpack and identify all parts referred to in the Hardware Included and Package Contents section of this manual. Do not discard any small part before finishing the installation.

TOOLS REQUIRED



Safety goggles



 
Measuring tape



Phillips screwdriver



Flathead screwdriver



Wire strippers



Wire cutters



Ladder




Electrical tape

HARDWARE INCLUDED




NOTE: Hardware not shown to actual size.

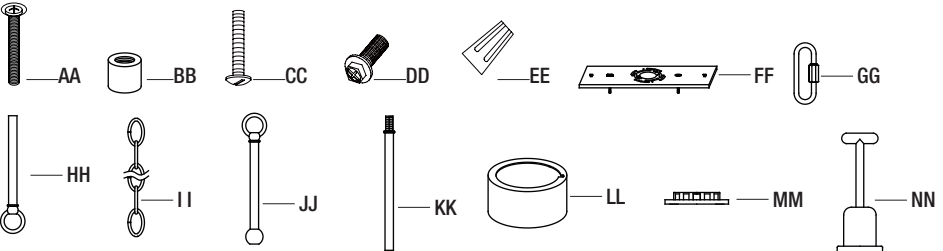

Part	Description	Quantity
AA	Mounting screw	2
BB	Ball nut	2
CC	Outlet box screw	2
DD	Ground screw	1
EE	Wire nut	3
FF	Mounting plate	1
GG	Chain link	4
HH	Upper hanging stem	2
II	Chain	2
JJ	Bottom hanging stem	2
KK	Rod	2
LL	Glass holder	7
MM	Socket ring	7
NN	Socket ring tool	1

Pre-Installation (continued)

PACKAGE CONTENTS

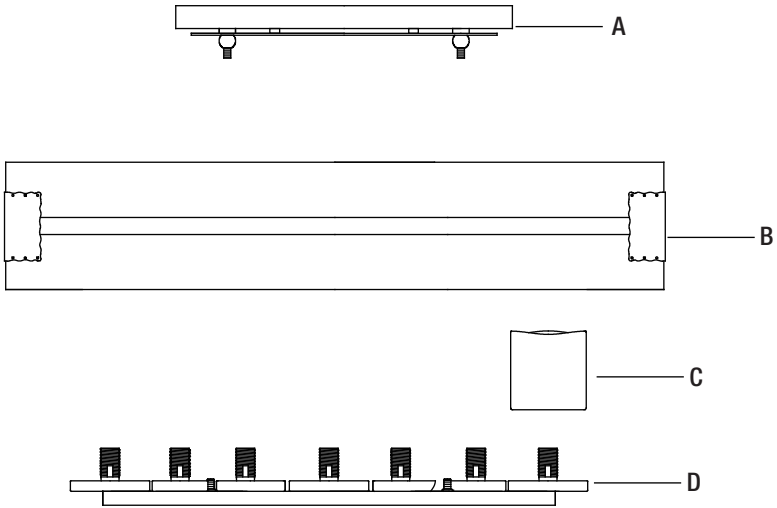


Part	Description	Quantity
A	Canopy	1
B	Wood frame	1
C	Glass shade	7
D	Fixture body	1

Installation


1 Installing the stem

- With reference to the line drawing, install the rod (KK) to the fixture body (D) and twist clockwise to secure in place.
- Place the wood frame (B) over the protruding nipple of the rod (KK) and install the bottom hanging stem (JJ) to the rod (KK), until snug.
- Repeat the above step, and install the upper hanging stem (HH) to the canopy (A).
- Adjust the chain (II) to your desired length by removing the links if needed. You may need to use pliers (not included) to open the chain links (GG). If so, put a cloth over the chain to protect the finish from the pliers.
- Connect the chain (II) to the loop on the top of the bottom hanging stem (JJ) and the loop of the upper hanging stem (HH) using the chain links (GG).
- Pull the power cord up through the rod (KK), bottom hanging stem (JJ), fixture chain (II), upper hanging stem (HH) and canopy (A).

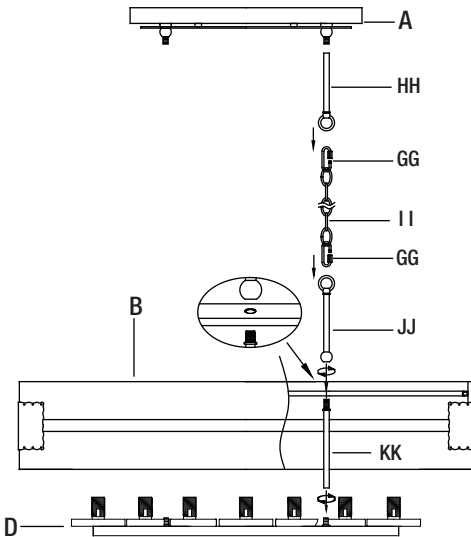

2 Installing the safety cable

- Using a screwdriver, attach the safety cable (1) with the wood screw (included) in the eyelet grommet into the junction box (not included). See the illustration below.

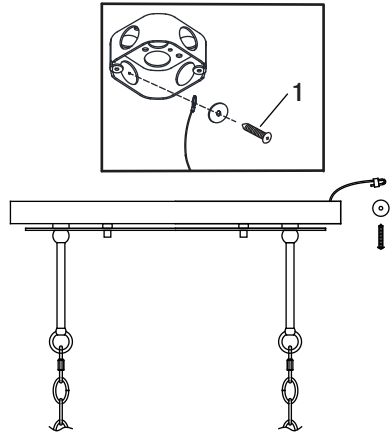


3 Installing the mounting plate



WARNING: To reduce the risk of electrical shock, turn the power off at the main fuse box before installation.

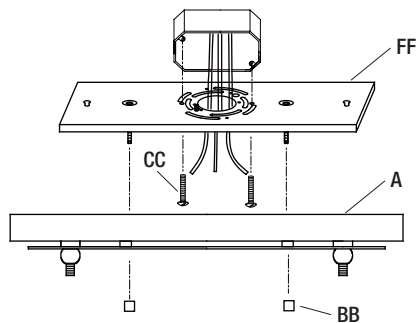


- Remove the mounting plate (FF) from the canopy (A) by loosening the two ball nuts (BB) on the canopy (A).
- Attach the mounting plate (FF) to the junction box with the outlet box screw (CC).




4 Connecting the wires

NOTE: Always use wire nuts (EE) or marrettes (included) to connect wires and push all excess wires and connections back into junction box.


- Push all slack fixture wire through the canopy (A) and into the outlet box. Trim the excess fixture wire, leaving a minimum of 6 in. hanging out of the outlet box.
- Connect the ground wire from the branch circuit to the ground screw (DD) on the mounting plate (FF).
- Connect the chandelier cable as follows:

WHITE WIRE		RIBBED BROWN
FROM HOUSE		FROM FIXTURE
BLACK WIRE		SMOOTH BROWN
FROM HOUSE		FROM FIXTURE
GROUND WIRE		GROUND WIRE
FROM HOUSE		FROM CANOPY

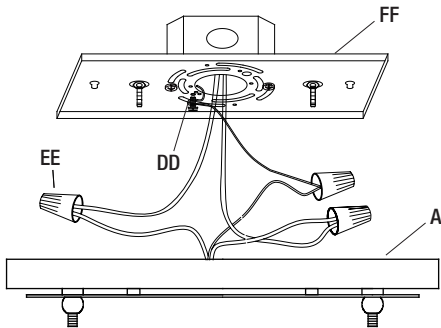


5 Installing the fixture body

- Install the canopy (A) to the mounting plate (FF) by securing the two ball nuts (BB) to the two screws (AA).

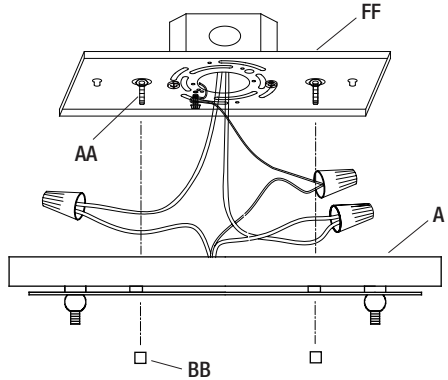

6 Installing the glass shade


- Remove the socket ring (MM) and glass holder (LL) from the socket of the fixture body (D) by hand.
- Place the glass shade (C) and glass holder (LL) on the socket. Secure with the socket ring (MM) by using the socket ring tool (NN). Do not overtighten.
- Repeat for the other glass shades (C).

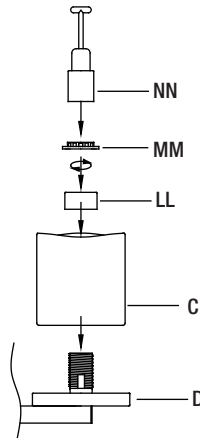

Installation (continued)

7 Installing the bulbs

- Install 60W max. Type G16.5 bulbs (not included) in each socket of the fixture body.

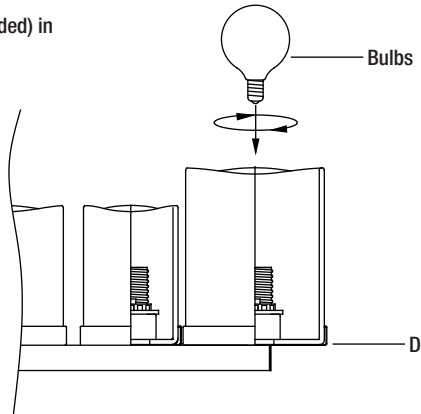

Care and Cleaning

- Clean the light fixture carefully with a soft, dry cloth. Do not use any cleaners with chemicals, solvents, or harsh abrasives.

Troubleshooting

Problem	Possible Cause	Solution
□ The bulb will not light.	□ The bulb is burned out.	□ Replace the light bulb.
	□ The power is off.	□ Ensure that the power supply is turned on.
	□ The circuit breaker is off.	□ Ensure that the circuit breaker is set to the ON position.
□ The fuse blows or the circuit breaker trips when the light is turned on.	□ There are too many items on one circuit.	□ Unplug the other items on the circuit. □ Contact a qualified electrician or call the Customer Service Team at 1-800-986-3460.

HOME DECORATORS COLLECTION

Questions, problems, missing parts? Before returning to the store,
call Home Decorators Collection Customer Service
8 a.m. - 7 p.m., EST, Monday-Friday, 9 a.m. - 6 p.m., EST, Saturday

1-800-986-3460

WWW.HOMEDEPOT.COM/HOMEDECORATORS

Retain this manual for future use.