


MODEL 45R PARTS LIST

ITEM	PART NO.	DESCRIPTION	QTY. REQ'D.
1	08-45-00-010	SPRING CLIP	1
2	08-45-00-020	FEEDER CHANNEL	1
5	08-45-00-050	ROLLER PIN ASSEMBLY	1
5R	08-45-00-05R	ROLLER	1
13	08-45-00-130	FOOT SCREW	4
13N	08-45-00-13N	LOCKNUT	4
14	08-45-00-140	GATE	1
15	08-45-00-150	FOOT	1
16	08-45-00-960	SPRING CONTAINER SCREW	2
17	08-45-00-170	SPRING CONTAINER	1
18	08-45-00-180	FEEDER SPRING	1
19	08-45-00-930	SPRING CONTAINER LOCK WASHER	2
23	08-45-00-230	DOWEL PIN	2
25	08-45-00-250	HANDLE ASSEMBLY	1
29	08-45-00-290	ADAPTER PLATE PIN ASSEMBLY	1
37R	07-45-00-704	RATCHET PLUNGER	1
38	08-45-00-380	DRIVING BLADE	1
39	08-45-00-400	LEFT PLUNGER LINER	1
40R	08-45-00-705	RIGHT PLUNGER LINER	1
41	08-45-00-410	PLUNGER SPRING PIN	1
45	08-45-00-450	PLUNGER SPRING	1
58	08-45-00-580	BLADE RETAINER	1
59R	08-45R-00-59	RATCHET ASSEMBLY	1
60	08-45-00-710	RATCHET ACCESS PLATE	1
61	08-45-00-711	RATCHET ACCESS PLATE SCREW	2
400	06-99-400	TOE STAND	1
#8-25	06-99-010	#825 ADAPTER PLATE ASSEMBLY FOR 3/4" T&G	1

MODEL 45R ACCESSORIES

ITEM	PART NO.	DESCRIPTION	QTY. REQ'D.
#8-26	06-99-040	#826 ADAPTER PLATE ASSEMBLY FOR 1/2" T&G	1
#8-26	06-99-04A	#826 ADAPTER PLATE ASSEMBLY FOR 5/8" T&G	1
#8-25	06-99-04B	#825 ADAPTER PLATE ASSEMBLY FOR 22MM" T&G	1
70	06-99-720	#825 NO-MAR PAD (STICK-ON) .015 Thick	1
71	06-99-721	#825 NO-MAR PAD (STICK-ON) .060 Thick	1
72	08-45-TU-KIT	MODEL 45R TUNE-UP KIT	1
73	08-45R-OVH-KIT	MODEL 45R OVERHAUL KIT	1


MODEL 45R PARTS LIST

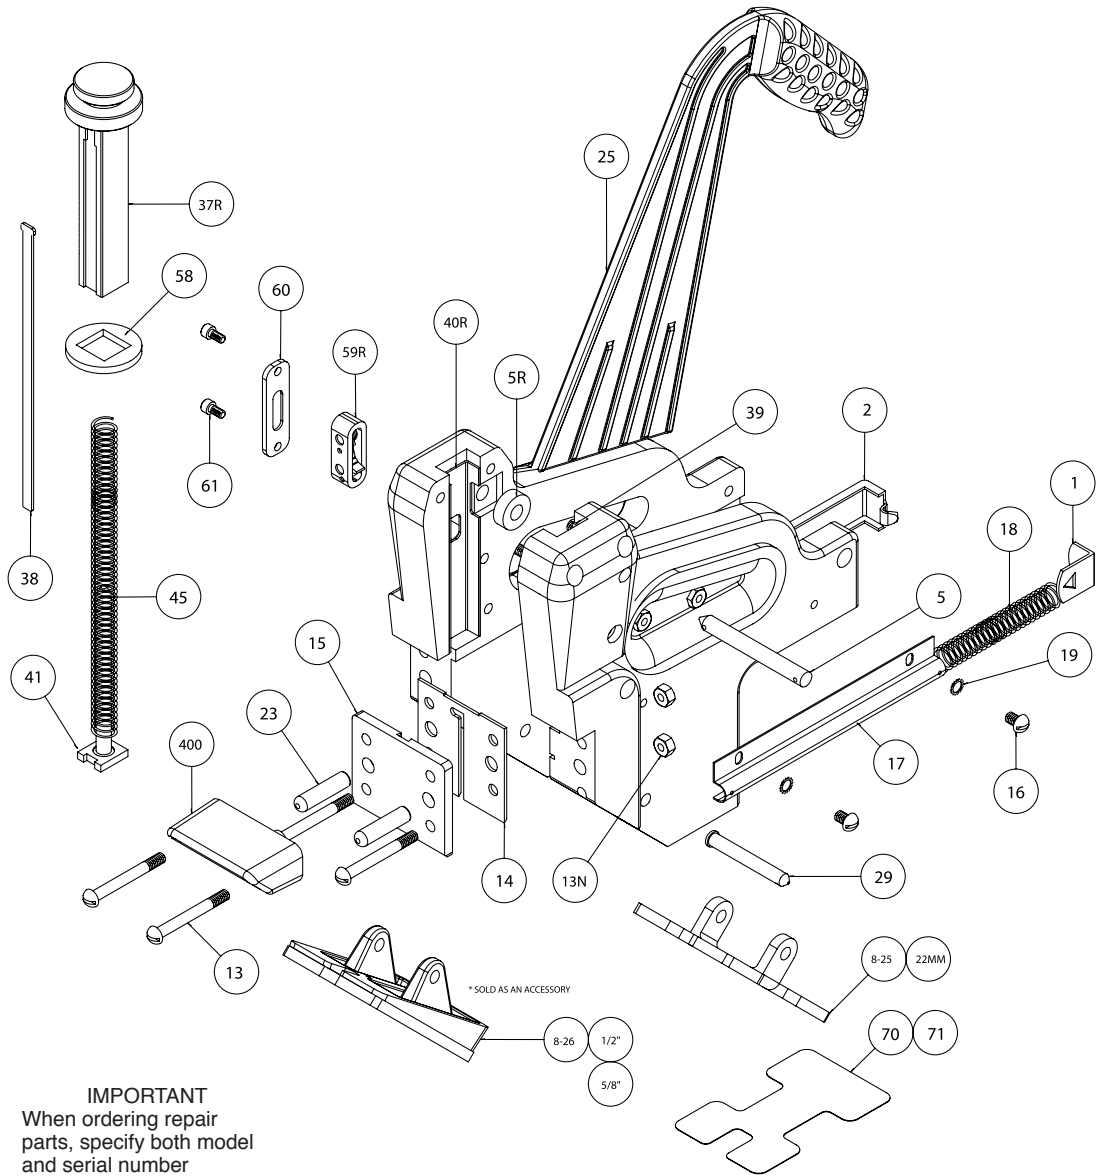


POWERCLEAT® NAIL LENGTH CHART

This chart will assist you in determining the proper length of Powercleat nails to use for various thicknesses of flooring when sub-flooring member varies as to species and thickness. Vertical penetration of the Powercleat nails under the hardwood floor is shown for each application. This is only a guide. Results should be tested in the field before proceeding.


2" Powercleats® 16 Gage

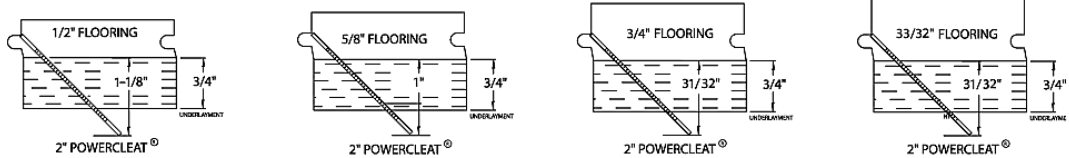

1-3/4" Powercleats® 16 Gage

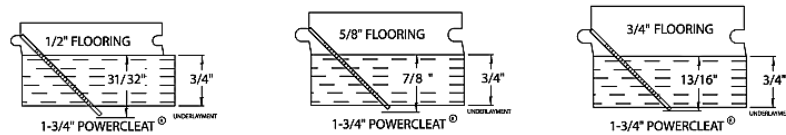


1-1/2" Powercleats® 16 Gage

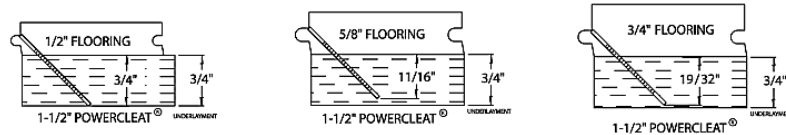


MODEL 45R & 101R RATCHET REPAIR INSTRUCTIONS


- With a 5/32 allen wrench, unscrew the two #10-32 socket head cap screws from the access plate.
- Remove access plate by turning nailer over.
- Remove ratchet insert assembly.
- Install new ratchet insert assembly as shown below.
- Replace access plate. Important: Make sure access plate is replaced as shown, with indent facing in towards ratchet.
- Fasten access plate back to body using a 5/32 allen wrench and the two socket head cap screws.

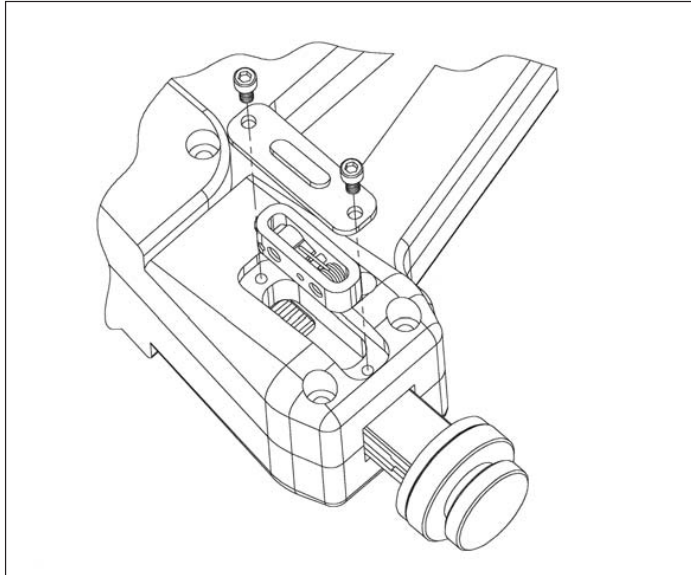


Adaptor Plates For Different Flooring Thicknesses

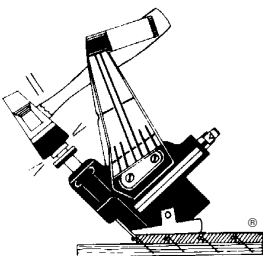


Model 45R flooring nailer fitted with 8-26 adaptor plate, to nail standard 1/2" T&G flooring.

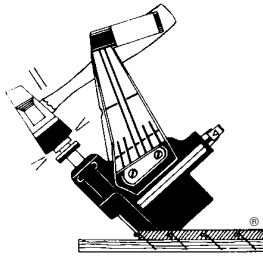

Model 45R flooring nailer without adaptor plates will nail standard 33/32" T&G flooring.

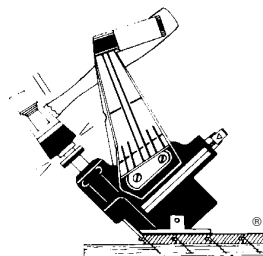

Model 45R flooring nailer fitted with 8-25 adaptor plate, to nail standard 25/32" T&G flooring.

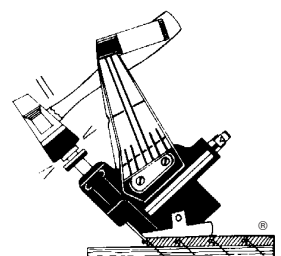

Model 45R flooring nailer fitted with 5/8" adaptor plate, to nail standard 5/8" T&G flooring.