

HADEN DORSET

1.7 Liter Electric Water Kettle

Ivory & Chrome • 360-Degree Power Base

USER CARE & OPERATING MANUAL

Model / Product: 75073-HADEN

Capacity: 1.7 L (7 cups) • Power: 1500 W • 120 V~ 60 Hz

Please read these instructions before first use and retain them for future reference.

1. Product Overview

The Haden Dorset kettle is a cordless electric kettle designed for heating water for tea, coffee and other household uses. It features a 1.7-liter capacity, 360-degree power base, water-level window, removable scale filter, automatic shut-off and boil-dry protection.

Key components

Component	Function
Lid	Provides access for filling and helps contain hot water and steam.
Handle	Provides a secure grip for lifting and pouring.
Water-level indicator	Shows the amount of water in the kettle.
On/Off switch	Starts and stops heating.
Power base	Supplies power and allows the cordless kettle to rotate 360 degrees.
Spout	Provides controlled pouring.
Removable filter	Helps prevent scale particles from entering the cup.

2. Important Safety Instructions

WARNING: Hot water and steam can cause serious burns. Do not touch the kettle body while hot; use the handle. Take care when opening the lid or pouring.

Read all instructions before use. Do not immerse the kettle, power base, cord or plug in water or any other liquid. Never operate the appliance with a damaged cord or plug, or if the kettle has been damaged or malfunctions.

Use the kettle only on a dry, flat, stable, heat-resistant surface. Keep the power cord away from hot surfaces and do not allow it to hang where it can be pulled or caught.

Do not fill above the MAX line. Do not operate the kettle empty. Boil-dry protection is a safety feature, not a substitute for proper filling.

Unplug the power base when the kettle is not in use and before cleaning. Allow the kettle to cool before handling, cleaning or storing.

For household use only. Use with a suitable grounded electrical outlet matching the rating on the appliance.

3. Before First Use

Remove all packaging and protective materials. Check the kettle, base, cord and plug for visible damage. Keep packaging away from children.

Wash/rinse the kettle interior with clean water. Fill to the MAX line, boil, discard the water, and repeat two or three times to remove manufacturing residues. Do not immerse the electrical base or kettle exterior.

Make sure the removable filter is correctly installed behind the spout before normal use.

4. How to Use

- 1.** Remove the kettle from its power base.
- 2.** Open the lid and fill with fresh, cold water. Keep the water between the minimum and maximum markings; maximum capacity is 1.7 L (7 cups).
- 3.** Close the lid securely.
- 4.** Place the kettle securely on the 360-degree base.
- 5.** Plug the base into a suitable grounded outlet.
- 6.** Move the On/Off switch to the ON (I) position. The indicator light will illuminate while heating.
- 7.** When the water boils, the kettle automatically switches off. You may also switch it off manually.
- 8.** Lift the kettle using the handle and pour carefully. Steam and the kettle body may be hot.
- 9.** Unplug the appliance when finished or when it will not be used.

5. Care and Cleaning

Always unplug the base and allow the kettle to cool completely before cleaning.

Kettle: Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners, steel wool or harsh chemicals that could damage the finish.

Interior: Rinse with clean water as needed. Do not immerse the kettle in water.

Removable filter: Remove the filter and rinse it under running water. Reinstall it behind the spout before using the kettle.

Power base: Wipe with a dry or slightly damp cloth. Keep the electrical contacts and underside dry.

6. Descaling

Mineral deposits (limescale) can build up over time, especially in hard-water areas. Regular descaling helps maintain heating performance and reduces premature shut-off.

Use a commercially available kettle descaler and follow that product's instructions. Alternatively, a manufacturer-approved descaling method may be used. After descaling, rinse the kettle thoroughly and boil/discard clean water before making beverages.

Do not scrape the heating surfaces with metal tools. Descale more frequently if mineral buildup becomes visible or boiling performance decreases.

7. Troubleshooting

Problem	Possible cause / solution
Kettle does not heat	Confirm the plug is connected and the kettle is seated correctly on the base. Check that the switch is in ON (I).
Switches off before boiling	Check the water level and descale the kettle if mineral buildup is present.
Kettle switches off immediately	The kettle may be empty or insufficiently filled; allow it to cool, fill with water and restart.
Steam escapes around lid	Make sure the lid is securely closed before boiling.
Water has unusual taste/odor	Perform the first-use boil-and-discard procedure and descale if needed.
Water contains scale particles	Clean the removable filter and descale the kettle.

8. Storage

Unplug the kettle, allow it to cool completely, empty remaining water and dry the appliance before storage. Store in a dry location away from children. Do not wrap the cord tightly around the appliance.

9. Technical Specifications

Brand	Haden
Product	Dorset 1.7 Liter Electric Water Kettle
Model	75073-HADEN
Capacity	1.7 L / 7 cups
Power	1500 W

Electrical rating	120 V~ 60 Hz
Color	Ivory & Chrome
Base	360-degree cordless power base
Safety features	Automatic shut-off; boil-dry protection
Filter	Removable water filter

10. Care Reminder

Never operate without sufficient water, never exceed the MAX line, and never immerse any electrical component. If the appliance, cord or plug is damaged, discontinue use and seek qualified service or manufacturer support.

Reference note

This user-care manual was prepared for the Haden Dorset 1.7 L Ivory & Chrome kettle using publicly available product specifications and Dorset-series operating/safety information. Product revisions can differ; always follow the instructions and electrical rating supplied with the specific unit.