

LIMITED LIFETIME REPLACEMENT WARRANTY

EZ-CLONE Enterprises Incorporated ("EZ-CLONE") warrants only to the original purchaser of this product from an EZ-CLONE authorized retailer or distributor that this product will be free from defects in material and workmanship under normal use and service for the lifetime of the purchase. EZ-CLONE reserves the right, before having any obligation under this limited warranty, to inspect the damaged EZ-CLONE product and all costs of shipping the EZ-CLONE product to EZ-CLONE for inspection shall be borne solely by the purchaser. In order to recover under this limited warranty, purchaser must make claim to EZ-CLONE within 30 days of occurrence, and must present acceptable proof of original ownership (such as original receipt, warranty card registration, online registration, or other documentation EZ-CLONE deems acceptable) for the product. EZ-CLONE, at its option, shall repair or replace the defective unit covered by this warranty. Please retain the dated sales receipt as evidence of the original purchaser's date of purchase. You will need it for any warranty service. In order to keep this limited warranty in effect, the product must have been handled and used as prescribed in the instructions accompanying this warranty. This limited warranty does not cover any damage due to accident, misuse, abuse or negligence. This limited warranty is valid only if the product is used with the equipment specified on the product box. This limited warranty is non-transferable and does not apply to any purchaser who bought the product from a retailer or distributor not authorized by EZ-CLONE, including but not limited to purchases from internet auction sites. This warranty does not effect any other legal rights you may have by operation of law. Contact EZ-CLONE at www.ezclone.com/contact/.

For questions and replacement parts please
 contact us: www.EZCLONE.com
 916.626.3000 | 866.EZ-CLONE | info@ezclone.com



EZ-CLONE

SUBMERSIBLE PUMP

OWNER'S MANUAL

Model: MAG450, MAG750, MAG925, MAG1125

INTRODUCTION

EZ-CLONE pumps are carefully inspected and tested to ensure both safety and operating performance. However, failure to follow the instructions and warnings in this manual may result in pump damage and/or serious injury. Be sure to read and save this manual for future reference.



WARNING

- Risk of electric shock - This pump is supplied with a grounding conductor and grounding type attachment plug. To reduce risk of electric shock, be certain that it is connected only to properly grounded, grounding-type receptacle.
- Risk of Electric Shock, Do not remove cord and strain relief. Do not connect conduit to pump.
- This Pump Has Been Evaluated for Use With Water Only
- Reduce risk of electric shock during operation of this pump requires the provision of acceptable grounding.
- Risk of electric shock – This pump has not been investigated for use in swimming pool or marine areas
- Do not connect to any voltage other than that shown on the pump.
- Always disconnect from electrical outlet before handling the pump.
- Don't operate without water.
- Operate pump completely submerged for proper cooling.

PERFORMANCE

A clogged or dirty intake screen will greatly reduce performance. If the pump is used on a dirty surface, raise it slightly to reduce the amount of debris contacting the intake. If less flow is desired, adjust the flow control lever on the side of the pump or restrict the discharge flow.

Do not let the pump run when not submerged in water. Doing so may damage the pump. Always submerge the pump first, and then plug in the electrical outlet. The pump is to be supplied through a residual current device (RCD) with a rated residual operating current not exceeding 30 mA.

MAINTENANCE

To clean the pump, remove the back cover and the impeller. Use a small brush or stream of water to remove any debris
CAUTION: The pump shaft can not be removed.

IF THE PUMP FAILS TO OPERATE, CHECK THE FOLLOWING:

- Check the circuit breaker and try another outlet to ensure the pump is getting electrical power. NOTE: Always disconnect from electrical outlet before handling the pump.
- Check the pump discharge and tubing for any obstructions. Algae build up can be flushed out with a garden hose.
- Check the inlet to ensure it is not clogged with debris.
- Remove the pump inlet to access the impeller area. Turn the rotor to ensure it is not broken or jammed.
- Monthly maintenance will add to your pump's life. NOTE:
- Ensure that the electrical cord loops below the electrical outlet to form a "Drip Loop" This will prevent water from running down the cord into the electrical outlet.

