 
## Model: 93015U and 93020U


18" x 30" Sewage pump kit assembly instructions

Customer Support: 800-495-9278

## Parts:

A: Basin K: Gasket B-T and B-V: Pump L: 2 Zip ties C: Tethered Float M: Inlet gasket D: Switch bracket N: Pipe holder E: Hose clamp O: Pipe gasket F: Check valve P: Cord gasket G: PVC pipe Q: Basin lid H: Coupling R: Lid gasket I: Vent holder S: Torque stop



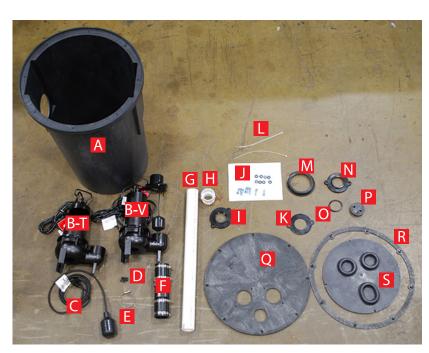







1. Attach PVC pipe (G) to coupling (H) using PVC pipe primer\* and glue\*. Push down to secure.







3. Measure 6 inches up as show in image. Drill a 1/4"\* anti-airlock hole into PVC pipe.

## B-T Pump without switch only (B-V move to step 7)










- 4. Disassemble hose clamp (E) and slide on switch bracket (D) as shown, reassemble hose clamp.
- 5. Attach tethered float (C) through switch bracket as shown. Set tether length approximately 4".
- 6. Slide assembly over the pipe and tighten bracket above the anti-airlock hole, as shown.







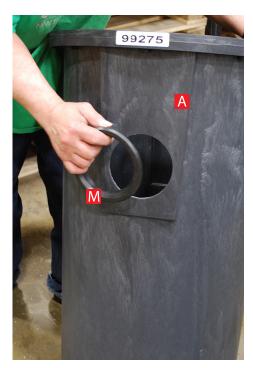

- 6. Attach the switch and pump cords to the PVC discharge pipe using two zip ties (L).
- 7. Insert inlet gasket (M) into basin (A) inlet.



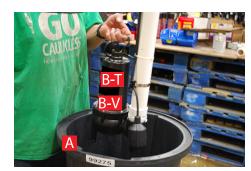

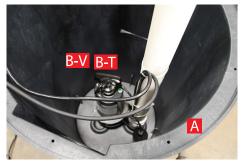

- 8. Insert torque stop (S) into basin (A) as shown. Note location of inlet for proper orientation.
- 9. Insert pump into basin (A) as shown. Line up pump feet into the torque stops (S).







- 10. Attached lid gasket (R) to the bottom of the lid (Q).
- 11. With gasket down, thread PVC pipe (G), pump and switch wires through lid Q.
- 12. Using 8 screws and washers (J) attach and secure lid to top of basin (A).







- 13. Slide discharge pipe holder (N) pipe gasket (O) and gasket (K) over PVC pipe (G).
- 14. Using 4 screws and washers (J) secure pipe holder (N) and threaded vent holder (I) to top of basin lid (Q).







- 15. Thread pump and float switch cords through cord gasket (P).
- 16. Push cord gasket (P) into lid (Q).
- 17. Coil pump and float switch cords, secure with twist tie.
- 18. Add two red caps as shown.