

HITCH PIN

INSTALLATION INSTRUCTIONS

 **WARNING:** Read and observe all warnings, instructions, and capacity limitations before using this product. Failure to comply with this warning and the associated instructions and capacity limitations may result in serious personal injury and/or significant property damage.

1. Insert Ball Mount into the hitch receiver tube.
2. With both pin holes aligned of the hitch receiver tube and Ball Mount bar insert the Hitch Pin of a corresponding diameter, into the holes so that the end is completely out of the other side, exposing the Hitch Pin hole or groove.
3. Insert the straight leg of the Hitch Pin Clip into the Hitch Pin hole or groove until it can go no further.
4. It is now ready for use.
5. Check to see if the Hitch Pin Clip is still secure after each usage.

IF YOU EXPERIENCE ANY PROBLEMS WITH YOUR TOWSMART PRODUCT DO NOT RETURN THE UNIT TO THE RETAILER FROM WHICH IT WAS PURCHASED. INSTEAD, PLEASE CALL 1-844-295-9215 FOR ASSISTANCE WITH ANY PROBLEMS. WARRANTY INFORMATION IS AVAILABLE UPON REQUEST AND CAN BE FOUND ONLINE AT WWW.TOWSMART.COM.

HITCH PIN

INSTALLATION INSTRUCTIONS

 **WARNING:** Read and observe all warnings, instructions, and capacity limitations before using this product. Failure to comply with this warning and the associated instructions and capacity limitations may result in serious personal injury and/or significant property damage.

1. Insert Ball Mount into the hitch receiver tube.
2. With both pin holes aligned of the hitch receiver tube and Ball Mount bar insert the Hitch Pin of a corresponding diameter, into the holes so that the end is completely out of the other side, exposing the Hitch Pin hole or groove.
3. Insert the straight leg of the Hitch Pin Clip into the Hitch Pin hole or groove until it can go no further.
4. It is now ready for use.
5. Check to see if the Hitch Pin Clip is still secure after each usage.

IF YOU EXPERIENCE ANY PROBLEMS WITH YOUR TOWSMART PRODUCT DO NOT RETURN THE UNIT TO THE RETAILER FROM WHICH IT WAS PURCHASED. INSTEAD, PLEASE CALL 1-844-295-9215 FOR ASSISTANCE WITH ANY PROBLEMS. WARRANTY INFORMATION IS AVAILABLE UPON REQUEST AND CAN BE FOUND ONLINE AT WWW.TOWSMART.COM.

HITCH PIN

INSTALLATION INSTRUCTIONS

 **WARNING:** Read and observe all warnings, instructions, and capacity limitations before using this product. Failure to comply with this warning and the associated instructions and capacity limitations may result in serious personal injury and/or significant property damage.

1. Insert Ball Mount into the hitch receiver tube.
2. With both pin holes aligned of the hitch receiver tube and Ball Mount bar insert the Hitch Pin of a corresponding diameter, into the holes so that the end is completely out of the other side, exposing the Hitch Pin hole or groove.
3. Insert the straight leg of the Hitch Pin Clip into the Hitch Pin hole or groove until it can go no further.
4. It is now ready for use.
5. Check to see if the Hitch Pin Clip is still secure after each usage.

IF YOU EXPERIENCE ANY PROBLEMS WITH YOUR TOWSMART PRODUCT DO NOT RETURN THE UNIT TO THE RETAILER FROM WHICH IT WAS PURCHASED. INSTEAD, PLEASE CALL 1-844-295-9215 FOR ASSISTANCE WITH ANY PROBLEMS. WARRANTY INFORMATION IS AVAILABLE UPON REQUEST AND CAN BE FOUND ONLINE AT WWW.TOWSMART.COM.

ANTI-THEFT HITCH PIN

INSTALLATION INSTRUCTIONS

 **WARNING:** Read and observe all warnings, instructions, and capacity limitations before using this product. Failure to comply with this warning and the associated instructions and capacity limitations may result in serious personal injury and/or significant property damage.

1. Insert the Ball Mount into the hitch receiver tube.
2. Align Hitch Pin holes.
3. Align the pivot latch straight with the Pin. Then, insert into receiver tube hole so the pivot latch is now extended beyond.
4. Turn pivot latch ninety degrees.
5. It is now ready for towing.
6. For extra security, and small keyed pad lock can be added to the pivot latch.
7. Check to see if the Hitch Pin is still secure after each tow usage.

IF YOU EXPERIENCE ANY PROBLEMS WITH YOUR TOWSMART PRODUCT DO NOT RETURN THE UNIT TO THE RETAILER FROM WHICH IT WAS PURCHASED. INSTEAD, PLEASE CALL 1-844-295-9215 FOR ASSISTANCE WITH ANY PROBLEMS. WARRANTY INFORMATION IS AVAILABLE UPON REQUEST AND CAN BE FOUND ONLINE AT WWW.TOWSMART.COM.

HITCH PIN

INSTALLATION INSTRUCTIONS

 **WARNING:** Read and observe all warnings, instructions, and capacity limitations before using this product. Failure to comply with this warning and the associated instructions and capacity limitations may result in serious personal injury and/or significant property damage.

1. Insert Ball Mount into the hitch receiver tube.
2. With both pin holes aligned of the hitch receiver tube and Ball Mount bar insert the Hitch Pin of a corresponding diameter, into the holes so that the end is completely out of the other side, exposing the Hitch Pin hole or groove.
3. Insert the straight leg of the Hitch Pin Clip into the Hitch Pin hole or groove until it can go no further.
4. It is now ready for use.
5. Check to see if the Hitch Pin Clip is still secure after each usage.

IF YOU EXPERIENCE ANY PROBLEMS WITH YOUR TOWSMART PRODUCT DO NOT RETURN THE UNIT TO THE RETAILER FROM WHICH IT WAS PURCHASED. INSTEAD, PLEASE CALL 1-844-295-9215 FOR ASSISTANCE WITH ANY PROBLEMS. WARRANTY INFORMATION IS AVAILABLE UPON REQUEST AND CAN BE FOUND ONLINE AT WWW.TOWSMART.COM.

HITCH PIN

INSTALLATION INSTRUCTIONS

 **WARNING:** Read and observe all warnings, instructions, and capacity limitations before using this product. Failure to comply with this warning and the associated instructions and capacity limitations may result in serious personal injury and/or significant property damage.

1. Insert Ball Mount into the hitch receiver tube.
2. With both pin holes aligned of the hitch receiver tube and Ball Mount bar insert the Hitch Pin of a corresponding diameter, into the holes so that the end is completely out of the other side, exposing the Hitch Pin hole or groove.
3. Insert the straight leg of the Hitch Pin Clip into the Hitch Pin hole or groove until it can go no further.
4. It is now ready for use.
5. Check to see if the Hitch Pin Clip is still secure after each usage.

IF YOU EXPERIENCE ANY PROBLEMS WITH YOUR TOWSMART PRODUCT DO NOT RETURN THE UNIT TO THE RETAILER FROM WHICH IT WAS PURCHASED. INSTEAD, PLEASE CALL 1-844-295-9215 FOR ASSISTANCE WITH ANY PROBLEMS. WARRANTY INFORMATION IS AVAILABLE UPON REQUEST AND CAN BE FOUND ONLINE AT WWW.TOWSMART.COM.