EASYSHADE CARE & MAINTENANCE INSTRUCTIONS

Do Not Discard, Retain for Future Reference

Manual EasyShade®

- Housing: Your EasyShade contains extruded and die-cast aluminum components. These aluminum parts are powder coated for long lasting beauty. Clean the aluminum housing periodically with water and mild soap.
- Fabric: Your EasyShade fabric is a vinyl mesh. Mildew will not form on the mesh itself, but may form on dirt and dust that have not been removed from it. The purchaser must clean the vinyl mesh periodically with water and mild soap to prevent dirt from accumulating.

Motorized EasyShade®

- Housing: Your EasyShade contains extruded and die-cast aluminum components. These aluminum parts are powder coated for long lasting beauty. Clean the aluminum housing periodically with water and mild soap.
- Fabric: Your EasyShade fabric is a vinyl mesh. Mildew will not form on the mesh itself, but may form on dirt and dust that have not been removed from it. The purchaser must clean the vinyl mesh periodically with water and mild soap to prevent dirt from accumulating.

Remote: The remote transmitter uses a replaceable CR2430 battery. The remote transmitter should be kept in a dry location.

Solar Powered Motorized EasyShade®

- Housing: Your EasyShade contains extruded and die-cast aluminum components. These aluminum parts are powder coated for long lasting beauty. Clean the aluminum housing periodically with water and mild soap.
- Fabric: Your EasyShade fabric is a vinyl mesh. Mildew will not form on the mesh itself, but may form on dirt and dust that have not been removed from it. The purchaser must clean the vinyl mesh periodically with water and mild soap to prevent dirt from accumulating.
- Remote: The remote transmitter uses a replaceable CR2430 battery. The remote transmitter should be kept in a dry location.

Solar Panel: Clean the solar panel assembly periodically with water and mild soap.

For Technical Support visit us at http://ownerscorner.sunsetter.com,

e-mail at contactus@sunsetter.com or call Toll Free 800-670-7071 • Fax 877-224-4944