

BBC82 PARTS LIST

NO	NAME		NO	NAME
1	Rack		41	Flywheel cover inner
2	Wheel frame		42	Belt cover bottom
3	Heavy wheel hub		43	Flywheel spacer sleeve
4	slotted nut M24*2		44	Big wheel 460
5	16.5x6.5-8 tires		45	Flywheel cover
6	Housing welds		46	Tension wheel connecting rod
7	Outlet mounting plate		47	Tension Roller
8	Universal wheel support		48	Deep groove ball bearing 608
9	deep groove ball bearing		49	Tension wheel spring
10	Universal wheel sleeve left		50	Gasoline engine pad
11	Universal wheel dust cover		51	R500-V2 Engine
12	Universal wheel tires		52	Belt cover pad
13	Universal wheel sleeve right		53	Small puelly
14	Clamp block fixing seat left		54	Belt A1905
15	Clamp block fixed seat right		55	belt cove
16	Upper positioning block left		56	towing bar
17	Upper positioning block right		57	towing hitcher
18	Universal wheel brake spring		58	Chain
19	Pin		59	Axle head cover
20	Pin wrench		60	wrench
21	elastic cylindrical pin 4X18		61	Discharge port hook
22	Latch spring		62	Trash cover
23	Latch seat upper end plate		63	emergency stop bar
24	Pin shaft with holes 5X25		64	emergency stop bar connecter
25	UCFC208 bearing with seat		65	push rod bearings
26	upper shaft		66	push rod connects plate
27	Bottom shaft		67	Contact box cover
28	input shaft		68	emergency compression spring
29	big gear wheel		69	Ring screw M12
30	input gear		70	Butter nozzle M10x1
31	upper blade		71	6DM14 battery
32	bottom blade		72	Plastic battery box
33	Blade clamp		73	Tool box support plate
34	Gear cover		74	Tool box
35	feed hopper		75	Tool box front cover
36	discharge chute		76	Tool box cover
37	Discharge port welding		77	Buckle assembly
38	discharge cover		78	stainless steel hinge
39	Belt cover mounting post		79	Trailer bar latch
40	Belt cover mounting post 2		80	φ4B type pin