



INbrb011_US

84C-261



IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

ASSEMBLY & INSTRUCTION MANUAL

WARNING**EN**

1. A 3 person assembly is required for this tent.
2. Please take appropriate actions as heavy rain, wind and snow can damage the tent. If necessary please dis-assemble and store for later use.
3. In snowy conditions please do not allow the thickness of the snow to be more than 5cm on the roof, this should be cleared as soon as possible for your safety.

ATTENTION**FR**

1. 3 personnes minimum requis pour le montage de la tente.
2. Ne pas utiliser la tente en période de pluie, de vent et de neige qui peuvent endommager la tente. Nous ne serons pas responsable de la mauvaise utilisation du produit.
3. Pour votre sécurité, en période de neige, il est recommandé de ne pas laisser de neige de plus de 5cm sur le toit.

ADVERTENCIA**ES**

1. Se requieren 3 personas para realizar el montaje de esta tienda de campaña.
2. Tome las medidas apropiadas, ya que las fuertes lluvias, viento y nieve pueden dañar la tienda de campaña. Si es necesario, desarme y almacene la tienda de campaña para el uso posterior.
3. En condiciones de nieve, no permita que el grosor de la nieve sea superior a 5 cm en el techo, en el motivo de proteger su seguridad, debe eliminar la nieve en techo lo más pronto posible.

WARNHINWEISE**DE**

1. Bauen Sie das Zelt mit Hilfe von 3 Personen auf.
2. Stellen Sie das Zelt auf einen ebenen Untergrund auf und achten Sie darauf, dass sich keine offenen Feuerstellen in der Nähe befinden.
3. Um Beschädigungen des Zeltes zu vermeiden, benutzen Sie es bitte nicht bei schlechten Wetterbedingungen wie starkem Regen, Wind oder Schneefällen. Für Schäden aufgrund schlechter Witterungsverhältnisse wird keine Haftung und Gewährleistung übernommen.
4. Bei Schneefall darf die Schneehöhe auf dem Dach 5 cm nicht überschreiten. Es obliegt Ihrer Verantwortung, das Zelt rechtzeitig und vorsichtig von der Schneelast zu befreien.
5. Sollten sich bei starkem Regen Wassertaschen auf dem Dach bilden, obliegt es Ihrer Verantwortung diese rechtzeitig und vorsichtig zu beseitigen.
6. Achten Sie beim Verstauen des Zeltes darauf alle Teile, insbesondere die Plane, vorher zu säubern und erst in trockenem Zustand einzupacken. Lagern Sie das Zelt an einem trockenen Ort.
7. Prüfen Sie vor Wiederaufbau des Zeltes die Vollständigkeit und Funktionalität aller für den Aufbau benötigten Teile.

AVVERTENZE**IT**

1. Per assemblare questa tenda sono necessarie 3 persone
2. Si prega di prendere le precauzioni necessaria in quanto pioggia, vento e neve possono danneggiare la tenda. Se necessario si prega di smontarla e conservarla per uso futuro.
3. Qualora nevicasse si prega di non lasciare che lo strato di neve sopra la tenda sia spesso oltre i 5cm, anzi la neve va rimossa al più presto per la vostra sicurezza.



Remove all the parts from the carrybag. Place the canopy frame in the upright standing position.





Slightly open the canopy frame using the legs. Continue opening the canopy frame using the sides of the canopy as indicated.



Place the canopy top on the opened frame, put the plastic part into the sleeve on the small top of the canopy top.



Open the frame until all the corners lock into place. You should hear a click when the canopy frame has opened and corners have locked. and secure the canopy top to the canopy frame on all four corners using the hook and loop strips.

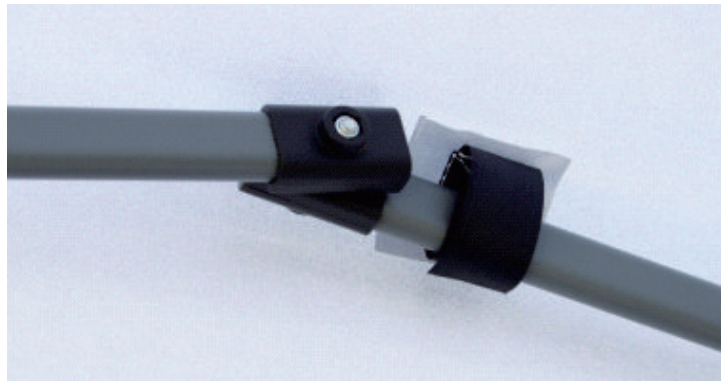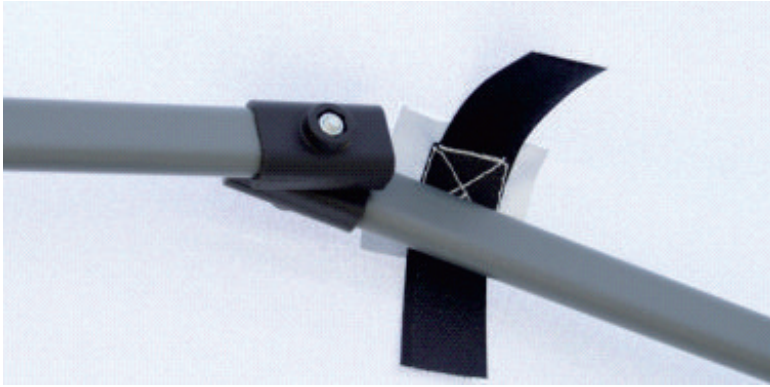

On the inside of the canopy, secure all four sides and ceiling to the canopy frame using the inside hook and loop strips.



Extend all four legs to the desired preset height. Once extended to the appropriate height, the canopy legs will lock into place. This should be done by extending two legs on the same side at the same time.



Secure all the four half-leg fabric under the leg button through the hook and loop strips.



After all the half-leg fabric secured on the frame, adjust the height through the plastic buckle located upon the bottom of the half-leg fabric.



Secure all four guylines, stakes, and sandbag on the frame. Then the set up of your Canopy is complete.

STOWED AWAY



01



1. Remove all the guyline, stakes, and sandbags from the frame.
2. untie all the four half-leg fabric from the leg tube.



Lower the canopy by pressing the release button on each leg. This should be completed by lowering two legs on the same side at the same time.

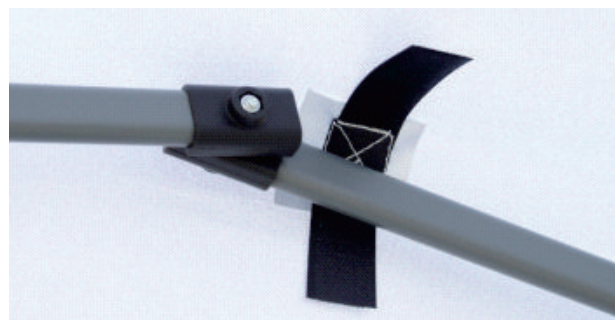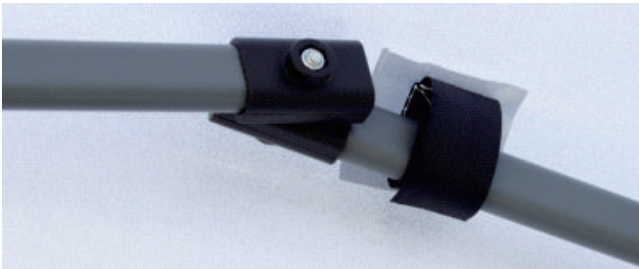

Inside the canopy, unstrap all the ceiling of the canopy top from the canopy frame.



Unstrap all four corners of the canopy top from the canopy frame. Remove and fold the canopy top. If the canopy top is wet, allow time to dry before folding.



Push the release button located at the top of each corner. This will allow the canopy frame to collapse.



Once all the four corners are released, slowly begin to close the canopy frame. Once the frame is nearly closed, finish closing the frame using the legs.



Done

Place the canopy top, frame, stakes, guylines, and sandbags in the carrybag. Zip the carrybag closed. Take down of the canopy is complete.