



LAUNDRY HAMPER WITH SLIDING BAGS: USE + CARE INSTRUCTIONS

- Keep the hamper in a cool, dry, and ventilated place.
- Do not soak the hamper in water.
- Do not expose the hamper to the sun.
- Keep away from fire.
- Wipe clean only.
- Keep the hamper on a level surface.
- Handle with care. The hamper may have sharp or splintered edges. Always protect your hands. Do not use if the hamper is damaged.
- Remove the base panels before cleaning the bags. Do not touch the base panels with water. Bags do not need to be cleaned regularly.

©2022 The AMES Companies, Inc. | Orlando, FL 32827 | 1-800-874-0008 (USA, Canada) | www.closetmaid.com



LAUNDRY HAMPER WITH SLIDING BAGS: USE + CARE INSTRUCTIONS

- Keep the hamper in a cool, dry, and ventilated place.
- Do not soak the hamper in water.
- Do not expose the hamper to the sun.
- Keep away from fire.
- Wipe clean only.
- Keep the hamper on a level surface.
- Handle with care. The hamper may have sharp or splintered edges. Always protect your hands. Do not use if the hamper is damaged.
- Remove the base panels before cleaning the bags. Do not touch the base panels with water. Bags do not need to be cleaned regularly.

©2022 The AMES Companies, Inc. | Orlando, FL 32827 | 1-800-874-0008 (USA, Canada) | www.closetmaid.com



LAUNDRY HAMPER WITH SLIDING BAGS: USE + CARE INSTRUCTIONS

- Keep the hamper in a cool, dry, and ventilated place.
- Do not soak the hamper in water.
- Do not expose the hamper to the sun.
- Keep away from fire.
- Wipe clean only.
- Keep the hamper on a level surface.
- Handle with care. The hamper may have sharp or splintered edges. Always protect your hands. Do not use if the hamper is damaged.
- Remove the base panels before cleaning the bags. Do not touch the base panels with water. Bags do not need to be cleaned regularly.

©2022 The AMES Companies, Inc. | Orlando, FL 32827 | 1-800-874-0008 (USA, Canada) | www.closetmaid.com



LAUNDRY HAMPER WITH SLIDING BAGS: USE + CARE INSTRUCTIONS

- Keep the hamper in a cool, dry, and ventilated place.
- Do not soak the hamper in water.
- Do not expose the hamper to the sun.
- Keep away from fire.
- Wipe clean only.
- Keep the hamper on a level surface.
- Handle with care. The hamper may have sharp or splintered edges. Always protect your hands. Do not use if the hamper is damaged.
- Remove the base panels before cleaning the bags. Do not touch the base panels with water. Bags do not need to be cleaned regularly.

©2022 The AMES Companies, Inc. | Orlando, FL 32827 | 1-800-874-0008 (USA, Canada) | www.closetmaid.com