




Item # 1002 453 587  
1002 453 588  
Model # HDP30115  
HDP30115-DISP

# USE AND CARE GUIDE

---

## BISHOP WALL SWING ARM LAMP

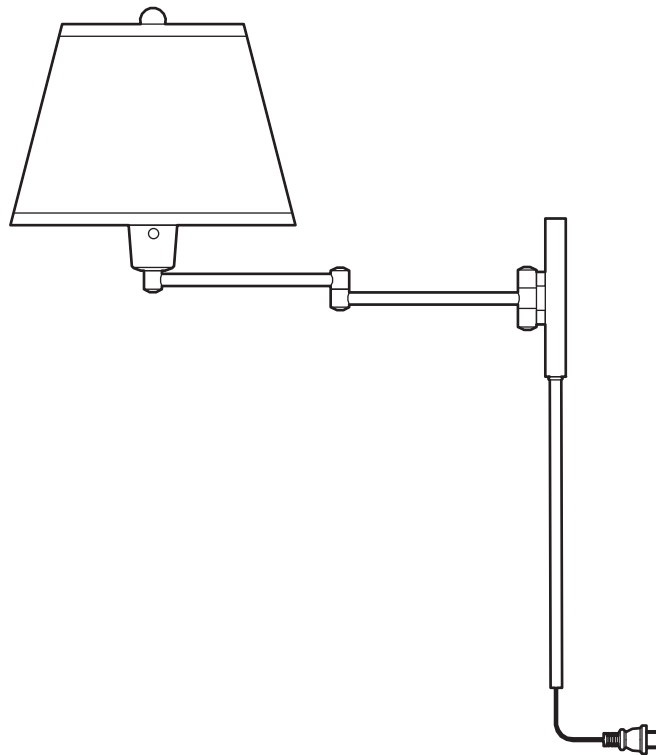

Questions, problems, missing parts? Before returning to the store,  
call Hampton Bay Customer Service  
8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

**1-855-HD-HAMPTON**

**HAMPTONBAY.COM**

---

### THANK YOU

*We appreciate the trust and confidence you have placed in Hampton Bay through the purchase of this light fixture. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Hampton Bay!*

# Table of Contents

Table of Contents.....	2	Hardware Included.....	3
Safety Information.....	2	Package Contents .....	4
Warranty.....	2	Assembly .....	5
What is Covered.....	2	Installation .....	6
What is Not Covered .....	2	Care and Cleaning .....	7
Pre-installation .....	3	Troubleshooting.....	7
Planning Installation .....	3		
Tools Required .....	3		

# Safety Information

- Consult a qualified electrician with any electrical questions you may have.



**IMPORTANT:** Inspect the wire insulation for any cuts, abrasions, or exposed copper that may have occurred during shipping. If there is a defect in the wire, do not continue the assembly process. Please call our Customer Service Team at 1-855-HD-HAMPTON.

# Warranty

## 1-YEAR LIMITED WARRANTY

### WHAT IS COVERED

The manufacturer warrants this lighting fixture to be free from defects in the materials and workmanship for a period of one (1) year from date of purchase. This warranty applies only to the original consumer purchaser and only to products used in normal use. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alterations, neglect or mishandling. This warranty shall not apply to any product that is found to have been improperly installed, assembled, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, faulty installation, or any other failure not relating to faulty material or workmanship.

### WHAT IS NOT COVERED

This warranty shall not apply to the finish on any portion of the product due to weathering, as this is considered normal wear. The manufacturer does not warrant and specifically disclaims any warranty, whether expressed or implied, other than the warranty contained herein. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss or damage, including but not limited to, any labor or expense costs involved in the replacement or repair of the product.

Contact the Customer Service Team at 1-855-HD-HAMPTON or visit [www.HamptonBay.com](http://www.HamptonBay.com).

# Pre-installation

## PLANNING INSTALLATION

Read all instructions before assembly and installation.

To avoid damaging this product, assemble it on a soft, non-abrasive surface such as carpet or cardboard. Inspect each part for defects that may have occurred during shipping.

Keep your receipt and these instructions for proof of purchase.

 


**NOTE:** This light fixture requires the use of one 120V, 60HZ, 100-Watt max, medium-base type A 3-way bulb (not included). Do not exceed the recommended wattage.

## TOOLS REQUIRED




Safety goggles

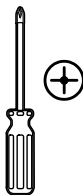

Phillips screwdriver



 Flathead screwdriver



Drill




Ladder

## HARDWARE INCLUDED



 **NOTE:** Hardware not shown to actual size.



AA



BB



CC



DD



EE



FF




GG

Part	Description	Quantity
AA	Plastic anchor	4
BB	Mounting plate	1
CC	Mounting screw	2
DD	Small nut	2
EE	Wood screw	4
FF	Small finial	2
GG	Cap	1

# Pre-installation (continued)

## PACKAGE CONTENTS

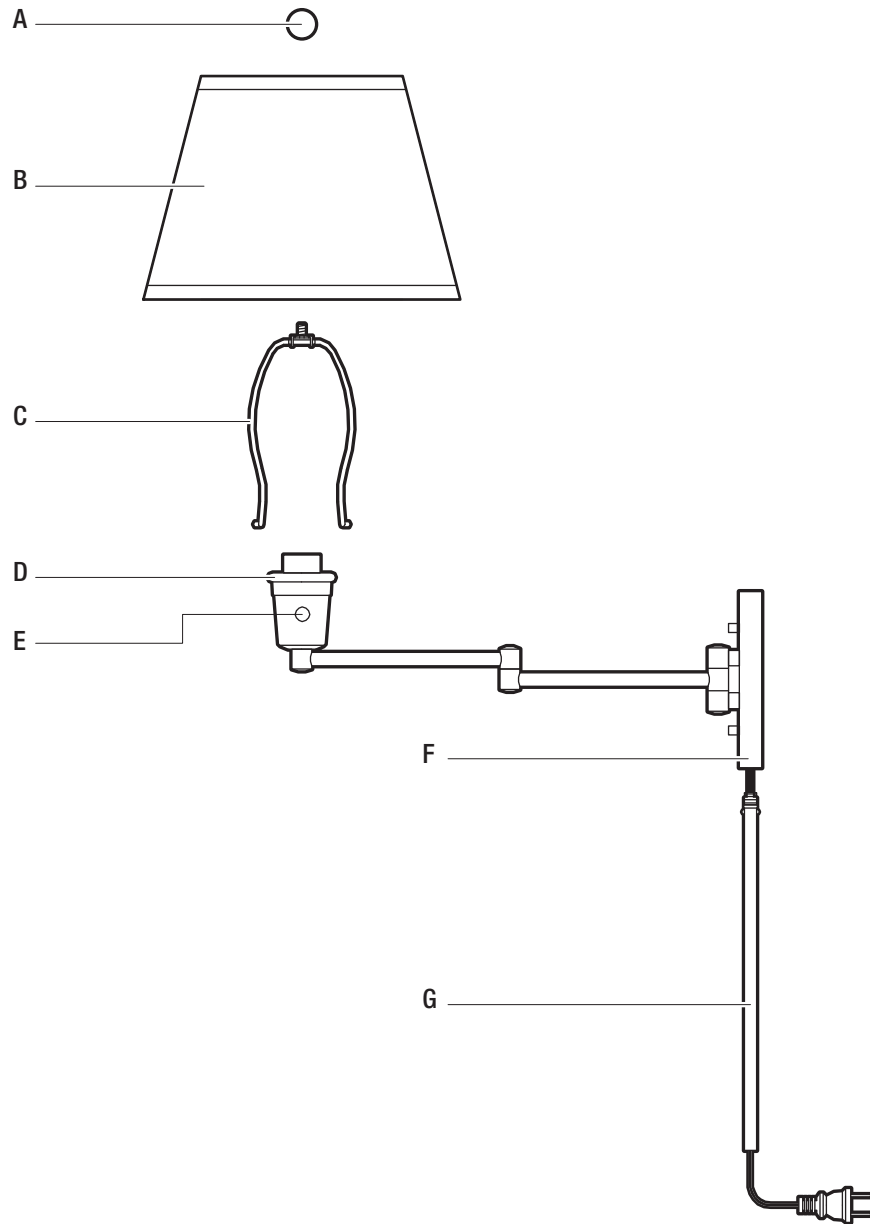


Part	Description	Quantity
A	Finial	1
B	Shade	1
C	Harp	1
D	Socket cover	1
E	Switch	1
F	Backplate	1
G	Cord cover	1

# Assembly

## 1 Assembling the cord cover


- Carefully unpack the lamp and lay out all parts on a clean surface.
- Insert the cord cover (G) into the hole in the bottom of the backplate (F) and secure with the cap (GG).

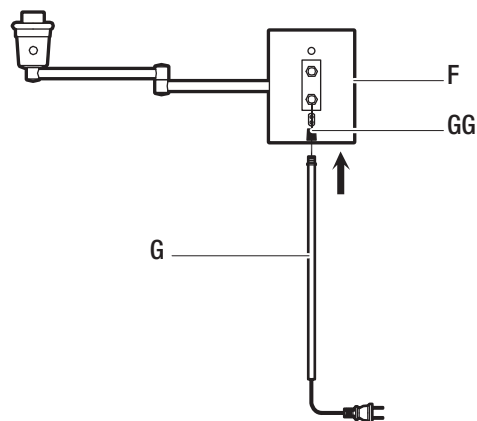

# Installation


## 1 Installing the mounting plate

- Screw two mounting screws (CC) into the holes in the mounting plate (BB). Ensure they align with the holes in the backplate (F) portion of the lamp.
- Secure the mounting screws (CC) with the small nuts (DD).
- Position the lamp on the wall at the desired location and mark the place for the wood screws (EE) to be installed.
- If installing into dry wall, drill pilot holes on the marked spots and insert plastic anchors (AA). If installing to wood studs, skip this step.
- Attach the mounting plate (BB) to the wall using the screws (EE).

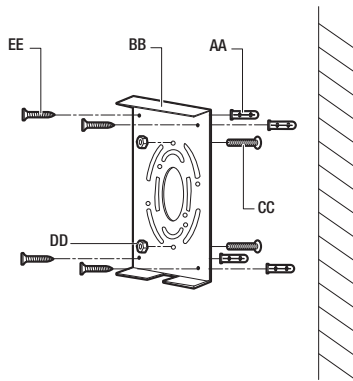


## 2 Hanging the lamp

- Raise the lamp assembly to the wall, align the backplate (F) holes with the mounting screws on the mounting plate (BB), and secure the backplate assembly to the wall with the small finials (FF).

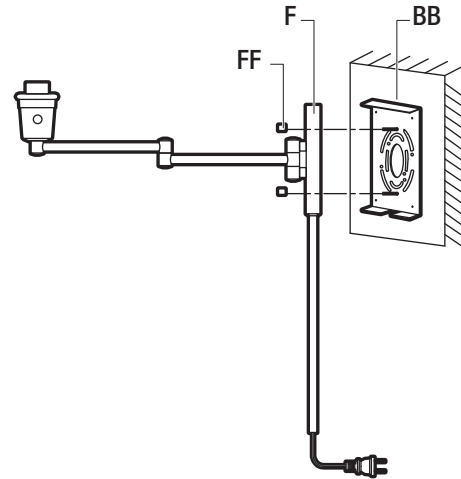

## 3 Assembling the shade


- Squeeze the legs of the harp (C) together and insert the two ends into the socket cover (D).
- Place the shade (B) onto the harp (C) and secure with the finial (A).

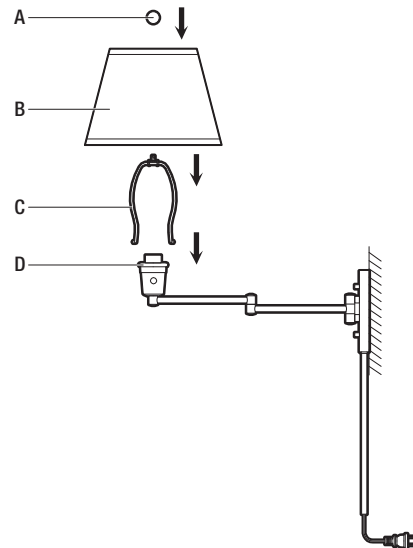

## Installation (continued)

### 4 Installing the bulb

- Prior to installing the bulb, inspect the socket for a silica packet. If the packet is present, remove and throw away. Do not expose it to children or pets.
- Install a 120V, 60HZ, 100-watt max. medium-base type A 3-way bulb (not included) in the socket of the lamp.
- Plug the cord into an outlet and turn on at the switch (E).

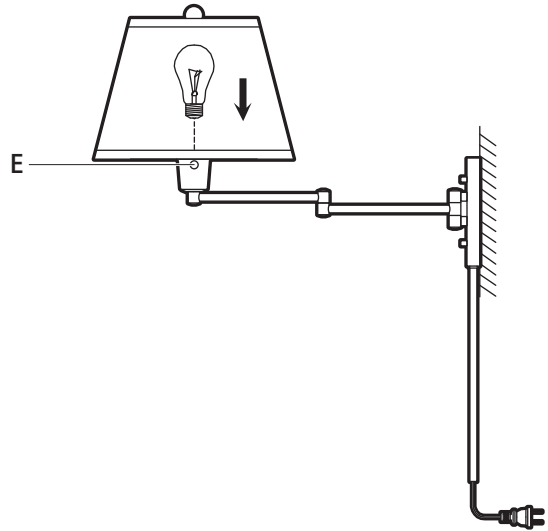

## Care and Cleaning

- Clean the light fixture with a soft, dry cloth. Do not use any cleaners with chemicals, solvents, or harsh abrasives.

## Troubleshooting

Problem	Possible Cause	Solution
The bulb will not light.	□ The bulb is burned out.	□ Replace the light bulb.
	□ The power is off.	□ Ensure that the power supply is turned on.
	□ There is a faulty wire connection.	□ Check the wiring.
	□ The circuit breaker is off.	□ Ensure that the circuit breaker is set to the On position.
The fuse blows or a circuit breaker trips when the light is turned on.	□ There is an exposed wire.	□ Discontinue use of the light fixture. □ Contact a qualified electrician or call the Customer Service Team at 1-855-HD-HAMPTON.
	□ There are too many items on one circuit.	□ Unplug other items on the circuit.



Questions, problems, missing parts? Before returning to the store,  
call Hampton Bay Customer Service  
8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

**1-855-HD-HAMPTON**

**HAMPTONBAY.COM**

Retain this manual for future use.