


48" FARM JACK

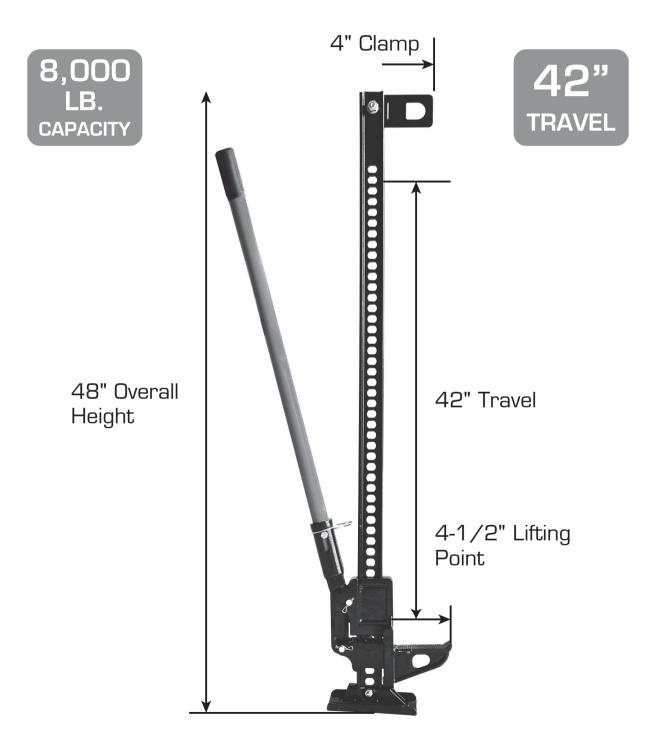

OPERATING INSTRUCTIONS

TO RAISE LOAD

- 1. Place the foot of the jack securely beneath the load.
- 2. Lift the reversing latch to its UP position and ensure it is locked in place.
- 3. Jack the nose up until it comes in contact with load.
- 4. Check to ensure nothing will obstruct a clean lift.
- 5. Pull down firmly and steadily on handle to raise load. The climbing pin will "click".
- 6. Relax handle allowing pin to support load.
- 7. Raise handle to the top of its stroke and pull again.

TO LOWER LOAD

IMPORTANT: THE JACK MUST BE LOADED WITH A MINIMUM OF 110 LBS.

TO LOWER STEP BY STEP, OTHERWISE THE LIFTING NOSE WILL DROP.

- 1. Jack the load up slightly and ensure handle is in its fully upright position.
- 2. Trip the reversing latch so that it is in the DOWN position.
- 3. Keeping a firm grip on the handle, steadily pump just as you would to raise a load.


LIMITED MANUFACTURER WARRANTY

FOT makes every effort to ensure that this product meets high quality and durability standards. FOT warrants to the original retail consumer a 1-year limited warranty from the date the product was purchased at retail and each product is free from defects in materials. Warranty does not apply to defects due directly or indirectly to misuse, abuse, negligence or accidents, repairs or alterations, or a lack of maintenance. FOT shall in no event be liable for death, injuries to persons or property, or for incidental, special or consequential damages arising from the use of our products. To receive service under warranty, the original manufacturer part must be returned for examination by an authorized service center. Shipping and handling charges may apply. If a defect is found, FOT will either repair or replace the product at its discretion.

DO NOT RETURN TO STORE

For Customer Service:

Email: customerservice@focus-ontools.com or Call 1-800-348-5004

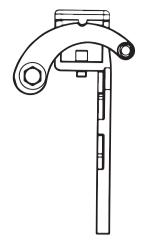

UP POSITION

DOWN POSITION