




OPERATOR'S MANUAL 60" HEAVY-DUTY ADJUSTABLE WORKBENCH

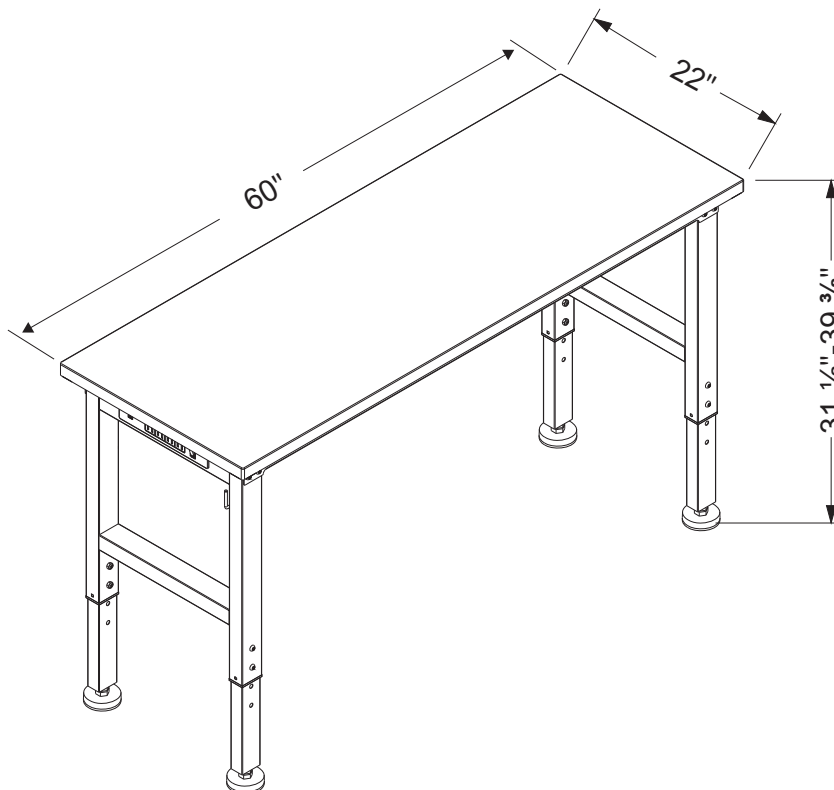

USE PRECAUTION
For your safety



**INSTRUCTION
MANUAL**
Read and understand



EYE PROTECTION
Must be worn



PROTECTIVE GLOVES
Must be worn when
handling tool




CAUTION: Read and follow all Safety Rules and Operating instructions before first use of this product.
NOTE: Ensure all components are present. If any components are missing, do not proceed with assembly.

SAVE THIS MANUAL FOR FUTURE REFERENCE

COMPONENTS

Ensure all components are present. If any components are missing, do not proceed with assembly.

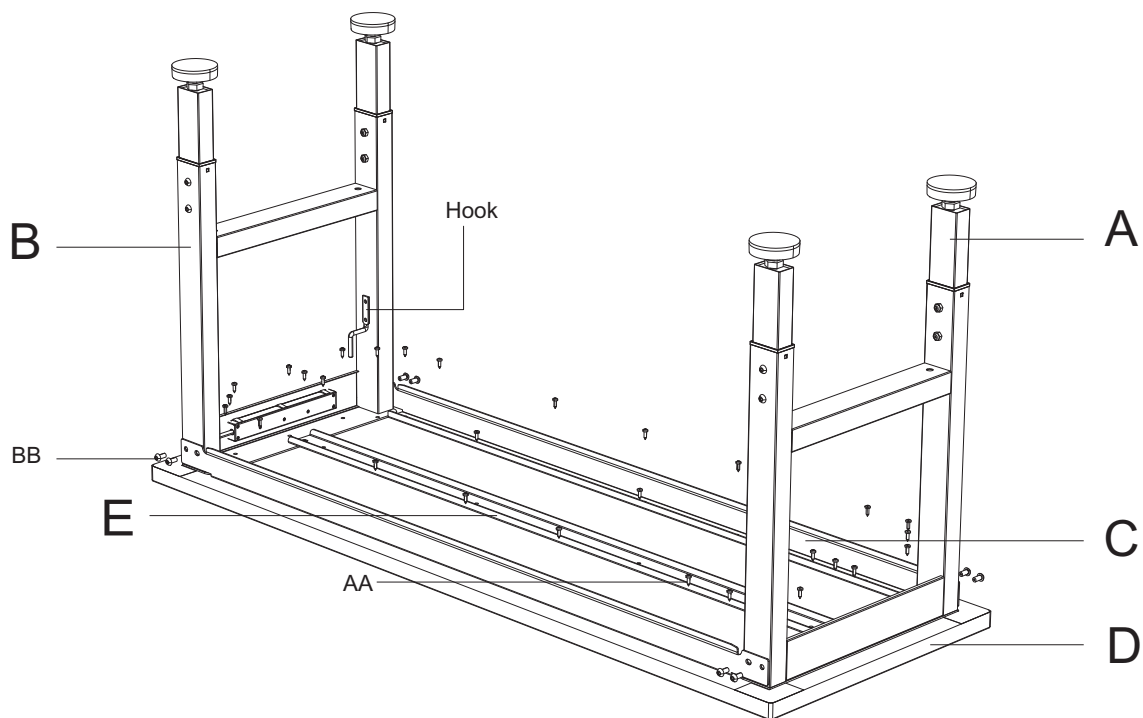

PART	PIC	DESCRIPTION	QTY
A		Adjustable leg	1
B		Leg with power charge strip	1
C		Beam	2
D		Rubber wood top	1
E		Support rod	1
AA		M5X15 Cross head tapping screw	30
BB		M8X20 Inner hexagonal at head bolt	8

TOOLS REQUIRED (NOT INCLUDED):



PH2
Screwdriver



13mm
Spanner



19mm
Spanner





5mm
Hex Key

ASSEMBLY

NOTE: Do not tight all the screws before final step.

Step 1




- Fix the leg (A)(B) with beam (C) use 8 pcs M8 x 20 (BB).

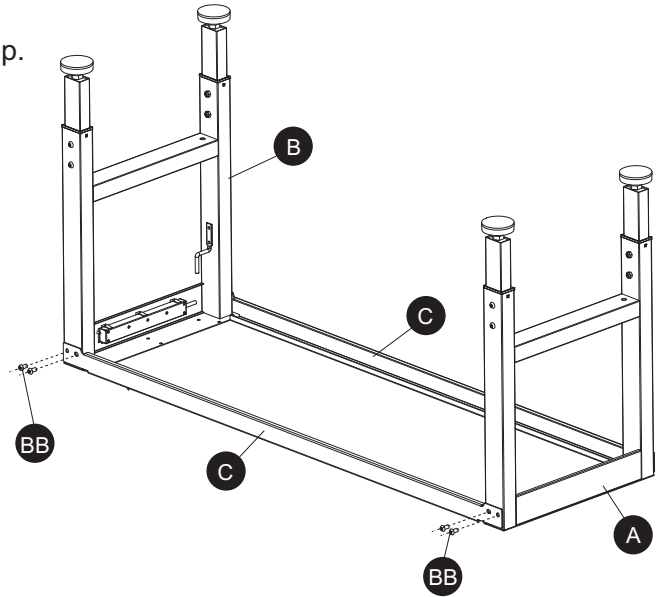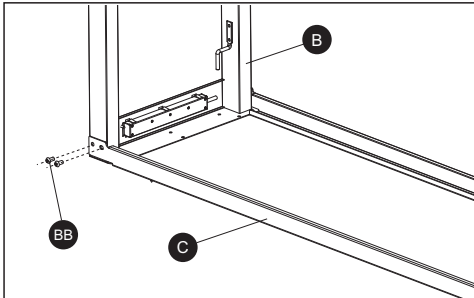

PART	A	B	C	B B
DESCRIPTION	Leg	Leg with power charge strip	Beam	M8x20 Inner hexagonal at head bolt
QTY	1	1	2	8

Step 2

- Place the rubber table top (D) on a flat surface with the positioning label facing up. Protect the table with packaging materies.
- Align the positioning label and install the legs (A&B) & beams (C) on the rubber wood top using M5 x 15 cross head tapping screw(AA).

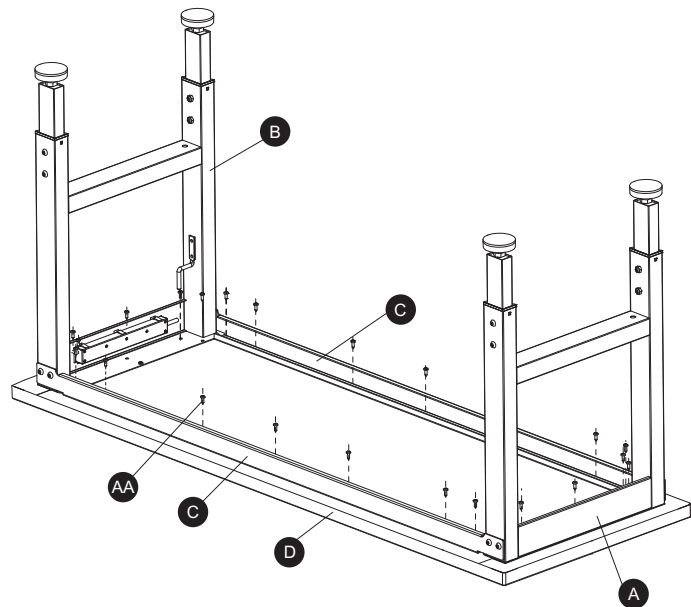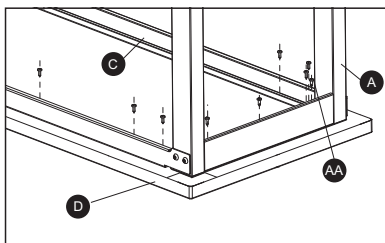
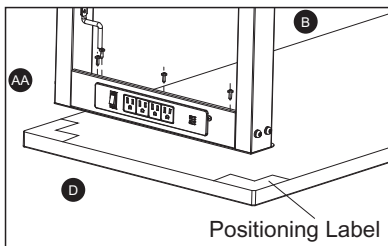


PART	A	B	C	D	AA
DESCRIPTION	Leg	Leg with power charge strip	Beam	Rubber wood top	M5x15 cross head tapping screw
QTY	1	1	2	1	24

ASSEMBLY

Step 3

- Fix the support rod (E) on the shaft of the rubber wood top (D) using M5 x 15 cross head tapping screw(AA).

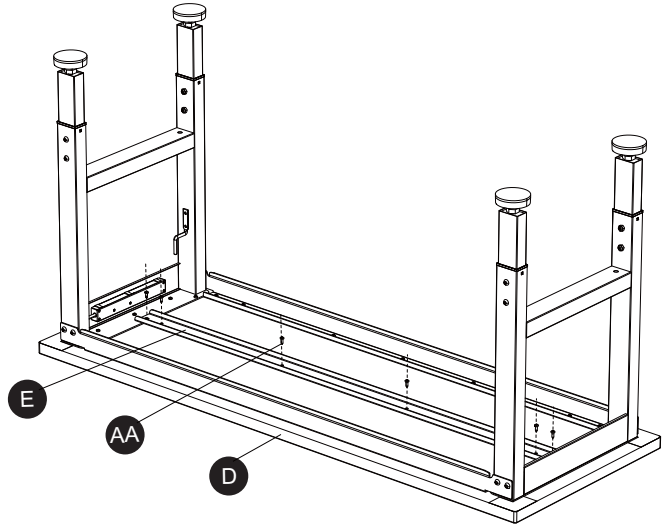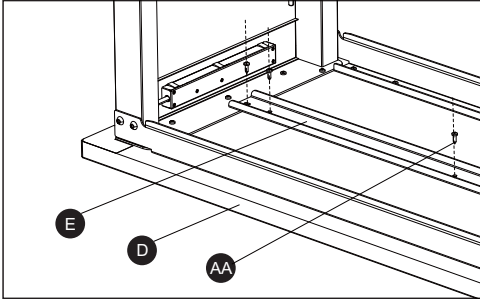



PART	D	E	AA
DESCRIPTION	Rubber wood top	Support rod	M5 x 15 cross head tapping screw
QTY	1	1	6

Step 4

- Adjust the position of screws by the PH2 screwdriver and 13mm combination spanner to acquire suitable height.

i NOTE:


Adjust height of table range is from 31 ½"-39 ⅜".

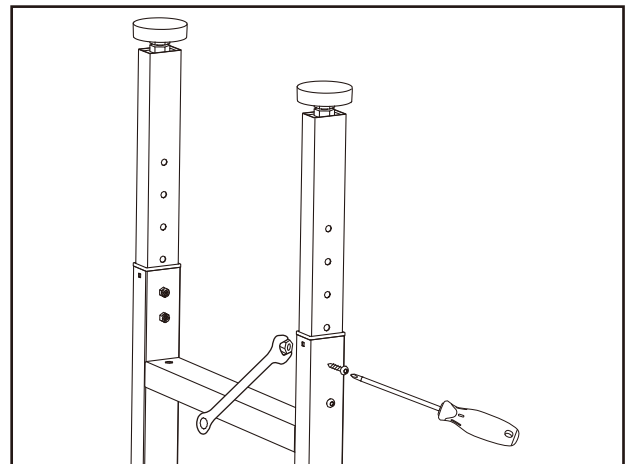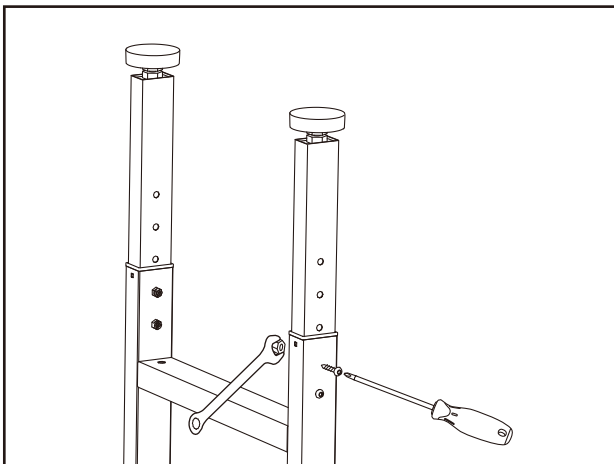

ASSEMBLY


Step 5

- Easily leveled with its height-adjustable leg pads. Rotate the pad to the suitable position and lock with the corresponding nuts(M12) by the 19mm combination spanner.

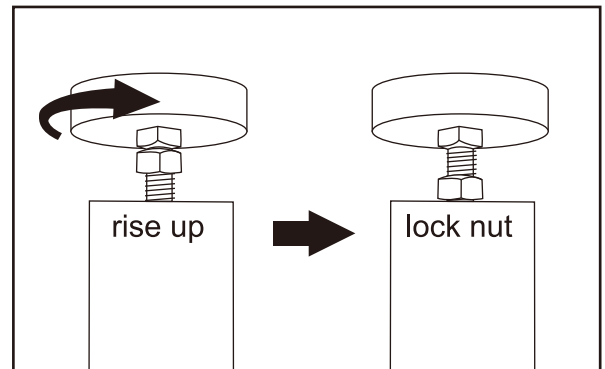

Step 6

- Stand up the workbench and adjust the feet if necessary to make the workbench stable.

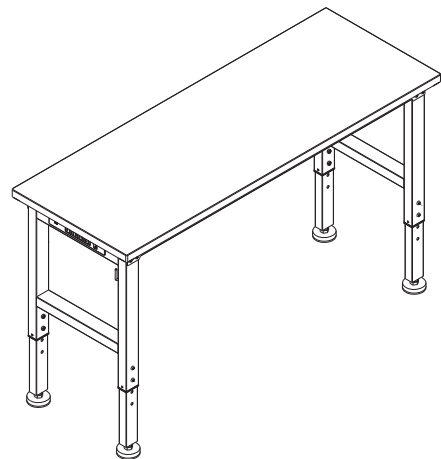

DISPOSAL INFORMATION

- Please recycle where facilities exist. Check with your local authority for recycling advice.

CUSTOMER SERVICE

- If you are having difficulty using this product and require support, please contact the seller.