

Troubleshooting

Problem	Possible Cause	Solution
The solar light does not turn on at night or the amount of time that it operates during the night is shorter.	The battery is not fully charged.	Ensure the solar light is located in an area where it can receive the maximum amount of full, direct sunlight everyday. If the solar light does not receive enough sunlight during a day (e.g. due to cloudy or overcast weather conditions), it will be recharged on the next sunny day and resume normal operation. Keeping the solar panel clean is
	The solar light is installed close to other light sources which are causing the photocell to turn the fixture off.	Relocate the fixture to a place with no other light sources, or remove the other light sources from the fixture location.
	The battery is reaching the end of its useful life.	Replace the rechargeable battery with a rechargeable battery that has a similar rating and type. Do not use a non-rechargeable battery.
	There is not enough direct sunlight.	Ensure the solar light is not installed in a shaded area, such as in the shadows or trees or a house.
	The pull tab may not be fully removed from the battery compartment.	Remove the battery, and verify that the pull tab is completely removed.

Warranty

WHAT IS COVERED

This warranty applies only to the original consumer purchaser and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alterations, neglect, or mishandling.

WHAT IS NOT COVERED

This warranty shall not apply to any product that is found to have been improperly installed, set-up, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, faulty installation, or any other failure not relating to faulty material or workmanship. This warranty shall not apply to the finish on any portion of the product, such as surface and /or weathering, as this is considered normal wear and tear.

Contact the Customer Service Team at 1-855-HD-HAMPTON or visit www.HamptonBay.com.

Safety Information

CAUTION: Always dispose of recyclable batteries at a proper battery disposal facility. Do not dispose in fire or attempt to open a sealed battery. Use only a similar rating and type of battery as the one that comes with the fixture (AA 3.2v 600 mAh IFR14500 rechargeable). Do not mix old and new batteries.

