




INSTRUCTION MANUAL

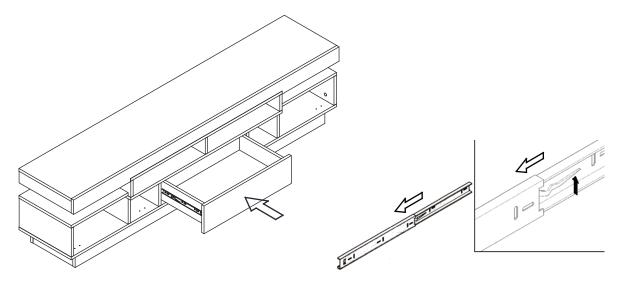

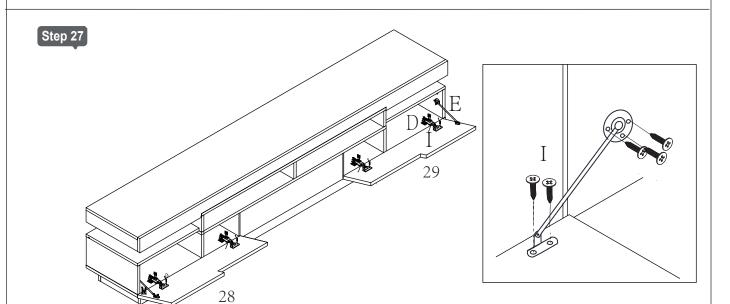





When the hinges are installed, you can refer to the pictures to adjust crevice of the doors till it's perfect:

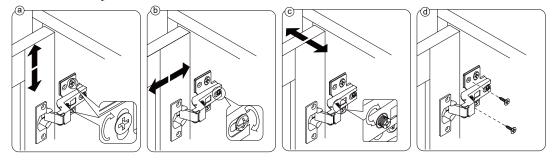

- 1. To adjust the doors up and down, please refer to step (a)
- 2. To adjust the distance between the doors and side panels, please refer to step(b)
- 3. To adjust the gap between two doors, please refer to step (c)
- 4. After the adjustment finished, please tight the screws, refer to step (d)

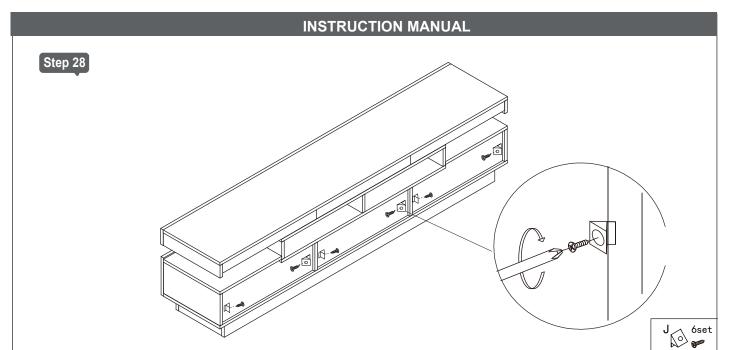

Step 29

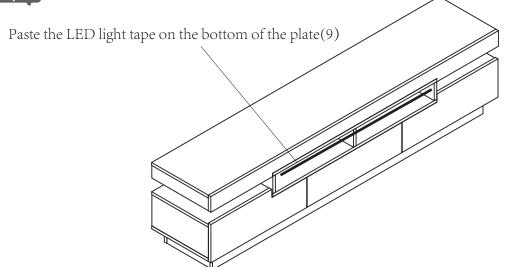

LED Light

If you can't let the lights work successfully, please check the following:

- 1.Please check the direction of the connect, try it in the opposite
- direction, according to the following picture .
- 2. Please check the remote control. it need you to tear down the plastic septum before use it.
- 3. Don't let the remote control too far from the receiver, make sure there is no obstruction between them.

