



H1027

Portable Workspace Forced Air Heater

INSTALLATION INSTRUCTIONS AND OPERATOR'S MANUAL



FOR YOUR SAFETY

DO NOT STORE OR USE
GASOLINE OR OTHER
FLAMMABLE VAPORS OR
LIQUIDS IN THE VICINITY
OF THIS OR ANY OTHER
APPLIANCE



Intertek

Made in China

WARNING! IF THE INFORMATION IN THIS MANUAL IS NOT FOLLOWED EXACTLY, A FIRE MAY RESULT CAUSING PROPERTY DAMAGE, PERSONAL INJURY OR LOSS OF LIFE.

ANSI/UL 1278 MOVABLE AND WALL OR CEILING HUNG ELECTRIC ROOM HEATERS

DO NOT DISCARD THIS MANUAL
CUSTOMER: PLEASE RETAIN THIS MANUAL FOR FUTURE USE

INTENDED USE: This product is intended only for indoor household or office use. It is NOT intended for industrial or commercial use.

DO NOT USE OUTDOORS

IMPORTANT INSTRUCTIONS

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electrical shock, and injury to persons, including the following:

1. Read all instructions before using this heater.
2. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes and curtains at least 3 feet (0.9m) from the heater.
3. Extreme caution is necessary when any heater is used by or near children, pets or invalids and whenever the heater is left operating unattended.
4. If possible always unplug this appliance when not in use.
5. Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner.
6. Any repairs to this appliance should be carried out by a qualified service person.
7. Under no circumstances should this appliance be modified. Parts having to be removed for servicing must be replaced prior to operating this appliance again.
8. Do not use outdoors.
9. Use your heater only in dry environments. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate the heater where it may fall into a bathtub or other water container. Do not use your heater outdoors. Do not use near sinks, swimming pools or other damp areas such as flooded basements, garages, etc or anyplace where the heater could come in contact with water.
10. Do not use this heater in elevated locations, such as on shelves, raised platforms, etc.
11. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
12. To disconnect heater, first turn controls to off, then remove plug from outlet. Always unplug the heater when not in use.
13. Connect to a properly grounded outlet only.
14. This appliance, when installed, must be electrically grounded in accordance with local codes, with the current CSA C22.0 Canadian Electrical codes or for USA installations, follow local codes or for USA installations, follow local codes and the National Electric code ANSI/NFPA No. 70.
15. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electrical shock or fire, or damage the heater.
16. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
17. This appliance has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint or flammable liquids are used or stored. This appliance should not be used as a drying rack for clothing, nor should Christmas stockings or decorations be hung or near it.
18. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
19. Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power strip.
20. Do not use this heater with missing, damaged, or broken legs.
21. SAVE THESE INSTRUCTIONS

IMPORTANT INSTRUCTIONS

ALWAYS OBSERVE THESE SAFETY PRECAUTIONS WHEN OPERATING YOUR ELECTRIC HEATER

- ALWAYS Read all instructions before operating.
- ALWAYS Locate your electric heater away from furniture or loose hanging drapes.
- ALWAYS Keep the rear grill away from walls or drapes so as not to block the air intake. (If applicable)
- ALWAYS Unplug electric heater when not in use.
- ALWAYS Use electric heater on a flat dry surface.
- ALWAYS Use on 110-120 volt 60Hz AC power supply.
- ALWAYS Route the cord so it will not be walked on tripped over or pinched by furniture.
- ALWAYS Keep electrical cords, drapes and other furnishings away from your electric heater.
- ALWAYS Keep your electric heater clean and the filter free of dust. (If applicable)
- ALWAYS Use indoors only.

- NEVER Place drapes, clothing or towels over electric heater to dry.
- NEVER Use in the presence of explosive or flammable vapors such as gas or paint.
- NEVER Plug another electrical appliance into the same circuit. Blown fuses, tripped circuits and fire hazards may result.
- NEVER Use water or liquids to clean your electric heater.
- NEVER Let bare skin touch hot surfaces as this may cause burns.
- NEVER Leave electric heater unattended.
- NEVER Leave electric heater when children or pets are present.
- NEVER Locate electric heater where it may fall into a bath tub or other water containers.
- NEVER Operate electric heater with a damaged cord, plug or after the heater malfunctions, or has been dropped or damaged in any manner.
- NEVER Run cord under carpeting or cover with throw rugs or runners.
- NEVER Insert or allow foreign objects to enter any ventilation or exhaust openings, as this may cause an electrical shock, fire or damage.

SAVE THESE INSTRUCTIONS



IMPORTANT: Read all instructions and warnings carefully before installation and use. Failure to follow these instructions may result in a possible electric shock, injury to persons, fire hazard and will void the warranty.



OPERATING INSTRUCTIONS

Note: When using the heater for the first time, you may notice a slight emission of smoke. This is normal and will stop after a short time. The heating element is made of steel and was coated with a layer of protective oil during production.

Setting	Function
	Unit is Off
	Fan Runs - No Heat
	Fan Runs - Half Power Heat
	Fan Runs - Full Power Heat

1. Position the fan heater so that it stands on a firm level surface (When used as portable) and at a safe distance from wet locations and flammable objects.
2. Connect the fan heater to the proper electrical power. See grounding instructions.
3. Set the power settings knob to fan or heating Position.
4. Set the thermostat dial to the maximum temperature.
5. Once the room reaches the desired temperature, turn the thermostat dial back until heating element turns off. The heater will cycle automatically around this present temperature. To increase temperature, turn the thermostat knob clockwise. To lower temperature, turn the thermostat counterclockwise.



Electrical outlet wiring must comply with local building codes and other applicable regulations to reduce the risk of fire, electrical shock and injury to persons.



SAVE THESE INSTRUCTIONS



Do not use this appliance if any part of it has been under water. Immediately call a qualified service technician to inspect the appliance and replace any part of the electrical system which has been under water.



Grounding Instructions:

1. Make sure the heater is switched OFF before plugging the heater into the outlet.
2. Connect to properly grounded outlets only.
3. Note: The power cord has a polarized plug (with one blade wider than the other) that will only fit in a polarized outlet one way.
4. If it does not insert easily try reversing the plug.
5. If it still does not fit contact your electrician to replace your outlet.
6. DO NOT defeat the safety purpose of the polarized plug.

Automatic Overheat Safety Control

This heater is equipped with an internal heat limiting thermostat and overheat protection circuit. When a potential overheat temperature is reached, the system will automatically shut the heater off. Unplug heater allow to cool down for 10 minutes, and then restart.

Cleaning and Maintenance

Any electrical repairs or rewiring of this unit should be carried out by a licensed electrician and in accordance with national and local codes.

Before cleaning the appliance, disconnect it from the power outlet and let it cool down.

In order to protect the enclosure, don't splash water onto the heater, and never use a solvent like gasoline, isoamyl acetate, toluene, etc. to clean the heater. DO NOT open the heater or attempt to clean the inside of this appliance.



CAUTION:
RISK OF ELECTRIC SHOCK
DO NOT OPEN - NO SERVICEABLE PARTS INSIDE



SPECIFICATIONS

Model: H1027 (All specifications +5% / -10% tolerance)

BTU's per/Hour	5120
Voltage	120V
Watts	1500
Amps	15
Heating Area (ft ²)	160

TROUBLE SHOOTING

PROBLEM	CAUSE	SOLUTION
Do not feel heat or air flow	No power to heater	Check power connection to heater
	Desired room temperature reached	Thermostat will shut off heater once desired room temperature is reached
	Auto-Reset has tripped	Unplug heater allow to cool down for 10 minutes then restart
	Heater has fan only setting	Set to run on full power for heating

LIMITED WARRANTY STATEMENT

This warranty is underwritten by Falco Insurance Company and is extended to the original retail purchaser of this model or, if this unit is purchased and requires installation by a building contractor, to the original owner of the home. No subsequent purchaser of the unit or of a home in which it is installed is entitled to any of the benefits of this warranty.

This product is warranted against defects in materials and workmanship for a period of one (1) year from the date of original retail purchase. No other parts or components are warranted. There is no warranty for defects caused by abuse, faulty installation, or the like. Repairs or replacement parts supplied under this warranty are warranted only for the period of this warranty; that is, one (1) year from the date of the original retail purchase of the unit.

In the event of a defect or malfunction, we will replace or repair the defective part or component only and return the new or repaired part to you freight prepaid.

You must bear all other expenses incurred in obtaining repairs, including labor required for field repair or replacement, and the cost of shipping the defective part to us. You must also bear the cost of repair to or replacement of any part or component and the shipping charges incurred for the repair or replacement and return to you of any part or component not covered by this warranty, including parts or components damaged by you.

The company reserves the right to demand and receive written evidence of the date of purchase before undertaking its obligations under this warranty. The right to demand and receive written evidence of date of purchase extends to all licensed dealers of Ventamatic, Ltd. products.

You should, therefore, retain your sales slip and attach a copy of it to the warranty claim.

**To start a warranty claim you must:
Contact Ventamatic, Ltd.**

An RGA (Returned Goods Authorization) form is required for returns to the factory to ensure your return can be processed efficiently and quickly. Please contact Ventamatic, Ltd. toll-free at 800-433-1626 or via web at www.MYMAXXAIR.com to obtain an RGA and follow the instructions given.

There is no informal dispute settling mechanism available in the event of a controversy involving this warranty.

Any and all implied warranties which may exist terminate upon the expiration of this warranty one (1) year from the date of the original retail purchase. Some states do not allow limitations on how long an implied warranty lasts, so this limitation may not apply to you.

Ventamatic, Ltd. is not liable to you for incidental or consequential damages arising out of defect or malfunction of a unit or its installation or out of any alleged breach of this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, so this limitation may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.