



Before you begin

3D-GUIDED INTERACTIVE ASSEMBLY INSTRUCTIONS CAN BE FOUND IN **BILT**
 DOWNLOAD THE **FREE** APP

BILT Download on the App Store GET IT ON Google Play

ASSEMBLY REQUIRES AT LEAST 2 ADULTS, 3 ADULTS ARE RECOMMENDED. PLEASE FOLLOW THE STEP BY STEP GUIDE AND ENJOY YOUR 12 FOOT SKELETON!

EASY ASSEMBLY AND OPERATION INSTRUCTIONS

21SV22082_12Foot Skeleton

IMPORTANT SAFETY INSTRUCTION

READ AND SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

BEFORE ASSEMBLING, REMOVE ALL THE ABOVE PARTS FROM BOX. IF ANY PART IS MISSING OR BROKEN, DO NOT ATTEMPT TO ASSEMBLE THE PRODUCT AND CONTACT SVI CUSTOMER SERVICE FROM 8:30AM TO 5:30PM PST AT 1-855-428-3921, EMAIL CUSTOMERSERVICE@SVIUS.COM, OR CALL THE HOME DEPOT CUSTOMER SERVICE AT 1-877-527-0313.


IMPORTANT TIPS:

- If not functioning properly (eyes don't light up), ensure that cables are connected to their corresponding cable as shown in the instruction sheet (See steps 5.1 and 7.2).
- If item does not activate when turned on, ensure that the adapter is plugged into a live outlet or try replacing the existing batteries with fresh ones.

- If the LCD eyes do not light up when you are using an adapter to operate the item, please remove the input port of adapter and activate with batteries to see if this is an adapter issue.
- If the item still does not work, contact SVI customer service from 8:30am to 5:30pm PST at 1-855-428-3921, email customerservice@svious.com, or call The Home Depot customer service at 1-877-527-0313.

PARTS LIST



- A. Base x 1
- B. Right Foot x 1
- C. Left Foot x 1
- D. Right Lower Support Pole x 1
- E. Left Lower Support Pole x 1
- F. Right Shin x 1
- G. Left Shin x 1
- H. Upper Support Pole x 2
- I. Right Femur x 1
- J. Left Femur x 1
- K. Pelvis x 1
- L. Spinal Support x 1
- M. Rib Cage x 1
- N. Right Humerus x 1
- O. Left Humerus x 1
- P. Right Forearm x 1
- Q. Left Forearm x 1
- R. Head x 1
- S. Base Stabilizer x 4
- T. Loop Screw x 1
- U. Cable x 1
- V. Stake x 4
- W. Allen Wrench x 1
- X. Adapter * x 1

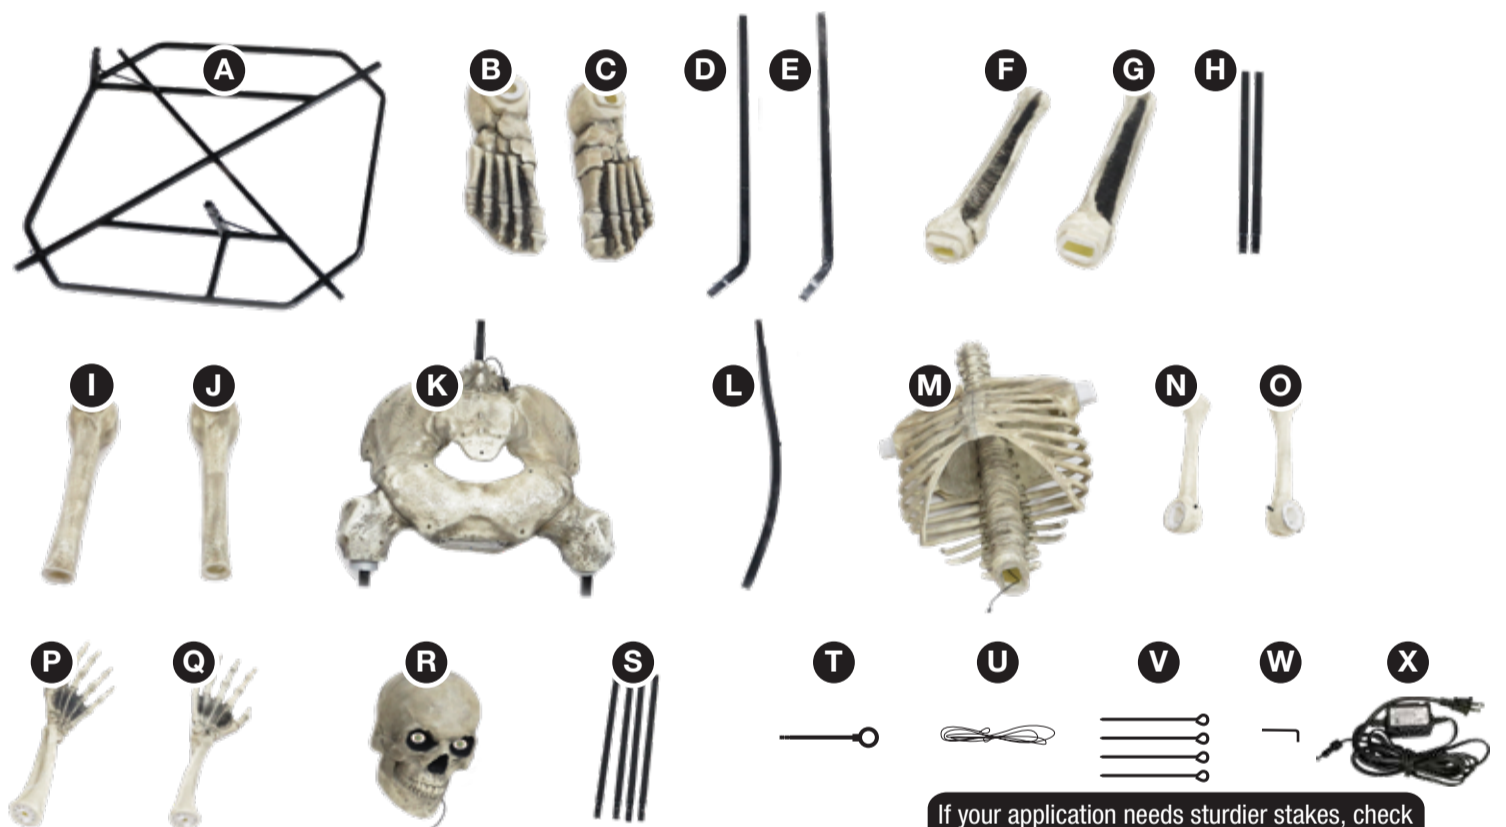


* Power Adapter Spec
 Input: 120VAC 50/60Hz
 Output: 5.9V 1.5A

If your application needs sturdier stakes, check out SKU 1006262796 at The Home Depot (sold separately).

NOTE: Throughout the instructions, Right and Left are relative to the character. Allen wrench included for assembly.

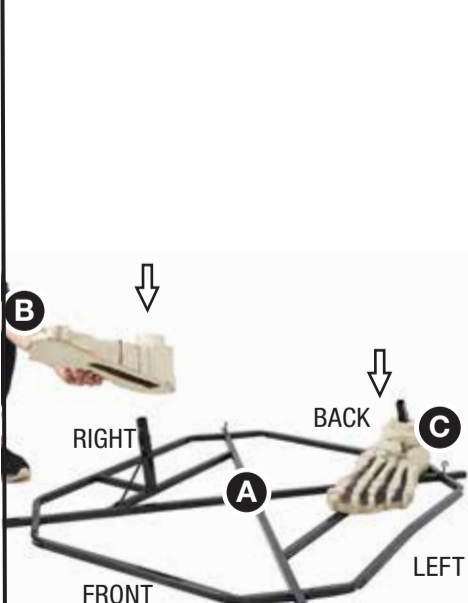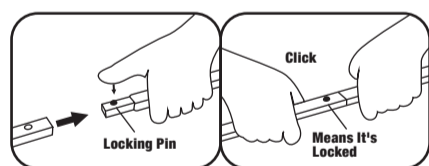


1.1

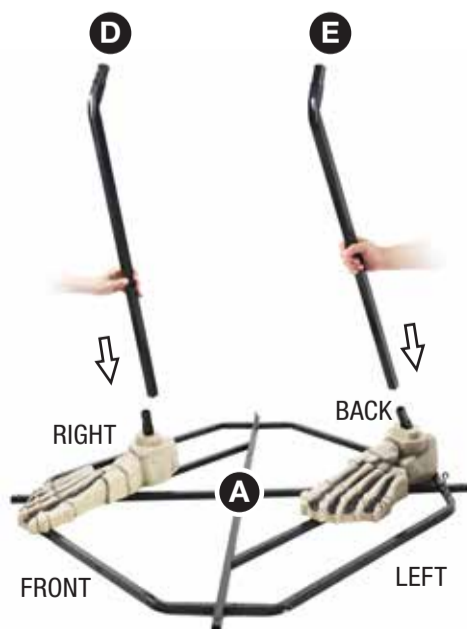


1.2

NOTE: Slide the two shins over the lower support poles and fit them onto the feet as shown.

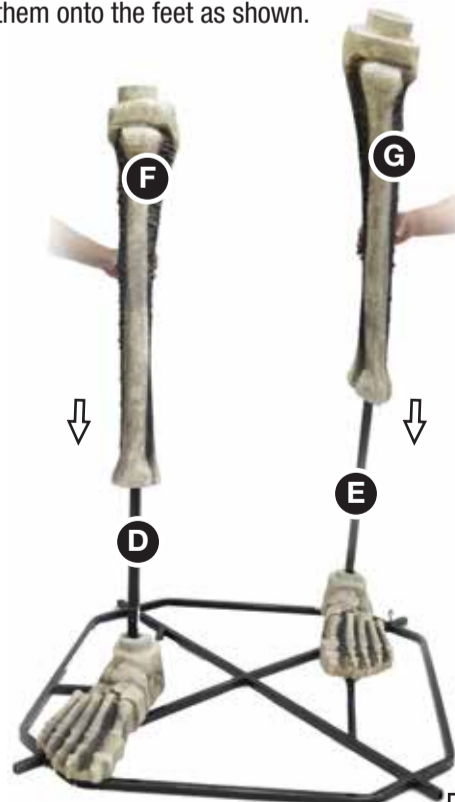


2.1

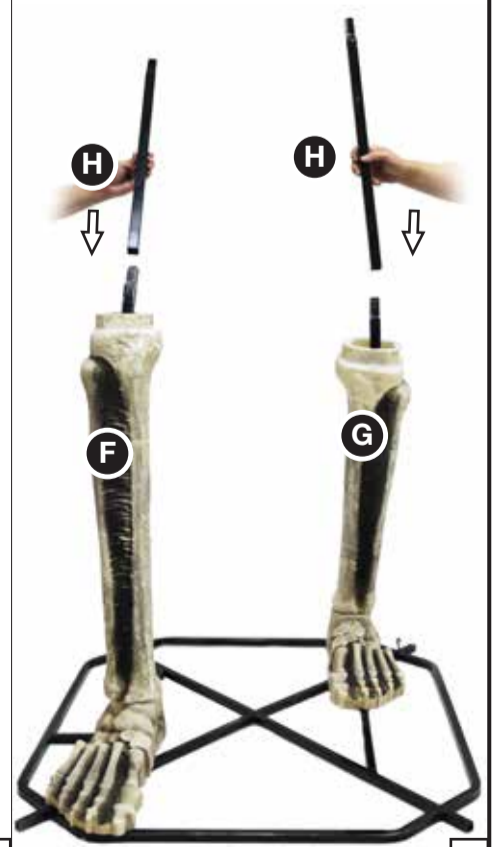


2.2

NOTE: Slide the two femurs onto the upper support poles and then fit them onto the shins as shown.

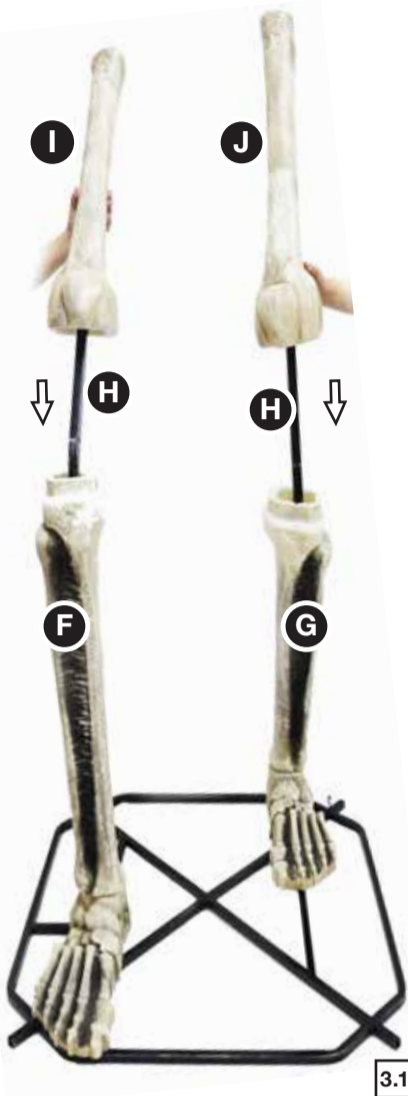


3.1

NOTE: A ladder and more than 2 people are advised when assembling the (K) Pelvis to the (H) Upper Support Poles and the (I,J) Femurs. If there is difficulty in assembling the (K) Pelvis, try adjusting the upper legs until they are properly aligned.

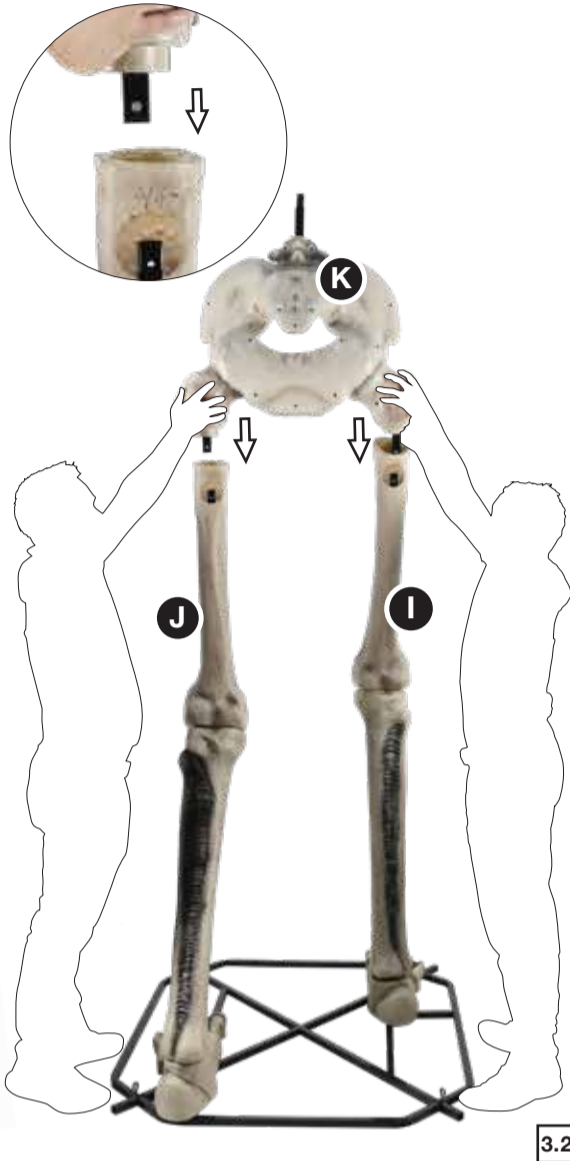


3.2


NOTE: Lean the skeleton against the box it came with for easier assembly. 3 adults are strongly recommended for this step.

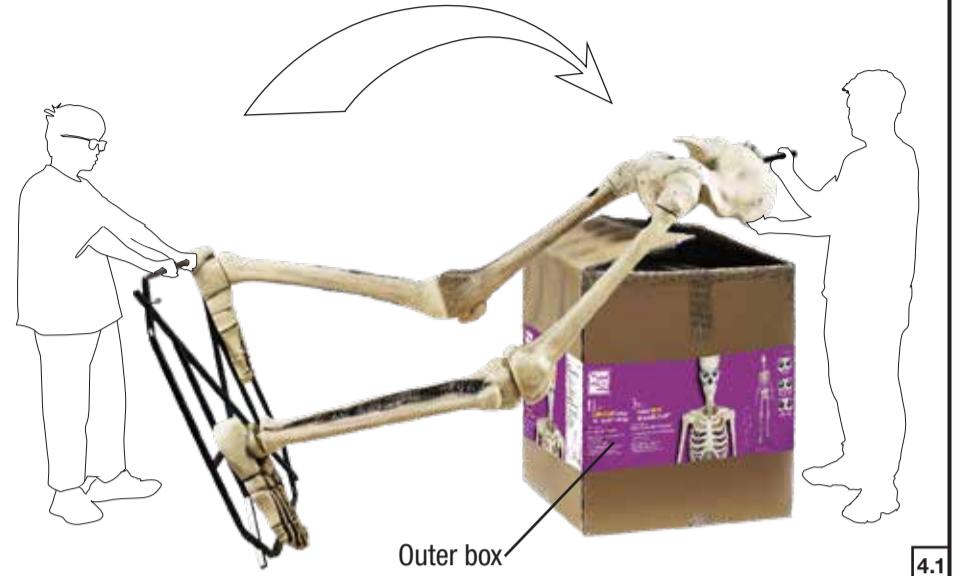

4.1

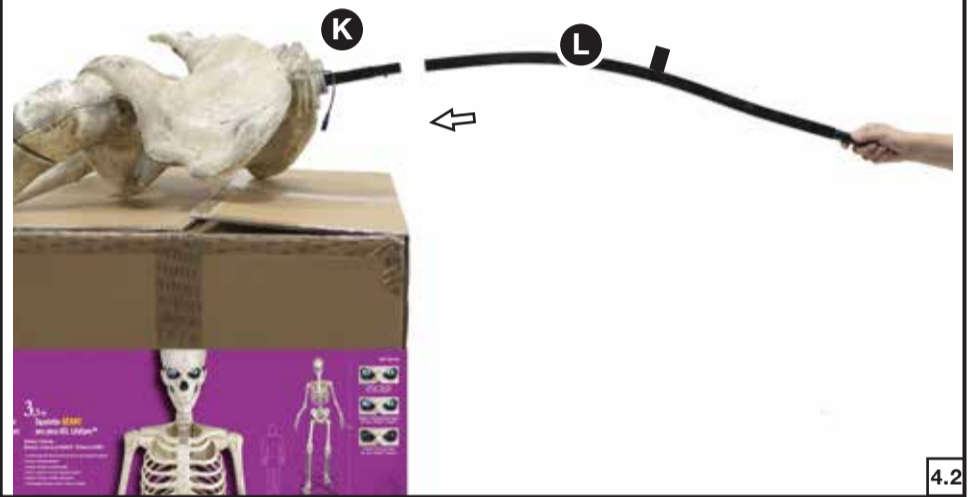


4.2

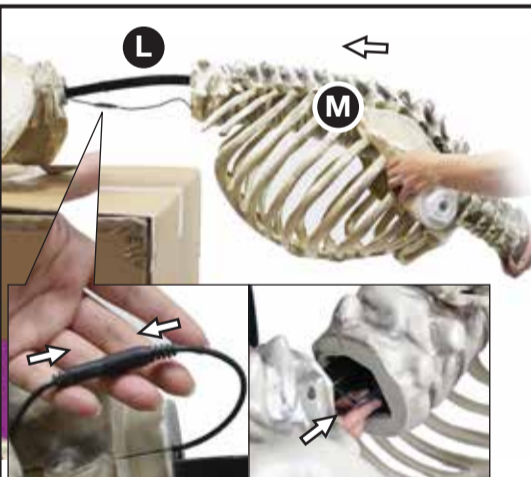


After connecting the wires, hide the excess inside the available cavity at the bottom of the (M) Rib Cage.

5.1


NOTE: Screw the loop into the area inside of the spine as shown.

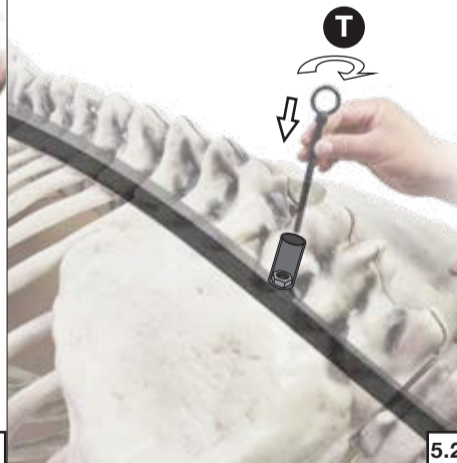


5.2

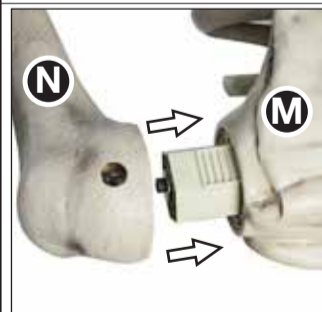


Note: Do NOT overtighten this bolt. Overtightening may result in damage to the product. Adjust the arm position to your preference. If a bolt is missing, check inside the box as it may have fallen out of the arm.

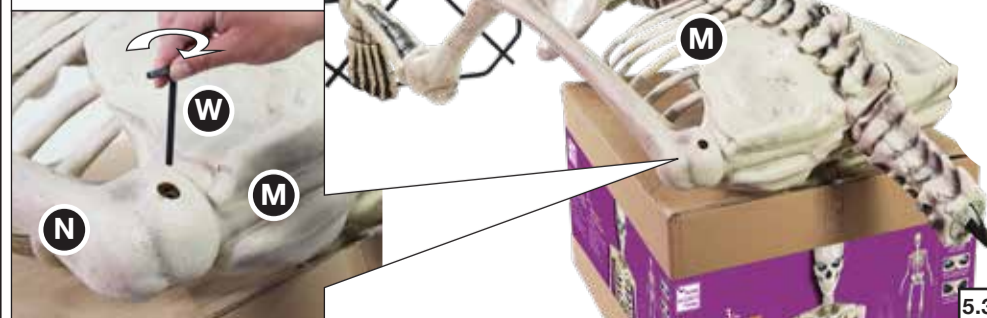






5.3

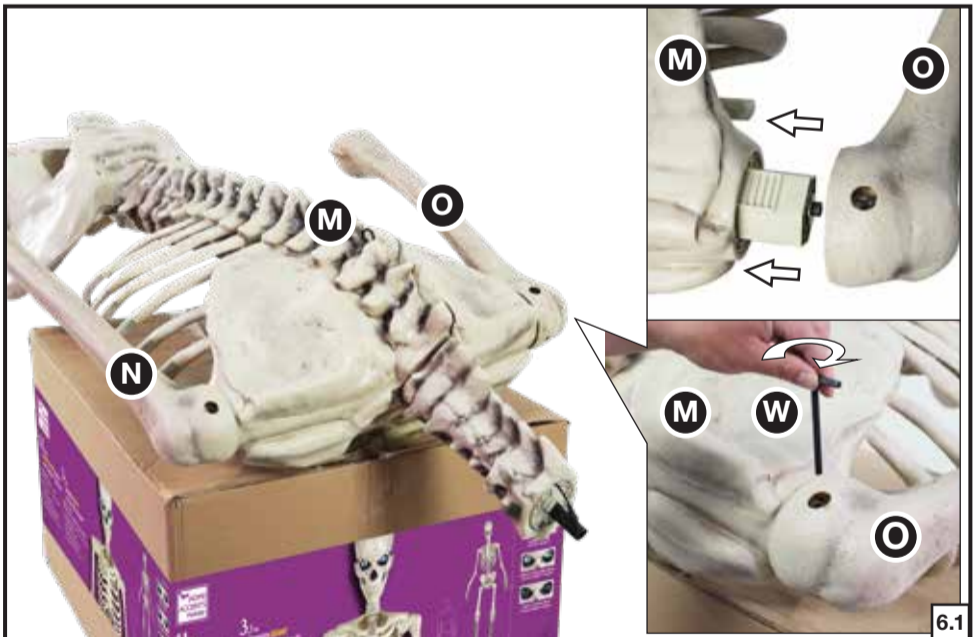



6.1

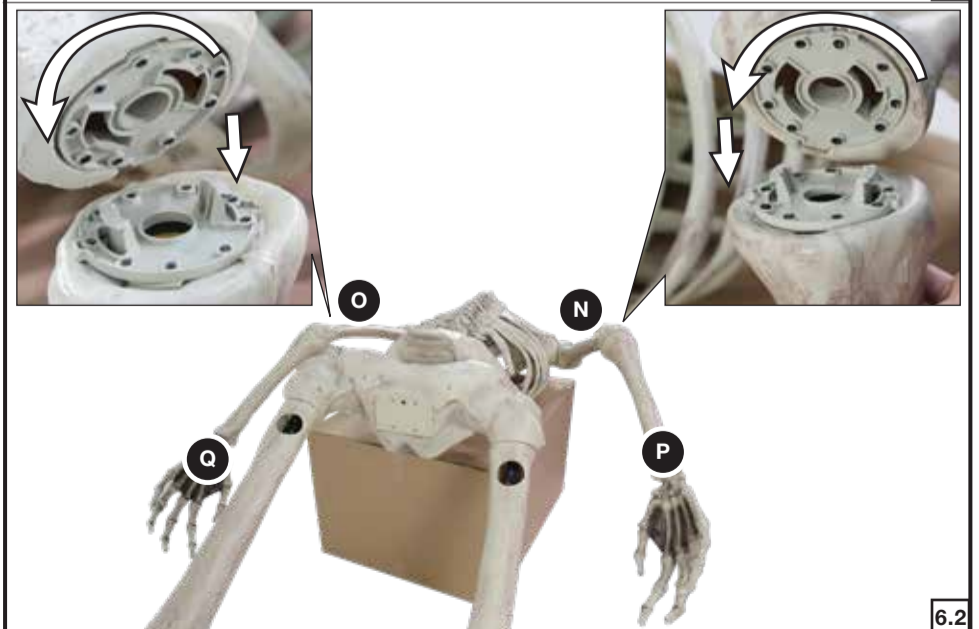

6.2

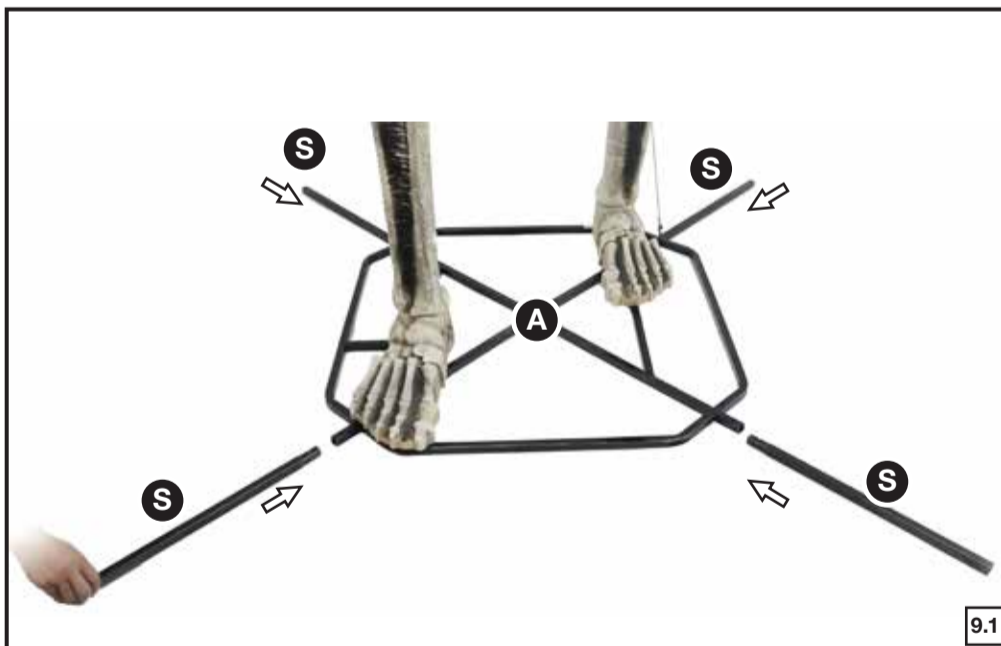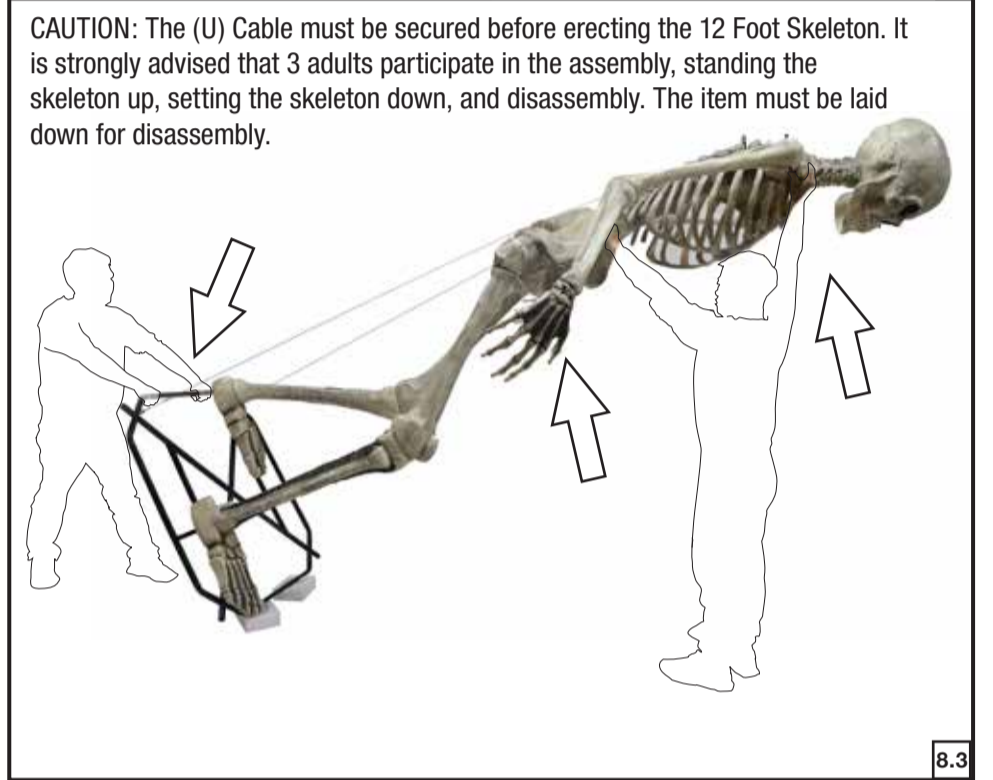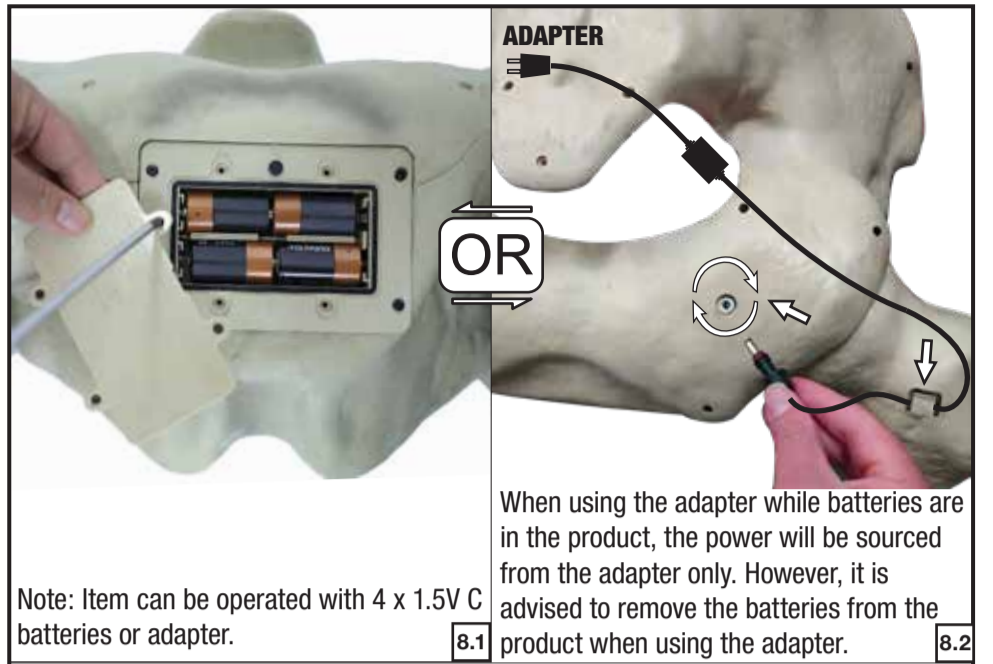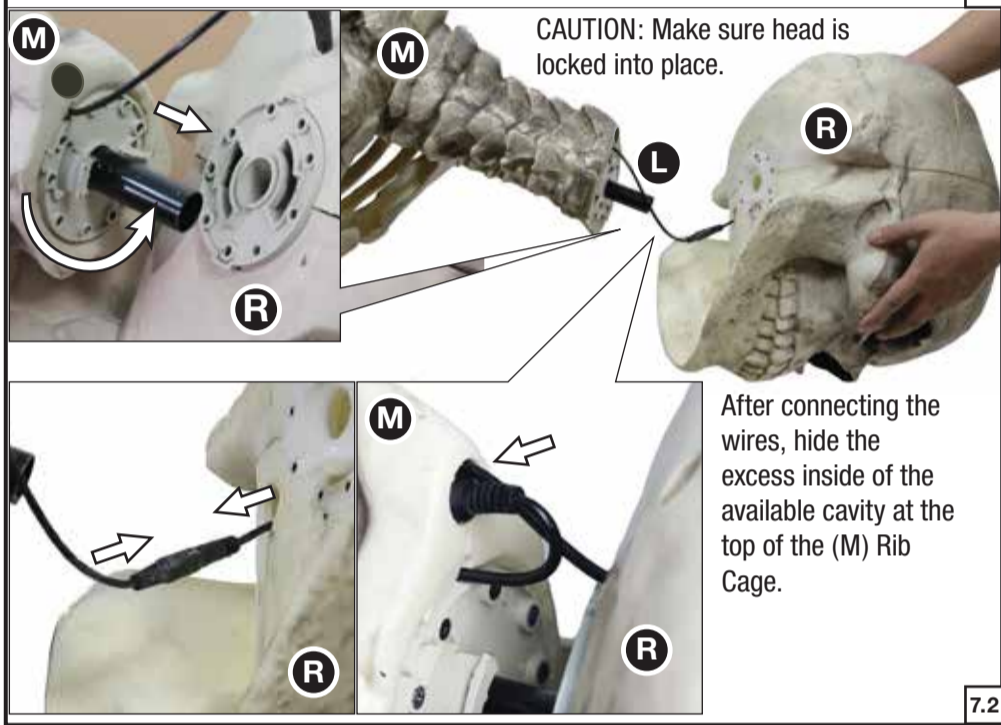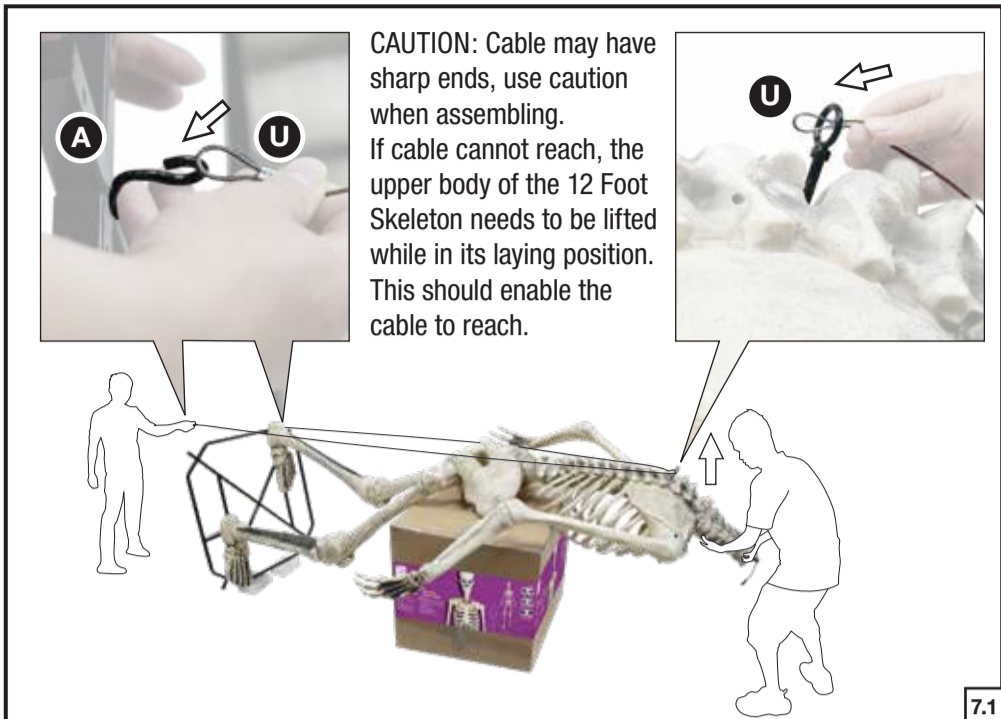

If your application needs sturdier stakes, check out SKU 1006262796 at The Home Depot (sold separately).

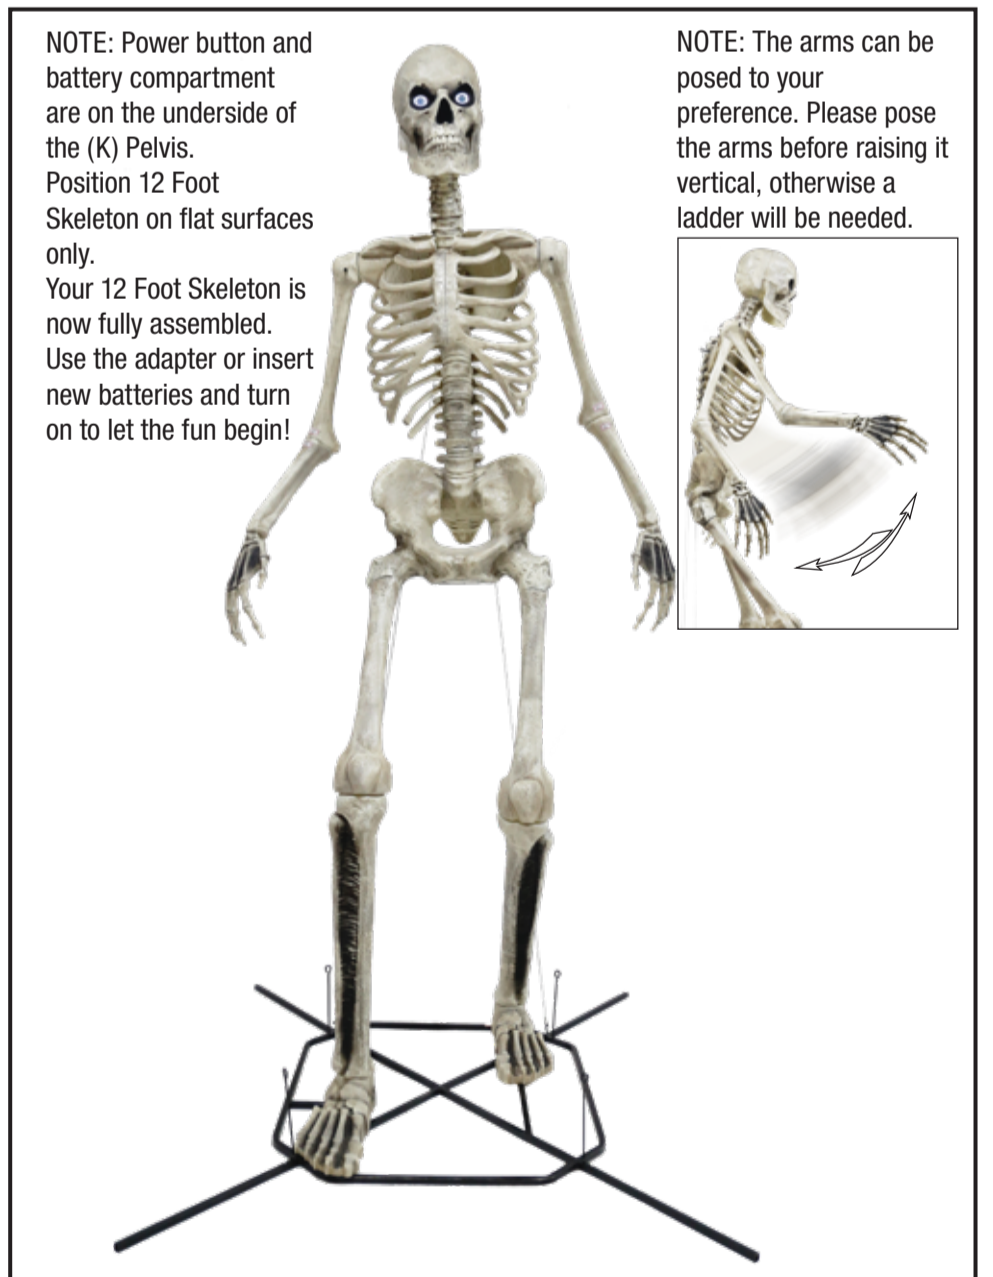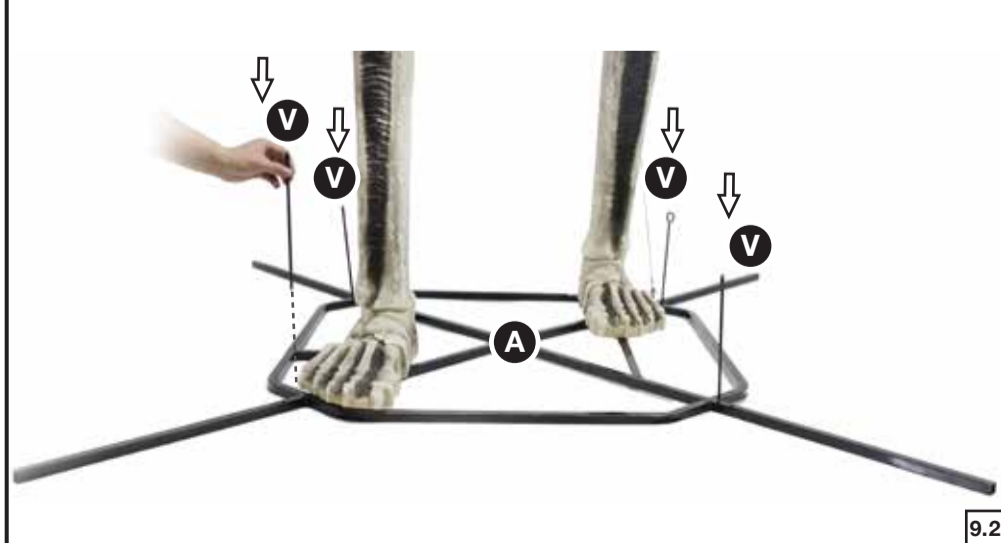

OPERATION INSTRUCTIONS:

The 12 Foot Skeleton can either be powered by an adapter or batteries. Plug the power adapter into a standard power outlet or insert 4 x 1.5V C batteries into the battery box. To turn on the 12 Foot Skeleton, press the button underneath the (K) Pelvis once. Press the button again to switch to the Timer setting. Press the same button a third time to turn the item Off.

The item is activated by pressing the button on the (K) Pelvis and has the following settings:

On	This setting will activate the LCD eyes of the item.
Timer	This setting will activate the LCD eyes of the item for 6 hours at a time. The item will then turn off and turn on once again after 18 hours.
Off	This setting will deactivate the LCD eyes of the item.

BATTERY REPLACEMENT INSTRUCTIONS

Requires 4 x 1.5V C batteries (Not Included)

* You will need a small Phillips head screwdriver (Not Included).

Locate the battery compartment on the product. Remove the battery compartment cover by using a small Phillips head screwdriver to unscrew the screw. After removing or installing the batteries, place the battery compartment cover into position, and secure the battery cover.

BATTERY WARNING:

Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel cadmium) batteries. Do not mix old and new batteries. Rechargeable batteries to be removed from the product before being charged. Only batteries of the same or equivalent type as recommended are to be used. Rechargeable batteries are only to be charged under adult supervision. Non-rechargeable batteries are not to be recharged. Batteries are to be inserted with the correct polarity. Remove batteries if consumed or if product is to be left unused for a long time. The supply terminals are not to be short-circuited. Dispose of batteries safely. **DO NOT DISPOSE OF BATTERIES IN FIRE, BATTERIES MAY EXPLODE OR LEAK**

WARNING:

- Lay product down before a storm or strong winds.
- Don't climb or pull on product.
- Don't add to or modify product.
- Assemble and place the product on level surfaces only.
- Don't push or tilt product.

WARNING


This item is not a toy and should be used for decoration only. This item contains small parts that can be a choking hazard. Keep all plastic and wire parts away from children.

1. Please use the adapter supplied by manufacturer.
2. Please assemble item according to instructions. Connect all wires according to matching color.
3. Children should be supervised by adults. Item should not be grabbed, as it becomes a tipping hazard. Keep flammables away from the adapter, as it heats up during operation.

Please view all instructions carefully before assembling. Save this instruction sheet for future reference.

CARE AND STORAGE INSTRUCTIONS

For best performance operate your item indoors. When not in use, store this product in its original packing. Keep away from heat and moisture.

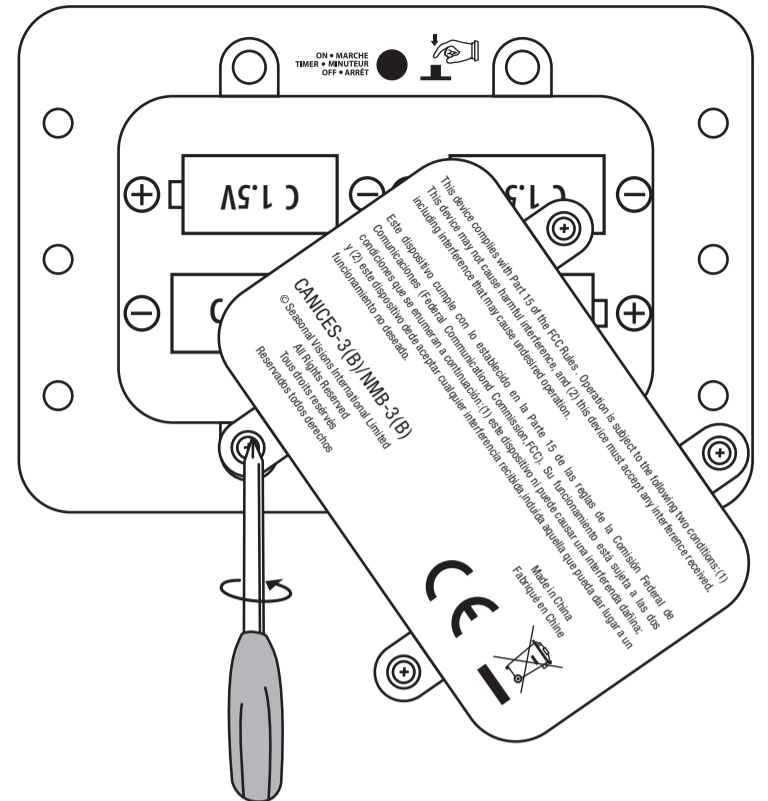

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna, Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or experienced radio/TV technician for help.

CAN ICES-3(B)/NMB-3(B)

