



TRUECOAT ONE™

TRUEAIRLESS®

QUICK GUIDE

WARNING



Read Owner's Manual (X021545EN) for complete instructions and warnings. This quick guide is not a substitute for reading and understanding all instruction manuals and warning labels supplied with the equipment. Manuals are available at graco.com



Follow pressure relief procedure and wear protective equipment including but not limited to protective eye wear.




SKIN INJECTION HAZARD: Keep clear of Spray Tip and leaks.



FIRE AND EXPLOSION HAZARD: Use only water-based materials. Follow fire and explosion warnings as listed in your manual.


FAILURE TO FOLLOW ALL WARNINGS CAN RESULT IN SERIOUS INJURY, AMPUTATION, OR DEATH.

KNOW YOUR SPRAYER

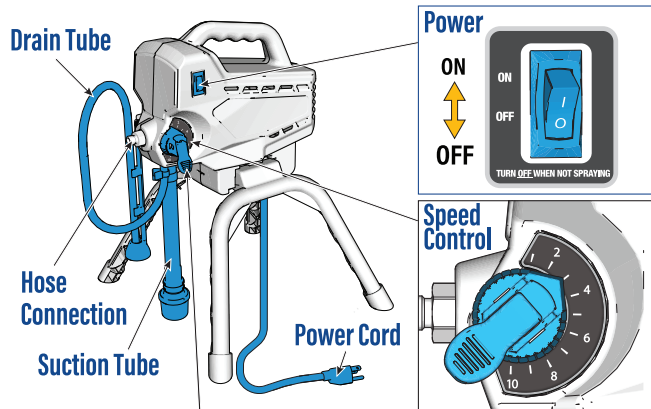


Prime/Spray Valve

Set Prime/Spray Valve up, to the PRIME position when priming the Sprayer or to relieve pressure. Set the Prime/Spray Valve down to the SPRAY position to spray fluids.

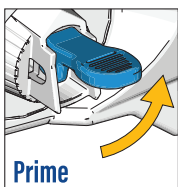


REVERSIBLE SPRAY TIPS

If you encounter a Spray Tip clog, Reverse the Spray Tip and spray into a waste area to remove the clog. Return the Spray Tip to SPRAY position to spray. See Owners Manual.

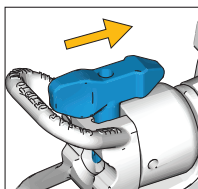

UNCLOG

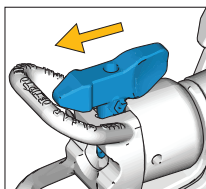

SPRAY

SCAN TO WATCH
CLEARING CLOGS VIDEO




SETUP


SCAN TO WATCH
SETUP VIDEO




- 1 To permanently install the Legs, press them into each side of the Sprayer until a 'click' sound is heard.

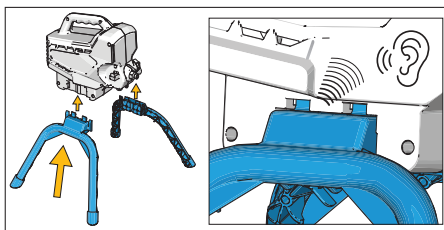


- 2 Attach the Suction Tube to the large black connection.

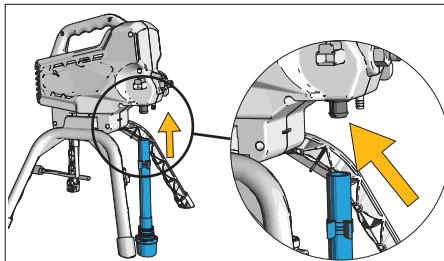


- 3 Attach the Drain Tube to the small silver connection. Move Hose Clamps up as shown.

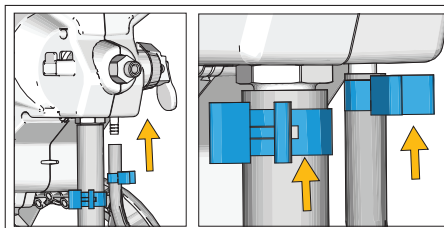

- 4 Attach the Drain Tube clip to the side of the Sprayer as shown.

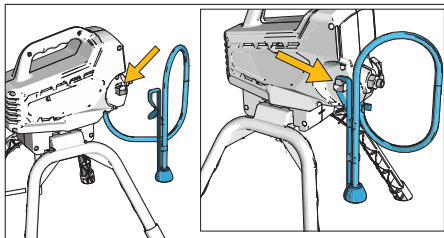

- 5 Connect Hose to Gun and Sprayer. Tighten both connections securely using Two Wrenches.

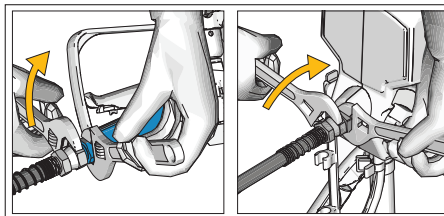


STARTUP


SCAN TO WATCH
STARTUP VIDEO




- 1 Ensure Power is OFF and plug Sprayer into a grounded outlet.

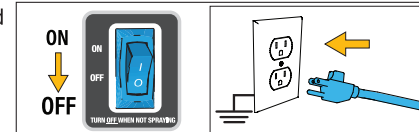

- 2 Place Suction Tube in paint bucket. Place the Drain Tube into a waste bucket. Set the Prime/Spray Valve to PRIME position. Turn Power ON.

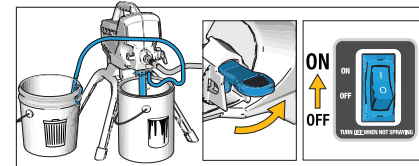


- 3 Allow paint to enter Suction Tube and exit the Drain Tube for 5 seconds. Turn Power OFF.

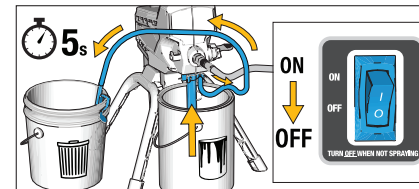


NOTICE
IF PAINT DOES NOT FLOW WITHIN 10 SECONDS, TURN SPRAYER OFF TO AVOID SPRAYER DAMAGE. SEE MANUAL.

- 4 Move the Drain Tube to the paint bucket and attach to side of Sprayer.

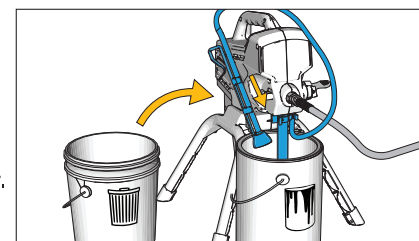


- 5 Rotate Spray Tip to UNCLOG position. Disengage Trigger Lock. Point gun into waste bucket. Pull and hold Trigger. Set Prime/Spray Valve to Spray position.

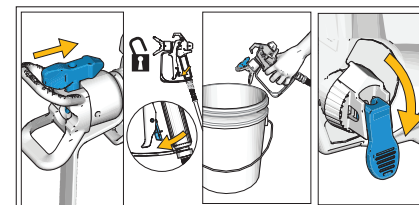

- 6 Turn Power ON. Spray paint for 5 seconds to flush storage fluid, then release Trigger.



- 7 Engage Trigger Lock. Turn Power OFF. Rotate Spray Tip to SPRAY Position.

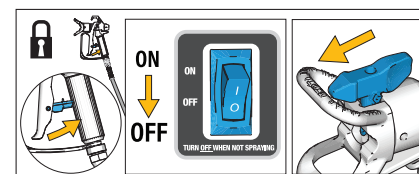


You are now ready to spray!

SPRAYING

SCAN TO WATCH
SPRAYING VIDEO



- 1 Set Speed Control to lowest setting. Disengage Trigger Lock. Turn Power ON.


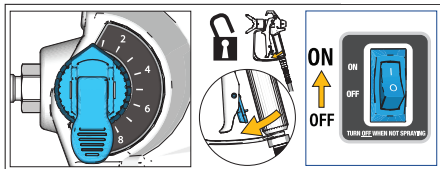


- 2 Pointing at a piece of scrap cardboard, pull the Trigger to test the spray pattern. Adjust the following to achieve desired spray pattern:


- Speed Control
- Distance from surface
- Hand Speed
- Spray Tip Orientation

NOTICE
TURN SPRAYER OFF WHEN NOT
SPRAYING TO AVOID SPRAYER
DAMAGE. SEE MANUAL.


Good Spray Pattern

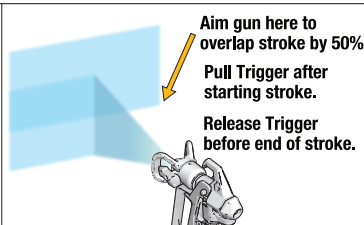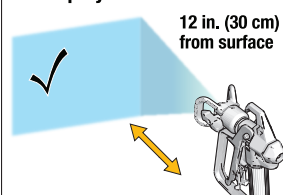

TAILS - Gaps at edges

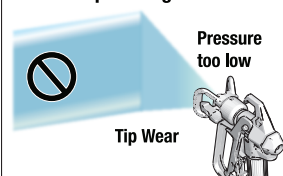


Spray Tip Orientation

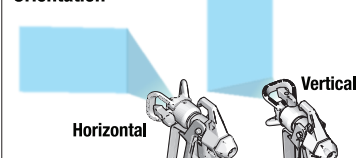


PAUSE IN SPRAYING

Paint will dry quickly and cause clogs in the Sprayer. Follow these steps whenever you pause spraying for 5 minutes to 2 hours.

- 1 Set Prime/Spray Valve to PRIME position to relieve pressure. Unplug power cord.

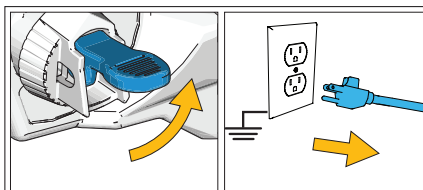

- 2 Engage Trigger Lock. Turn Spray Tip 90° to seal orifice from drying out.

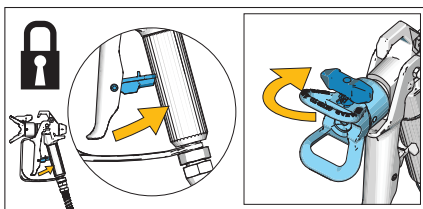


CLEANUP & STORAGE


SCAN TO WATCH
CLEANUP VIDEO




- 1 Turn Power OFF. Set Prime/Spray Valve to PRIME. Move Suction and Drain Tubes to empty waste bucket. Trigger gun into waste bucket.

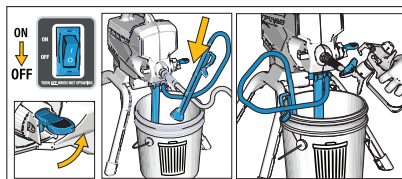


- 2 Engage Trigger Lock. Remove Spray Tip from Gun and set aside for cleaning.

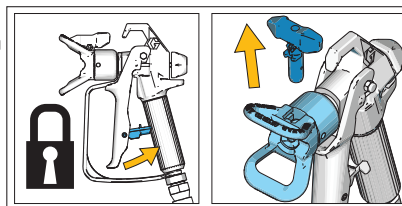


- 3 Screw Power Flush Valve (included with Sprayer) to a garden Hose. Rinse paint off Suction and Drain Tubes, Inlet screen, Gun and Spray Tip.

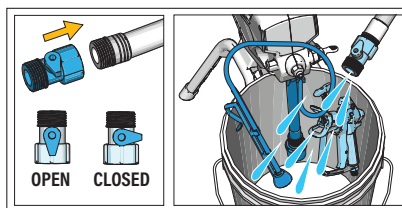


- 4 Unscrew Inlet Screen and set aside. Thread Power Flush Valve to Suction Tube. Open Power Flush Valve. Turn Power ON. Let water run through Drain Tube for 20 seconds. Turn Power OFF.

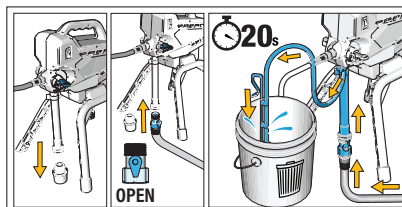


- 5 Disengage Trigger Lock. Aim into a waste bucket. Pull and hold trigger. Set Prime/Spray Valve to SPRAY.

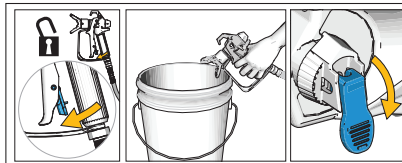


- 6 Turn Power ON until water is relatively clear. Turn Power OFF. Engage Trigger Lock.

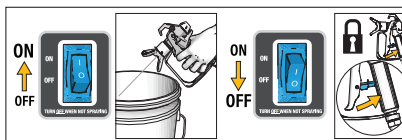


- 7 Install Spray Tip. Turn to Unclog position. Disengage Trigger Lock. Aim into a waste bucket. Pull and hold trigger.

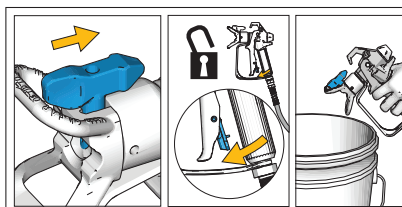


- 8 Turn Power ON to clean Spray Tip. Turn Power OFF. Engage Trigger Lock.

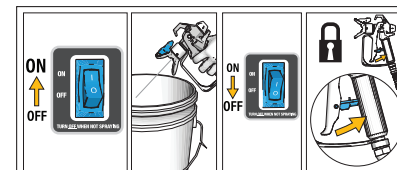

- 9 Use a wrench to remove Gun Filter. Clean Spray Gun parts with warm water and a toothbrush. Reassemble Gun.

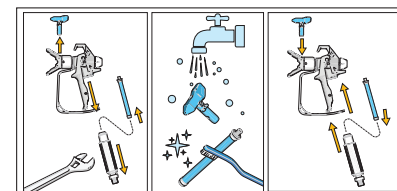

- 10 Turn water off. Close Power Flush Valve and unscrew from Suction Tube. Replace Inlet Screen. Set Speed Control to lowest setting. Unplug power cord.

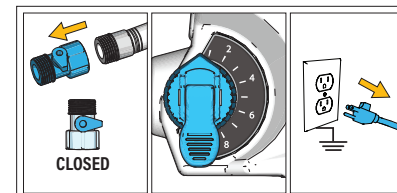

TROUBLESHOOTING

Problem? Need Help?

DO NOT RETURN TO STORE,
USED Sprayers CANNOT BE RETURNED

Our experts are here to
help answer any question.
Available 24 hours a day,
7 days a week.

1-888-541-9788

Scan for more options to contact us



GRACO

GRACO

3B0425 Revision B, April 2025, Original Instructions. This Quick Guide contains English. Source Manual: X021545EN, MM X021545EN. Copyright 2025